

SINGER
17W12

LIST OF PARTS



MACHINE No. 17 w 12

INDEX

| | PAGE |
|----------------------------------|------|
| ACCESSORIES | 19 |
| BOBBIN WINDER | 19 |
| EMBROIDERY HOOP ATTACHMENT | 20 |
| KNEE LIFTER | 20 |
| MACHINE No. 17w12 | 7 |
| NUMERICAL LIST OF PARTS | 23 |
| OBSOLETE PARTS | 21 |

THE SINGER MANUFACTURING COMPANY

Instructions for Ordering

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

200001 to 201500 are Screw Numbers.

201501 to 201800 are Nut Numbers.

201801 to 202000 are Roller Numbers.

202001 and upward are numbers of Machine Parts.

 
The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

FOR

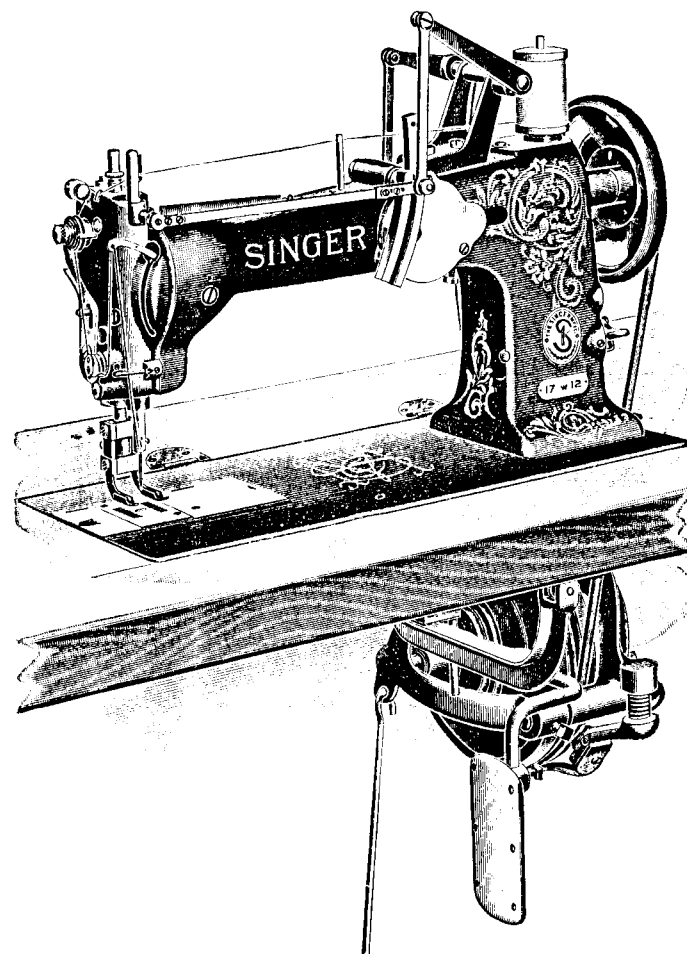

MACHINE No. 17w12

For Embroidery Work on Pillow Cases and other Light Material Such as Chiffon, Nuns Veiling, Etc.

| No. | Plate | Name |
|---------|-------|---|
| *208601 | — | Arm with 200439c, 202036 and 208605 |
| 208602 | 10672 | Arm Cap with 208604 and two 200137H |

| No. | Plate | Name |
|---------|-------|---|
| 200278H | 12311 | Arm Cap Screw |
| 202248 | 10673 | " " " Washer |
| 208608 | 10672 | " " " Spool Pin |
| 208604 | — | " " " " Base with 208603 |
| 200137H | 10644 | Arm Cap Spool Pin Base Screw .. |
| 200963E | 12311 | " Screw (3) |
| 202005 | 10673 | " " Washer (3) |
| 208658 | 10693 | " Shaft |
| 208605 | 10674 | " " Bushing (front) |
| 200439C | 12311 | " " " Position Screw .. |
| 204165 | 10672 | Arm Shaft Connection with four 200054E (2) |
| 200054E | 10673 | Arm Shaft Connection Screw |
| 204174 | 10693 | Balance Wheel, 5½ in. diam. (belt grove 2½ in. diam.), with 200328c and 200335c |
| 200062H | 12311 | Balance Wheel Adjusting Screw .. |
| 200328c | 12311 | " " Position Screw |
| 200335c | 12311 | " " Set Screw |
| *204872 | — | Bed with 202062, 204245, 204393 and two 200516E |
| 202258 | 12345 | Bed Hinge Connection (2) |
| 200570E | 12311 | " " " Screw (4) ... |
| 206105 | 10674 | " Slide (back) |
| 208606 | 10671 | " " (front) |
| 204178 | 10649 | Bobbin |
| 208462 | — | " Case with 204181 |
| 204181 | 10649 | " " Position Finger |
| 204182 | 10649 | " " Tension Spring |
| 200598c | 10649 | " " " " Adjust- ing Screw |
| 200592c | 10649 | Bobbin Case Tension Spring Screw |
| 208463 | 10649 | " " complete, Nos. 200592c, 200598c, 204182 and 208462 |
| 200459D | — | Cloth Guide Thumb Screw |
| 208656 | — | Face Plate with 200366H, 200368H, 202087, 202090, 204185, 204281 and two 200397H |
| 200053C | 12311 | Face Plate Screw (2) |
| 204185 | 10663 | " " Thread Guide |
| 200397H | 10675 | " " " " Set Screw |
| 208657 | 10693 | Face Plate complete, Nos. 200286F, 200577H, 201527H, 202088, 204059, 204280, 204933, 204934, 206639 and 208656 |
| 204875 | 10663 | Feed Bar with 204189 |
| 206594 | — | " " 204875 with 200214E, 201525E and 204877 |

| No. | Plate | Name |
|---------|-------|---|
| 200214E | 10673 | Feed Bar Hinge Screw |
| 201525E | 10673 | " " " " Nut |
| 204188 | 10663 | " " Spring |
| 204189 | 10663 | " " " Hook |
| 208607 | 10663 | " Dog |
| 200106E | 12311 | " " Screw (2) |
| 210779 | — | Feed Driving Cam |
| 204191 | 10662 | " " " 210779 with 200378c and 200437c |
| 206079 | 10674 | Feed Driving Cam Fork Lever with 204293 and 204928 |
| 204193 | 10674 | Feed Driving Cam Fork Lever Con- nection with 200668c and 201525E |
| 204194 | 10438 | Feed Driving Cam Fork Lever Con- nection Clamp with 200031F |
| 200031F | 12311 | Feed Driving Cam Fork Lever Con- nection Clamp Pinch Screw |
| 200668c | 10438 | Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud |
| 201525E | 10673 | Feed Driving Cam Fork Lever Con- nection Clamp Screw Stud .. |
| 200002E | 10644 | Feed Driving Cam Fork Lever Con- nection Hinge Screw |
| 201522E | 10673 | Feed Driving Cam Fork Lever Con- nection Hinge Screw Nut |
| *204928 | — | Feed Driving Cam Fork Lever Shaft |
| 204197 | 10662 | Feed Driving Cam Fork Lever Shaft Collar with 200113F |
| 200113F | 10662 | Feed Driving Cam Fork Lever Shaft Collar Set Screw |
| 204293 | 10662 | Feed Driving Cam Fork Lever Shaft Position Pin |
| 204968 | 10662 | Feed Driving Cam Fork Lever Shaft Sleeve (split) |
| 200043C | 12311 | Feed Driving Cam Fork Lever Shaft Sleeve Set Screw |
| 201524E | 10673 | Feed Driving Cam Fork Lever Shaft Sleeve Set Screw Nut |
| 206080 | — | Feed Driving Cam Fork Lever com- plete, Nos. 204194 and 206079 ... |
| 200437C | 12311 | Feed Driving Cam Position Screw |
| 200378c | 12311 | " " " Set Screw |
| 204294 | 10693 | " " Rock Shaft |
| 206555 | — | " " " " 204294 with 200002E, 201522E and 204193 |
| 202305 | 10662 | Feed Driving Rock Shaft Center (2) |
| 200043C | 12311 | Feed Driving Rock Shaft Center Set Screw (2) |

| No. | Plate | Name |
|---------|-------|---|
| 204877 | 10663 | Feed Driving Rock Shaft Crank with 204189 (on right side) and two 200383c |
| 200383c | 12311 | Feed Driving Rock Shaft Crank Set Screw |
| 204201 | 10662 | Feed Lifting Cam Crank with 200335c, 200431c, 200669c and 201530e |
| 200431c | 10662 | Feed Lifting Cam Crank Position Screw |
| 200335c | 12311 | Feed Lifting Cam Crank Set Screw |
| 204202 | 10662 | Feed Lifting Cam Fork with 200027e |
| 200027e | 10673 | Feed Lifting Cam Fork Pinch Screw |
| 204878 | 10672 | Feed Lifting Rock Shaft with 204264 |
| 204503 | — | Feed Lifting Rock Shaft 204878 with 201343e and 204204 |
| 202305 | 10662 | Feed Lifting Rock Shaft Center (2) |
| 200043c | 12311 | Feed Lifting Rock Shaft Center Set Screw (2) |
| 204204 | — | Feed Lifting Rock Shaft Slide Block |
| 201343d | 10673 | Feed Lifting Rock Shaft Slide Block Hinge Screw |
| 204264 | 10673 | Feed Lifting Rock Shaft Slide Block Position Pin |
| 204206 | 10676 | Feed Regulating Handle |
| 204207 | — | " " " 204206 with 200098f, 202622, 204208 to 204210, 204213 and 204925 |
| 204208 | 10438 | Feed Regulating Handle Adjustable Stop |
| 200098f | 10438 | Feed Regulating Handle Adjustable Stop Screw |
| 204925 | 10675 | Feed Regulating Handle Adjustable Stop Screw Washer |
| 204209 | 10438 | Feed Regulating Handle Position Pin |
| 204210 | 10438 | Feed Regulating Handle Shaft |
| 204211 | 10438 | " " " " Crank with 200098f |
| 204212 | 10438 | Feed Regulating Handle Shaft Crank Link |
| 200271e | 12311 | Feed Regulating Handle Shaft Crank Link Hinge Screw (lower) |

| No. | Plate | Name |
|---------|-------|--|
| 200291e | 10438 | Feed Regulating Handle Shaft Crank Link Hinge Screw (upper) |
| 200098f | 10438 | Feed Regulating Handle Shaft Crank Set Screw |
| 204213 | 10438 | Feed Regulating Handle Shaft Sleeve (split) |
| 200362c | 12311 | Feed Regulating Handle Shaft Sleeve Set Screw |
| 202622 | 10438 | Feed Regulating Handle Shaft Sleeve Washer |
| 202036 | 10438 | Feed Regulating Handle Stop Pin |
| 204214 | — | Feed Regulating Handle complete, Nos. 200291e, 204207, 204211 and 204212 |
| 208608 | 10649 | Hook (sewing) with 204217 |
| 204217 | 10649 | " Bobbin Case Stud |
| 204880 | 10665 | " Bracket with 200379c, two 200380c and three 204234c |
| 204881 | — | Hook Bracket 204880 with 204226c |
| 208610 | — | " " 204881 with 204224, 204225, 204229, 204539, two each 204223 and 204231 |
| 200379c | 10665 | Hook Bracket Adjusting Screw (lower) |
| 200380c | 12311 | Hook Bracket Adjusting Screw (upper) |
| 204539 | 10665 | Hook Bracket Bobbin Case Stop (hinged) |
| 204223 | 10665 | Hook Bracket Bobbin Case Stop Hinge Pin |
| 204224 | 10665 | Hook Bracket Bobbin Case Stop Latch |
| 204223 | 10665 | Hook Bracket Bobbin Case Stop Latch Hinge Pin |
| 204225 | 10665 | Hook Bracket Bobbin Case Stop Latch Spring |
| 200085c | 10649 | Hook Bracket Screw (lower or upper) (2) |
| 208611 | 10666 | Hook Bracket complete, Nos. 208608 and 208610 |
| 208612 | 10649 | Hook Driver with 204242 and 204243 |
| 204885 | 10669 | " " Bevel Gear, 25 teeth, with two 200348c |
| 200348c | 10665 | Hook Driver Bevel Gear Set Screw |
| 208246 | — | " " Crank |
| 204240 | 10649 | " " " 208246 with 200378c, 200662c, 201530e and two 200348c |

| No. | Plate | Name |
|---------|-------|---|
| 204241 | 10662 | Hook Driver Crank Link |
| 200669c | 10665 | " " " " Stud ... |
| 201530E | 10665 | " " " " " Nut |
| 200348c | 10665 | " " " Set Screw (long) |
| 200378c | 12311 | Hook Driver Crank Set Screw (short) |
| 200662c | 10665 | Hook Driver Crank Screw Stud .. |
| 201530E | 10665 | " " " " " Nut |
| 204243 | 10649 | " " Pin |
| 204242 | — | " " Washer |
| 204887 | 10669 | Hook Driving Bevel Gear, 24 teeth (intermediate) |
| 204888 | — | Hook Driving Bevel Gear (inter- mediate) Bracket |
| 206078 | 10669 | Hook Driving Bevel Gear (inter- mediate) Bracket 204888 with 200772c, 201514E and 204887 |
| 200041E | 10669 | Hook Driving Bevel Gear (inter- mediate) Bracket Screw (2) |
| 200772c | 10669 | Hook Driving Bevel Gear (inter- mediate) Bracket Screw Stud .. |
| 201514E | 10669 | Hook Driving Bevel Gear (inter- mediate) Bracket Screw Stud Nut |
| 204890 | 10674 | Hook Driving Bevel Gear (inter- mediate) Oil Guard |
| 200113F | 10662 | Hook Driving Bevel Gear (inter- mediate) Oil Guard Screw (2) .. |
| 204886 | 10669 | Hook Driving Bevel Gear Shaft, 25 teeth |
| 204393 | 10670 | Hook Driving Bevel Gear Shaft Bushing |
| 204891 | 10693 | Hook Driving Shaft |
| 204245 | 10674 | " " " Bearing |
| 202126 | 10670 | " " " " Position Pin |
| 200516E | 12311 | Hook Driving Shaft Bearing Screw |
| 204246 | 10662 | " " " Collar with two 200383c |
| 200383c | 12311 | Hook Driving Shaft Collar Set Screw |
| 204226 | 10666 | Hook Race, .156 in. thick, 1.906 in. diameter |
| 204229 | 10665 | Hook Race Cap (iron) |
| 204230 | 10665 | " " " Spring |
| 204231 | 10665 | " " " " 204230 with 200792E |
| 200792E | 10665 | Hook Race Cap Spring Screw |
| 204234c | 10665 | " " Position Pin |

| No. | Plate | Name |
|---------|-------|---|
| 208613 | — | Needle Bar (hollow) |
| 208615 | 10672 | " " 208613 with 200125F, 200175D and 208640 |
| *206360 | — | Needle Bar Connecting Ball Stud with 200086c |
| 200086c | 10649 | Needle Bar Connecting Ball Stud Pinch Screw |
| 208641 | — | Needle Bar Connecting Link with 206353 and two 200079c |
| 206354 | 10664 | Needle Bar Connecting Link 208641 with 206360 |
| 200744c | 10671 | Needle Bar Connecting Link Ball Screw Stud |
| *206352 | — | Needle Bar Connecting Link Ball Screw Stud Cap |
| 201013c | 10644 | Needle Bar Connecting Link Ball Screw Stud Cap Screw |
| 201522E | 10673 | Needle Bar Connecting Link Ball Screw Stud Nut |
| *206353 | — | Needle Bar Connecting Link Cap " " " " " " |
| 200079c | 12311 | Screw |
| 208616 | 10674 | Needle Bar Frame |
| 200410c | 10644 | " " " Center Screw (lower or upper) (2) |
| 201517E | 10669 | Needle Bar Frame Center Screw Nut (2) |
| 204916 | 10664 | Needle Bar Frame Driving Cam with two 200347c |
| 208617 | 10672 | Needle Bar Frame Driving Cam Cover |
| 200571B | 10644 | Needle Bar Frame Driving Cam Cover Screw (3) |
| 204918 | 10664 | Needle Bar Frame Driving Cam Follower |
| 200347c | — | Needle Bar Frame Driving Cam Set Screw |
| 208618 | — | Needle Bar Frame Pitman with 200741c, 201531E, 204921 and two 200110B |
| 200741c | 10671 | Needle Bar Frame Pitman Ball Screw |
| *204921 | — | Needle Bar Frame Pitman Ball Screw Cap |
| 200110B | 10649 | Needle Bar Frame Pitman Ball Screw Cap Screw |
| 201531E | 10677 | Needle Bar Frame Pitman Ball Screw Nut |
| 204922 | 10671 | Needle Bar Frame Pitman Con- nection (adjustable) |

| No. | Plate | Name |
|---------|-------|--|
| 204841 | — | Needle Bar Frame Pitman Connection 204922 with 204923 |
| 208619 | 10672 | Needle Bar Frame Pitman Connection 204841 with 204924, 208618 and two 200110b |
| 204923 | 10671 | Needle Bar Frame Pitman Connection (adjustable) Bearing . . |
| 208672 | — | Needle Bar Frame Pitman Connection Bearing Stop Pin |
| 204924 | 10670 | Needle Bar Frame Pitman Connection Clamp Washer |
| 200110b | 10649 | Needle Bar Frame Pitman Connection Clamp Washer Screw . . |
| 208662 | 10664 | Needle Bar Frame Regulator with 206775 and 204928 |
| *204928 | — | Needle Bar Frame Regulator Shaft |
| 202574 | 10662 | “ “ “ “ “ |
| | | Collar with 200380c |
| 200380c | 12319 | Needle Bar Frame Regulator Shaft Collar Set Screw |
| 206775 | 10663 | Needle Bar Frame Regulator Shaft Pin |
| 208673 | — | Needle Bar Frame Regulator 208662 with 208670 and 208671 |
| 208670 | 10677 | Needle Bar Frame Regulator Slide with 200174e, 201642c, 208627 and 208672 |
| 208671 | 10677 | Needle Bar Frame Regulator Slide Index Finger |
| 208625 | 10671 | Needle Bar Frame Regulator Slide Link |
| 200273d | 10644 | Needle Bar Frame Regulator Slide Link Hinge Screw |
| 208626 | 10676 | Needle Bar Frame Regulator Slide Link Lever with 200383c and 200441c |
| 200441c | 10673 | Needle Bar Frame Regulator Slide Link Lever Position Screw |
| 200383c | 12311 | Needle Bar Frame Regulator Slide Link Lever Set Screw |
| 208628 | 10674 | Needle Bar Frame Regulator Slide Link Lever Shaft |
| 208629 | 10676 | Needle Bar Frame Regulator Slide Link Lever Shaft Bracket |
| 200019e | 10644 | Needle Bar Frame Regulator Slide Link Lever Shaft Bracket Set Screw (2) |
| 208630 | 10676 | Needle Bar Frame Regulator Slide Link Lever Shaft Driving Lever with 200383c and 200441c |

| No. | Plate | Name |
|---------|-------|--|
| 200441c | 10673 | Needle Bar Frame Regulator Slide Link Lever Shaft Driving Lever Position Screw |
| 200383c | 12311 | Needle Bar Frame Regulator Slide Link Lever Shaft Driving Lever Set Screw |
| 206523 | 10670 | Needle Bar Frame Regulator Slide Link Stop Collar with 200389c . . |
| 200389c | 10644 | Needle Bar Frame Regulator Slide Link Stop Collar Set Screw |
| 208627 | 10664 | Needle Bar Frame Regulator Slide Link Stud |
| 208631 | 10672 | Needle Bar Frame Regulator Slide Operating Rod |
| 201520u | 10673 | Needle Bar Frame Regulator Slide Operating Rod Adjusting Nut (lower or upper) |
| 215353 | 10677 | Needle Bar Frame Regulator Slide Operating Rod Bracket with 200527c and 201531e |
| 208633 | 10693 | Needle Bar Frame Regulator Slide Operating Rod Bracket Connection with 208635 |
| 200224f | 10644 | Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Hinge Screw |
| 208634 | 10671 | Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Link |
| 200273b | 10644 | Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Link Hinge Screw |
| 208635 | 10669 | Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Link Stud |
| 202302 | — | Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Link Stud Cotter Pin |
| 200536c | 10644 | Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Stop Screw |
| 208637 | 10677 | Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Stop Screw Bracket with two each 200536c and 201521c . . |
| 200053f | 12311 | Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Stop Screw Bracket Screw |

| No. | Plate | Name |
|---------|-------|---|
| 201521c | 10673 | Needle Bar Frame Regulator Slide Operating Rod Bracket Connec- tion Stop Screw Nut |
| 200239H | 10644 | Needle Bar Frame Regulator Slide Operating Rod Bracket Hinge Screw |
| 201531E | 10677 | Needle Bar Frame Regulator Slide Operating Rod Bracket Hinge Screw Nut |
| 200527c | 10677 | Needle Bar Frame Regulator Slide Operating Rod Set Screw |
| 201531E | 10677 | Needle Bar Frame Regulator Slide Operating Rod Set Screw Nut.. |
| 208638 | 10670 | Needle Bar Frame Regulator Slide Operating Rod Spring |
| 208639 | 10664 | Needle Bar Frame Regulator Slide Operating Rod Spring Holding Eyelet (lower or upper) |
| 203060 | 10663 | Needle Bar Frame Regulator Slide Operating Rod Spring Holding Eyelet Hook |
| 201642E | 10677 | Needle Bar Frame Regulator Slide Thumb Nut |
| 200174E | 10677 | Needle Bar Frame Regulator Slide Thumb Nut Stop Screw |
| 204696 | 10670 | Needle Bar Frame Spring |
| 203060 | 10663 | " " " " Hook (2) |
| 208640 | 10649 | " " Thread Guide |
| 200175D | 10649 | " " " " Set Screw |
| 200125F | 10649 | " Set Screw |
| 213791 | 10672 | Presser Bar (hollow) |
| 204252 | 10670 | " " Lifter |
| 200550C | 12311 | " " " Hinge Screw .. |
| 208609 | 10670 | " " Lifting Bracket |
| 204931 | — | " " " " 208609 with 200650F and 201525E |
| 204254 | 10670 | Presser Bar Lifting Bracket Posi- tion Guide |
| 200362C | 12311 | Presser Bar Lifting Bracket Posi- tion Guide Set Screw |
| 204327 | — | Presser Bar Packing Washer (felt) |
| 200504E | 10673 | Presser Bar Screw Bushing (lower) |
| 204255 | 10670 | " " Spring |
| 200491B | 10644 | " " Thumb Screw (pres- sure regulating) |
| 208642 | 10692 | Presser Foot Bracket with 208647 |
| 200128D | 10692 | " " " Screw |
| 208643 | — | " " Shank (left) |
| 208663 | 10692 | " " " 208643 with 204264 and 208648 |

| No. | Plate | Name |
|---------|-------|---|
| 208644 | — | Presser Foot Shank (right) |
| 208664 | 10692 | " " " 208644 with 204264 and 208648 |
| 208645 | 10692 | Presser Foot Shank Guide Plate |
| 200082D | 10881 | " " " " " Screw |
| 208646 | 10692 | Presser Foot Shank Hinge Connec- tion |
| 208647 | 10692 | Presser Foot Shank Hinge Connec- tion Stop Pin |
| 200123D | 10692 | Presser Foot Shank Hinge Connec- tion Stop Screw |
| 208648 | 10692 | Presser Foot Shank Plate (left or right) |
| 204264 | 10673 | Presser Foot Shank Plate Hinge Pin (left or right) |
| 208649 | 10692 | Presser Foot (compensating) com- plete, Nos. 200123D, 208642, 208646, 208663, 208664, two 200128D, four each 200082D and 208645 |
| 208674 | 10674 | Take-up Cam with 200335c, 200383c, 200430c, 200744c, 201522E, 206352 and two 201013c |
| 200430c | 12311 | Take-up Cam Position Screw ... |
| 200383c | 12311 | " " " " Check Screw |
| 200335c | 12311 | Take-up Cam Set Screw |
| 208675 | 10674 | Take-up Cam complete, Nos. 206354 and 208674 |
| 204262 | 10673 | Take-up Lever |
| 206556 | — | " " 204262 with 204263.. |
| 204263 | 10673 | " " Bearing with 204264 |
| 204264 | 10673 | " " " Position Pin |
| 200042F | 12311 | " " " Screw |
| 201816 | 10673 | " " Roller |
| 204266 | 10673 | Take-up Lever complete, Nos. 200042F, 201816 and 206556 |
| 202402 | 10675 | Tension Disc |
| 202090 | 10675 | " " Position Pin |
| 204933 | 10664 | " Release Lever |
| 200286F | 10671 | " " " Hinge Screw.. |
| 201527H | 10669 | " " " " " Nut |
| 204934 | 10671 | " " " " " Washer |
| 200650F | 10671 | Tension Release Lever Switch Screw Stud |
| 201525E | 10673 | Tension Release Lever Switch Screw Stud Nut |

| No. | Plate | Name |
|---------|-------|--|
| 202407 | 10881 | Tension Spring |
| 200632B | 10675 | " Stud |
| 200397H | 10675 | " " Set Screw |
| 201572B | 10881 | " Thumb Nut |
| 204271 | 10675 | " Washer |
| 206639 | 10675 | Tension complete, Nos. 200632B, 201572B, 202407, 204271 and two 202402 |
| 204274 | 10675 | Thread Controller Plate |
| 200577H | 12311 | Thread Controller Plate Screw |
| 202098 | 10675 | " " Roller |
| 204275 | 10675 | " " " Guard |
| 202084 | 10675 | " " " " Washer |
| 200300C | 10675 | " " " Screw |
| 204276 | 10675 | " " Spring |
| 204333 | 10675 | Thread Controller Spring Guard.. |
| 200581H | 10675 | " " " " Screw |
| 202087 | 10675 | Thread Controller Spring Stop .. |
| 202088 | 10675 | " " " Stud with 204925 |
| 200366H | 10675 | Thread Controller Spring Stud Set Screw |
| 204925 | 10675 | Thread Controller Spring Stud Washer |
| 205987 | 10675 | Thread Controller complete, Nos. 200300C, 200581H, 202084, 202098, 204274, 204275 and 204333 |
| 204280 | 10675 | Thread Controller and Spring com- plete, Nos. 204276 and 205987 .. |
| 202412 | 10670 | Thread Guide |
| 204459 | 10663 | " " |
| 204281 | 10675 | " Retainer Guide Wire |
| 202091 | 10675 | " " Sleeve |
| 202092 | 10675 | " " Spring |
| 204058 | 10675 | " " Stud |
| 200368H | 10675 | " " " Set Screw |
| 204059 | 10675 | Thread Retainer complete, Nos. 202091, 202092 and 204058 |
| 208653 | 10663 | Throat Plate, 46 needle hole, for needle sizes 16 and 18 |
| 202062 | 10663 | Throat Plate Position Pin |
| 200577H | 12311 | " " Screw |

ACCESSORIES

| No. | Plate | Name |
|----------|-------|--|
| 204178 | 10649 | Bobbin (5) |
| *225482 | --- | " Case Screw Driver Blade .. |
| *225483 | --- | " " " " Handle .. |
| 225497 | 12345 | Bobbin Case Screw Driver com- plete, Nos. 225482 and 225483 .. |
| 231337 | 10677 | Cloth Guide |
| 130 x 11 | --- | Needle, six, No. 18 |
| 228166 | --- | Drip Pan with four wood screws $\frac{1}{2}$ in., No. 5 |
| 41400 | 12345 | Machine Rest Pin (wood) |
| 36578 | 12345 | Oiler with 36579 |
| 36579 | 12345 | " Spout, 3 $\frac{1}{2}$ in. long, with 120117 |
| 120117 | --- | " " Washer |
| *225484 | --- | Screw Driver Blade |
| *225485 | --- | " " Handle |
| 225498 | 12345 | Screw Driver complete (7 $\frac{1}{4}$ in. long), Nos. 225484 and 225485 .. |
| 225554 | 12345 | Wrench (steel) |

BOBBIN WINDER

Swing Automatic Right Hand

| | | |
|---------|-------|-----------------------------------|
| *225451 | --- | Bobbin Holder |
| 225453 | 10882 | Frame with 202277 and 225438 |
| 225454 | 10882 | " Hinge Pin |
| 202277 | --- | " Oil Packing (wick) |
| 225438 | 10882 | " " Well Cap |
| 225455 | 10882 | " Spring |
| 225456 | 10882 | " " Plunger |
| 202473 | 10883 | Pulley with 200380C |
| 200380C | 12319 | " Set Screw |
| *225443 | --- | Spindle |
| 225452 | 10882 | " 225443 with 225451 |
| 225444 | 10882 | Stop Latch |
| 200056E | 10882 | " " Screw |
| 225458 | 10882 | " " Thumb Lever |
| 225459 | 10882 | " " " " Hinge Stud |
| 225460 | 10882 | " " " " Joint Stud |
| 202478 | 10882 | " " Trip Lever |
| 200299H | 10882 | " " " " Hinge Screw |
| 225461 | 10881 | Tension Bracket with 201499B |
| 200082B | 10881 | " " Screw |

| No. | Plate | Name |
|---------|-------|---|
| 202104 | 10881 | Tension Bracket Screw Washer .. |
| 2102 | 10881 | " Disc |
| 202407 | 10881 | " Spring |
| 201499R | 10881 | " Stud |
| 201572B | 10881 | " " Thumb Nut |
| 225462 | 10881 | Bobbin Winder Tension Bracket complete, Nos. 201572B, 202407, 225461 and two 2102 |
| 225463 | 10883 | Bobbin Winder and Tension Bracket Base |
| 225436 | 10883 | Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200299H, 202104, 202473, 202478, 225444, 225452 to 225456, 225458 to 225460, 225462, 225463 and two round head wood screws 1 in., No. 13 .. |

EMBROIDERY HOOP ATTACHMENT

87561 ——— Embroidery Hoop

KNEE LIFTER


| | | |
|---------|-------|---|
| 202450 | — | Knee Lifter Rock Lever with 200522c and 200529c |
| 202185 | — | Knee Lifter Rock Lever 202450 with two each 202451 and 202452 |
| 208654 | — | Knee Lifter Rock Lever 202185 with 202203 and 208655 |
| 202453 | 10693 | Knee Lifter Rock Lever Knee Plate with 200526c |
| 202203 | — | Knee Lifter Rock Lever Knee Plate 202453 with 202454 |
| 202454 | 10693 | Knee Lifter Rock Lever Knee Plate Arm (long) |
| 200522c | 12319 | Knee Lifter Rock Lever Knee Plate Arm Set Screw |
| 200526c | 12319 | Knee Lifter Rock Lever Knee Plate Set Screw |
| 202451 | 10693 | Knee Lifter Rock Lever Lug with two wood screws $\frac{3}{4}$ in., No. 13H.. |
| 202452 | 12319 | Knee Lifter Rock Lever Lug Hinge Pin |
| 208655 | 10693 | Knee Lifter Rock Lever Rod with 202456 |
| *202456 | — | Knee Lifter Rock Lever Rod Cap or Oil Guard |
| 200529c | 12319 | Knee Lifter Rock Lever Rod Set Screw |

OBSOLETE PARTS


| No. | Plate | Name |
|--------|-------|--|
| 202470 | 12320 | Bobbin Winder Base |
| 202471 | 12320 | " " Frame |
| 202472 | 12319 | " " " Spring |
| 202474 | 12320 | " " Spindle |
| 227522 | 12319 | " " Stop Latch |
| 202477 | 12319 | " " " " Thumb Lever |
| 227523 | 12320 | Bobbin Winder complete, Nos. 200056E, 200161D, 200221D, 201537H, 202470 to 202474, 202477, 202478, 227522, three 200299H and two round head wood screws 1 in., No. 13 |
| 202480 | 12320 | Bobbin Winder Spool Holder Base with 200355H and 202484 |
| 202481 | 12320 | Bobbin Winder Spool Holder Base Spool Pin |
| 202482 | 12319 | Bobbin Winder Spool Holder Ten- sion Disc (lower or upper) |
| 202483 | 12319 | Bobbin Winder Spool Holder Ten- sion Disc Spring (brass) |
| 202484 | 12319 | Bobbin Winder Spool Holder Ten- sion Disc Thread Guide |
| 202485 | 12320 | Bobbin Winder Spool Holder com- plete, Nos. 200011E, 202480, 202481, 202483, two 202482 and one wood screw 1 in., No. 13 .. |
| 208624 | 10664 | Needle Bar Frame Regulator Slide with 208620 and 208627 |

PLATE 10438-FULL SIZE


 
200031 200668 200271 200098

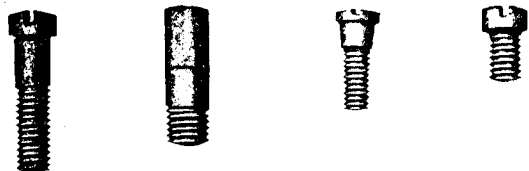

200291 202036 200078 204209

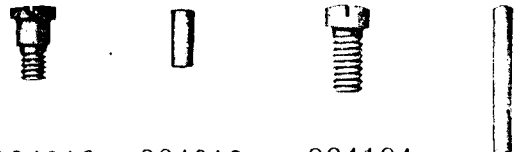 

204210 204212 204194

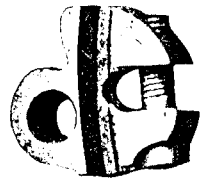 
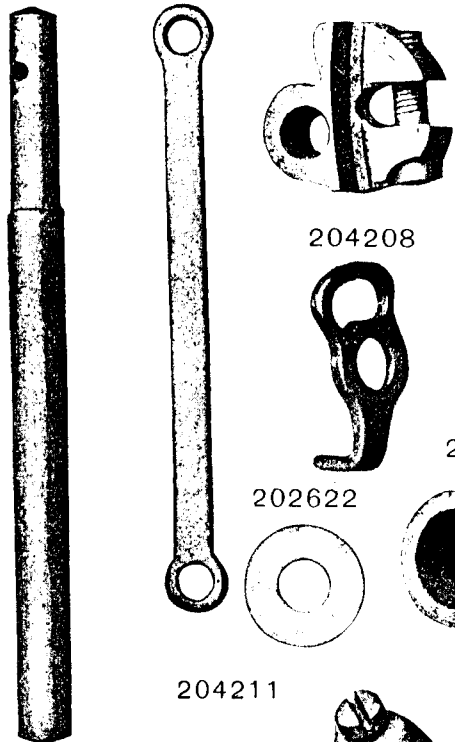 


204208



204213

  202622

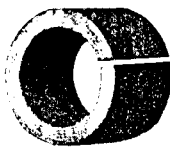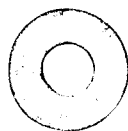

204211



PLATE 10644 - FULL SIZE

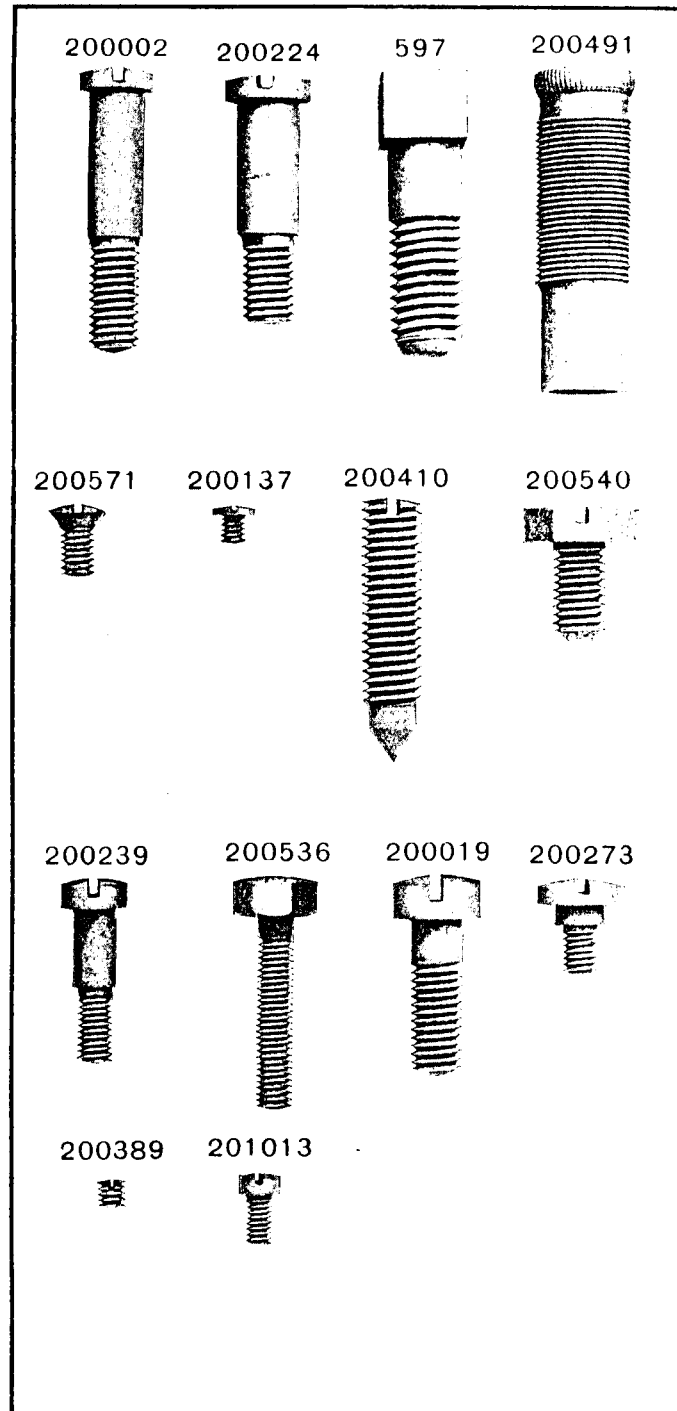


PLATE 10649 - FULL SIZE

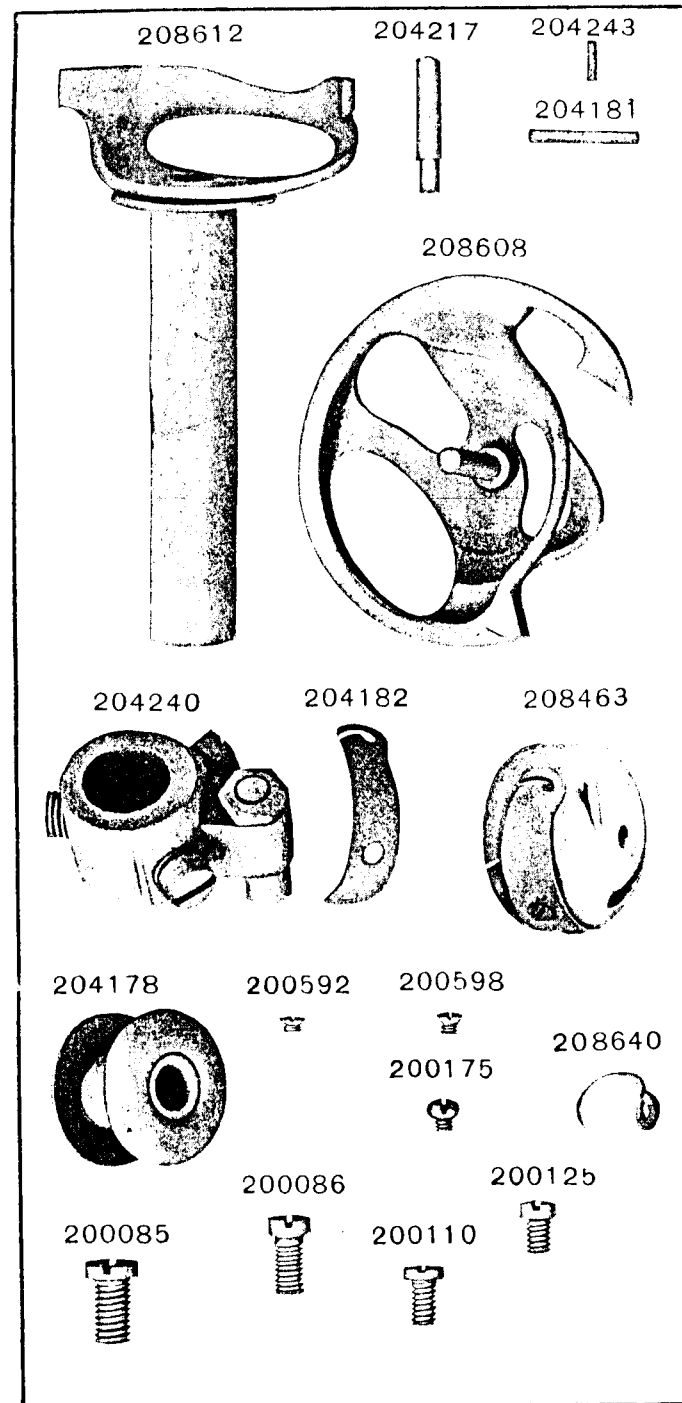


PLATE 10662 - FULL SIZE

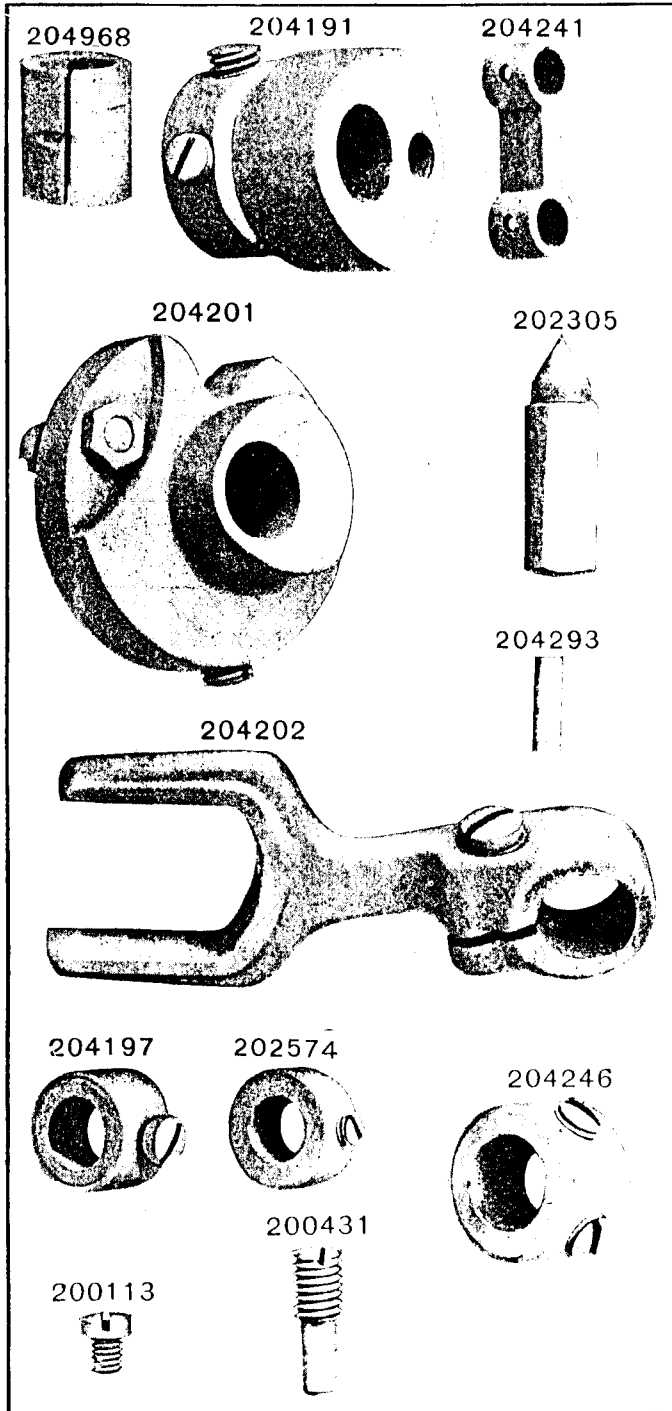 


PLATE 10663 - FULL SIZE

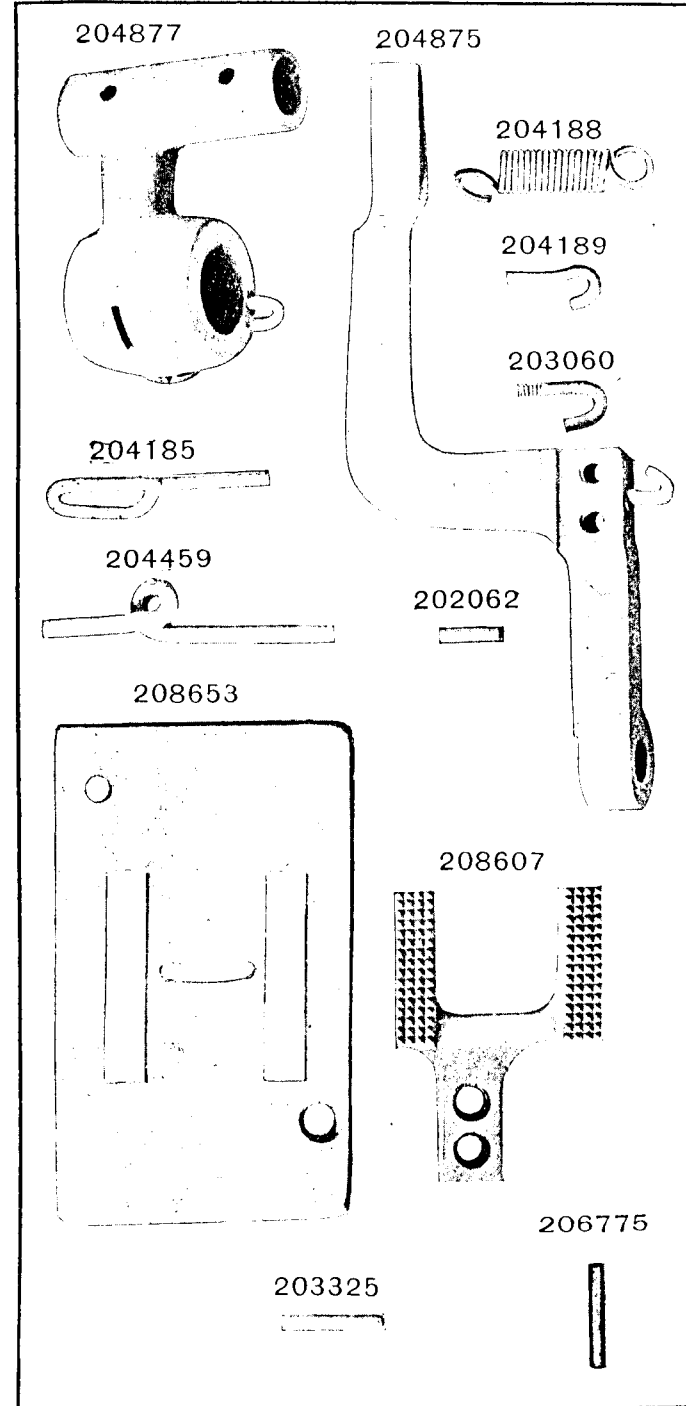 


PLATE 10664 - FULL SIZE

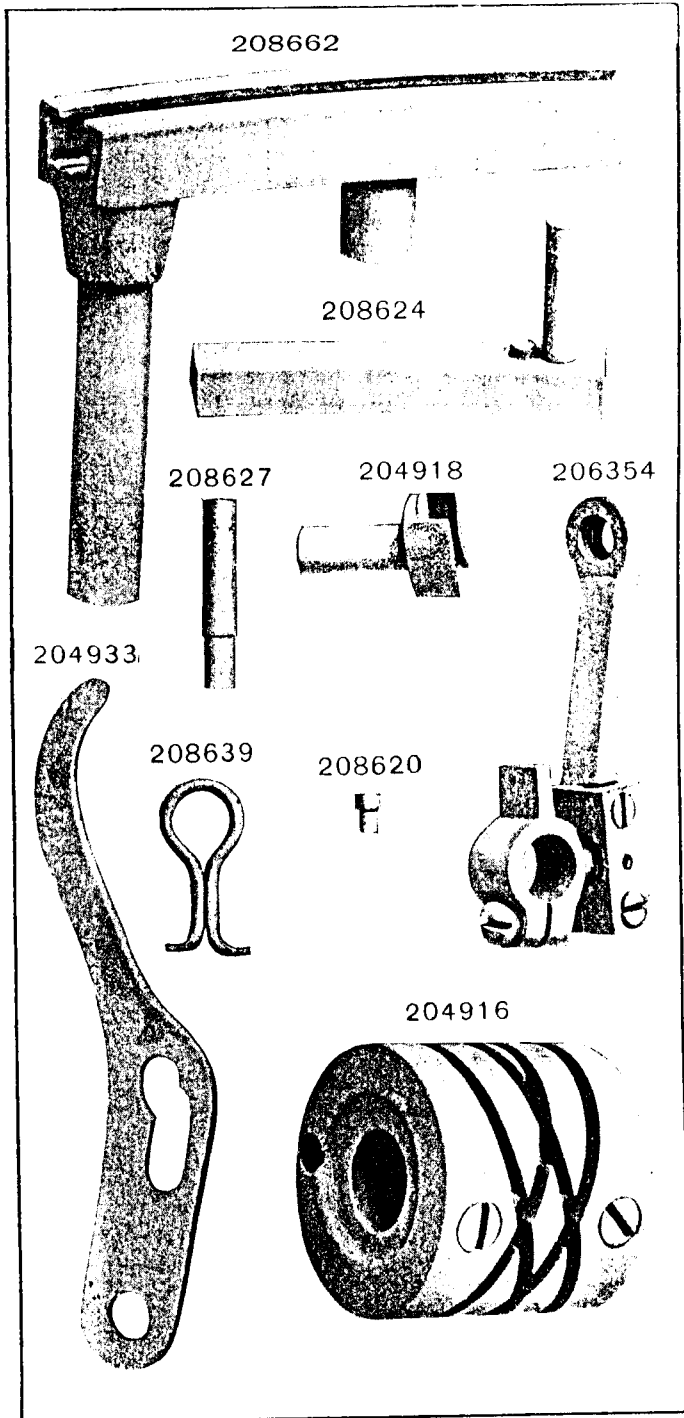 


PLATE 10665 - FULL SIZE


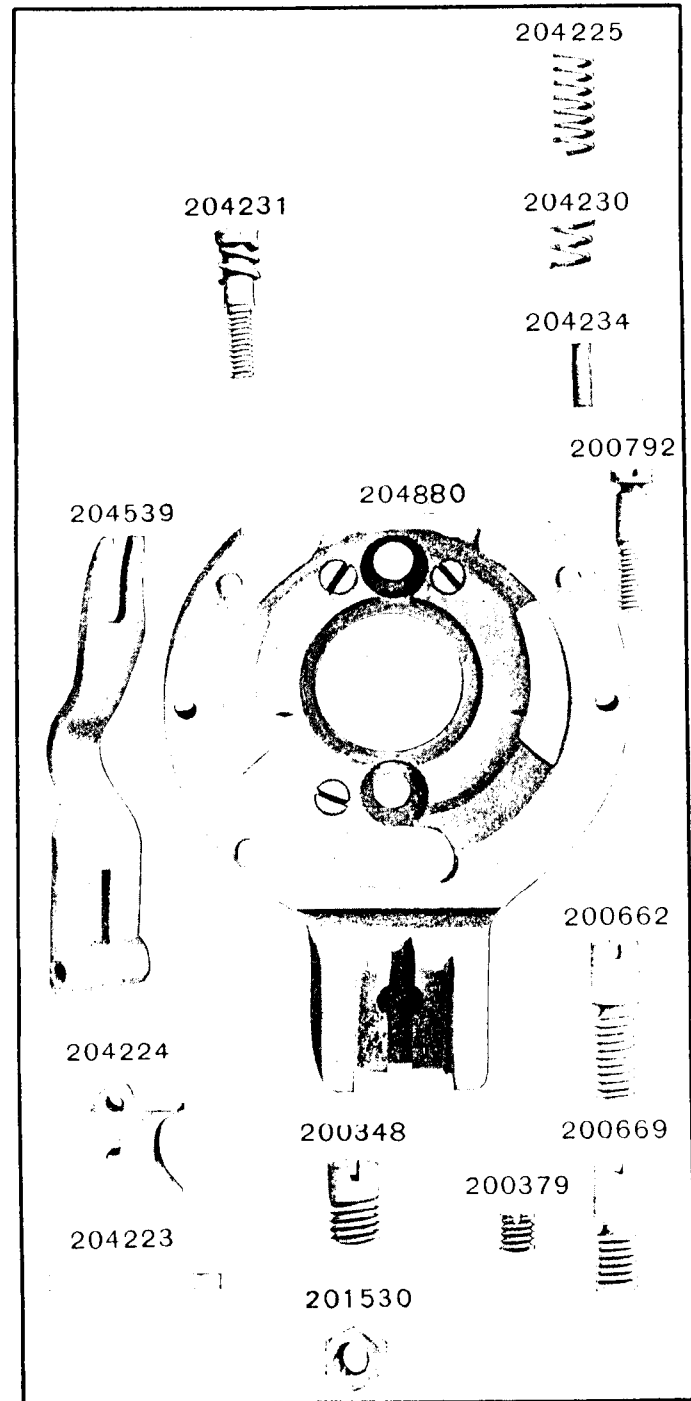 


PLATE 10666 - FULL SIZE

 204226

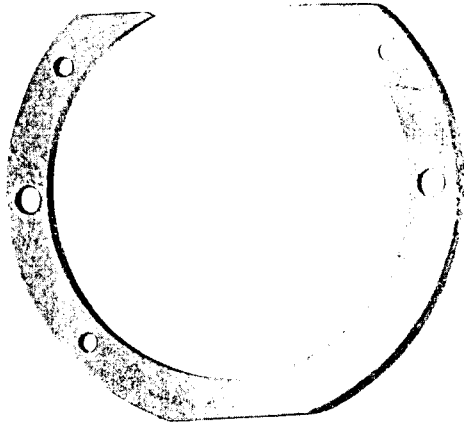

208611



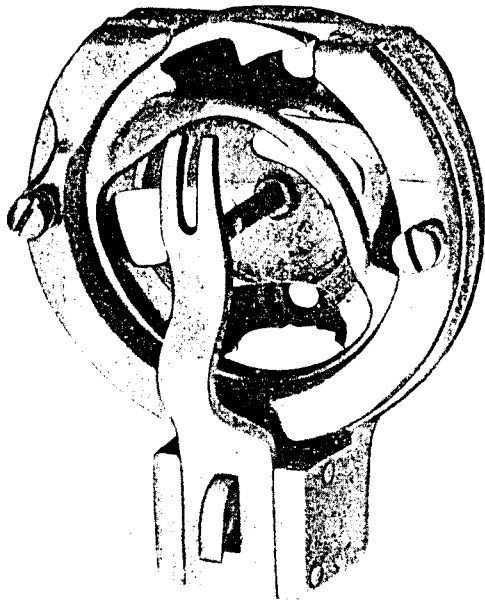


PLATE 10669 - FULL SIZE

 
204885

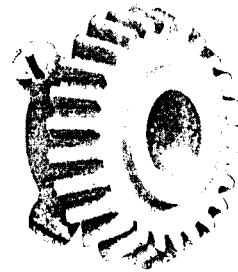


204887

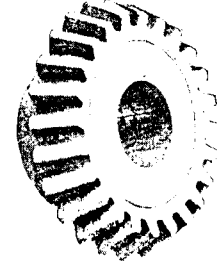 

206078

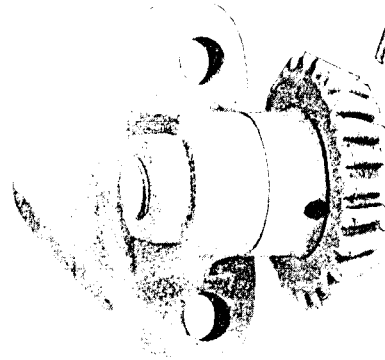 

204886

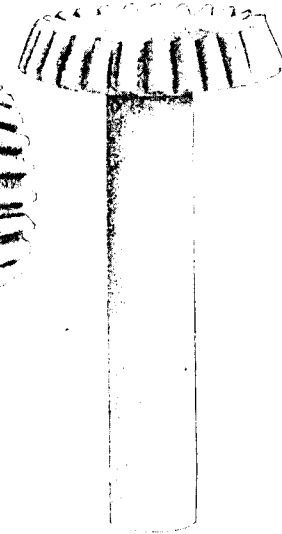 

201517



201514



200772



200041



201527



PLATE 10670 - FULL SIZE

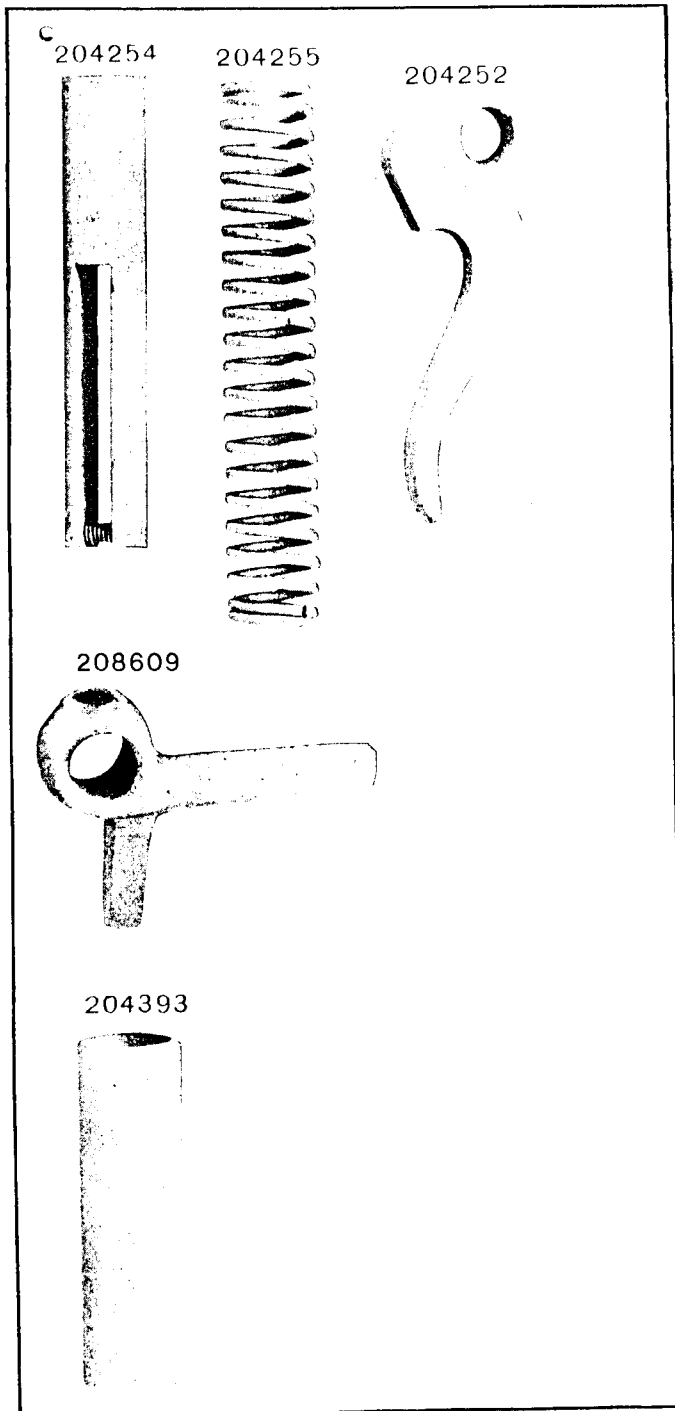 


PLATE 10671 - FULL SIZE

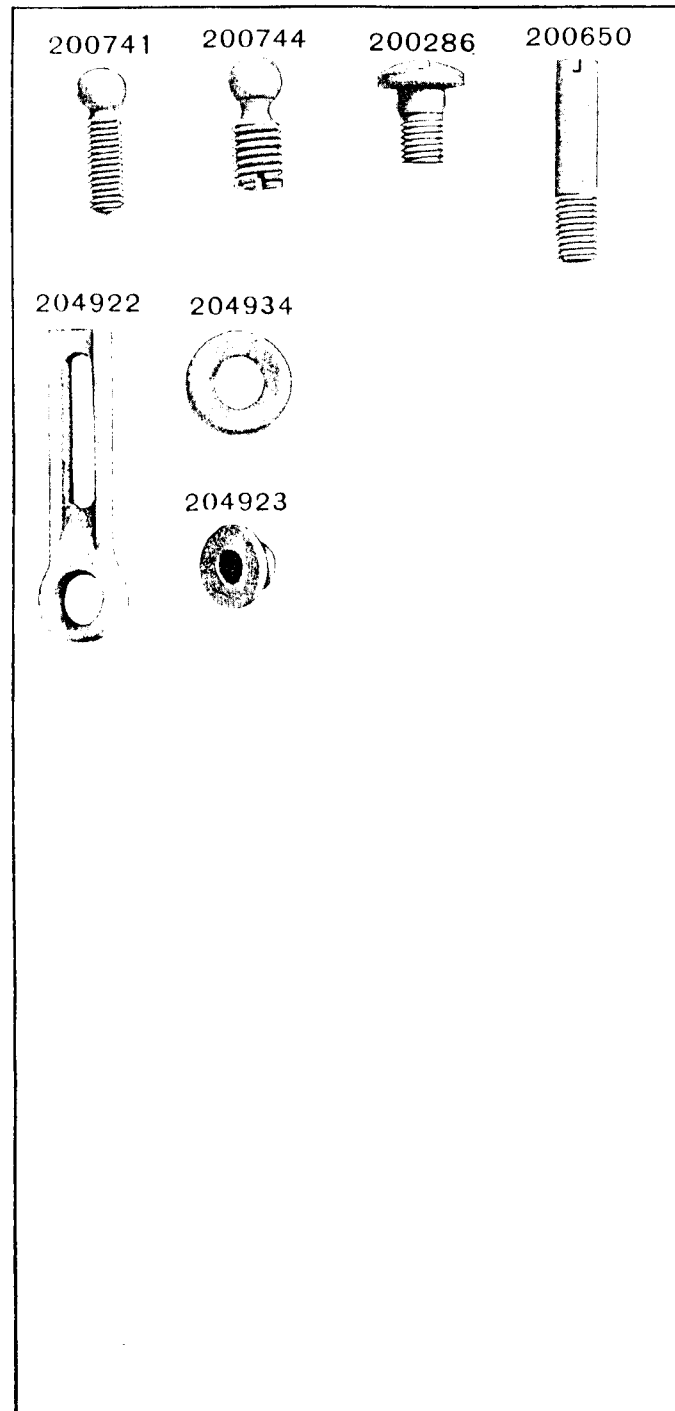 


PLATE 10672 - ONE-HALF SIZE

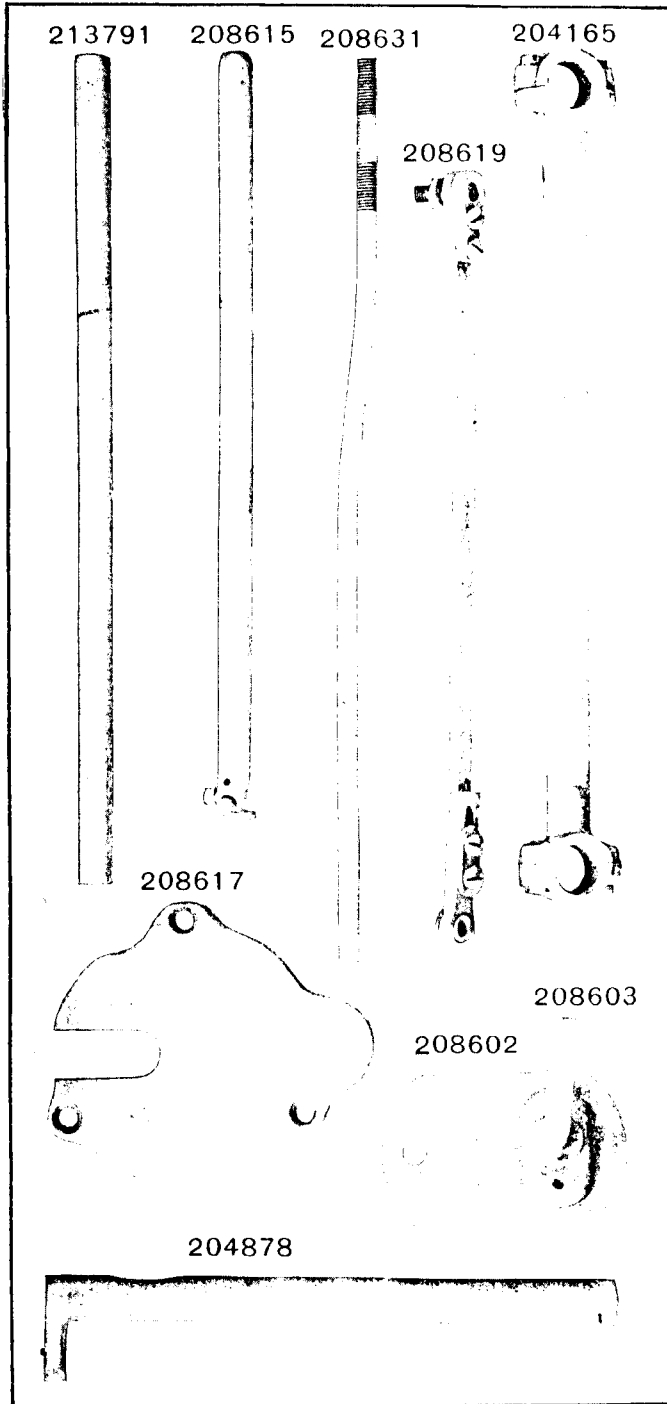


PLATE 10673 - FULL SIZE

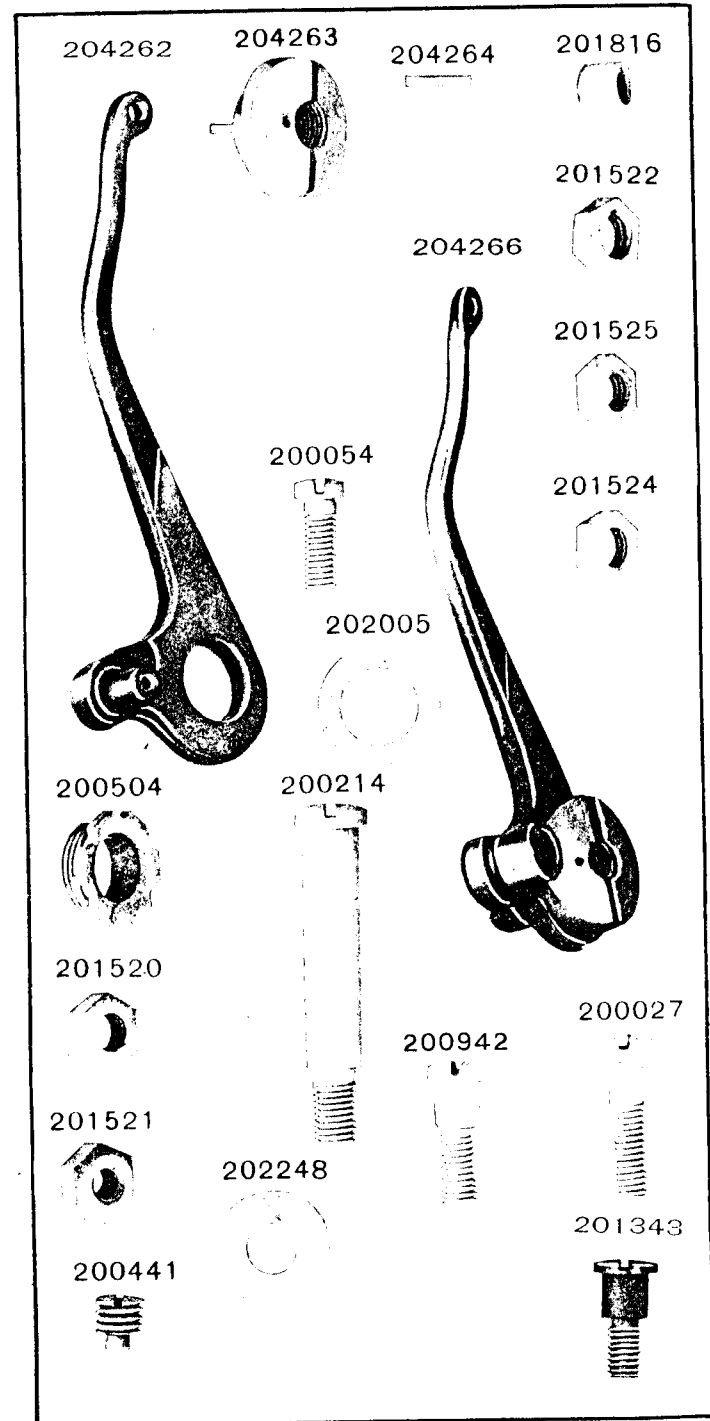


PLATE 10674 - ONE - HALF SIZE

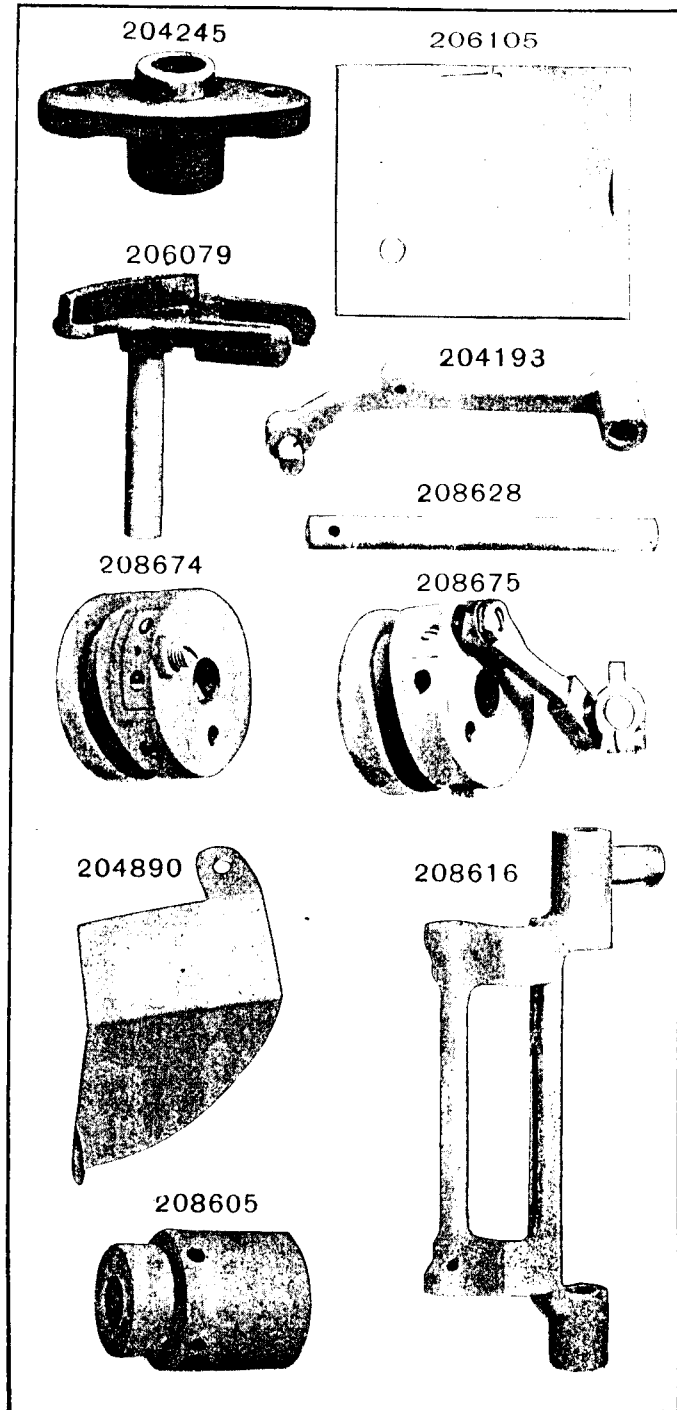


PLATE 10675 - FULL SIZE

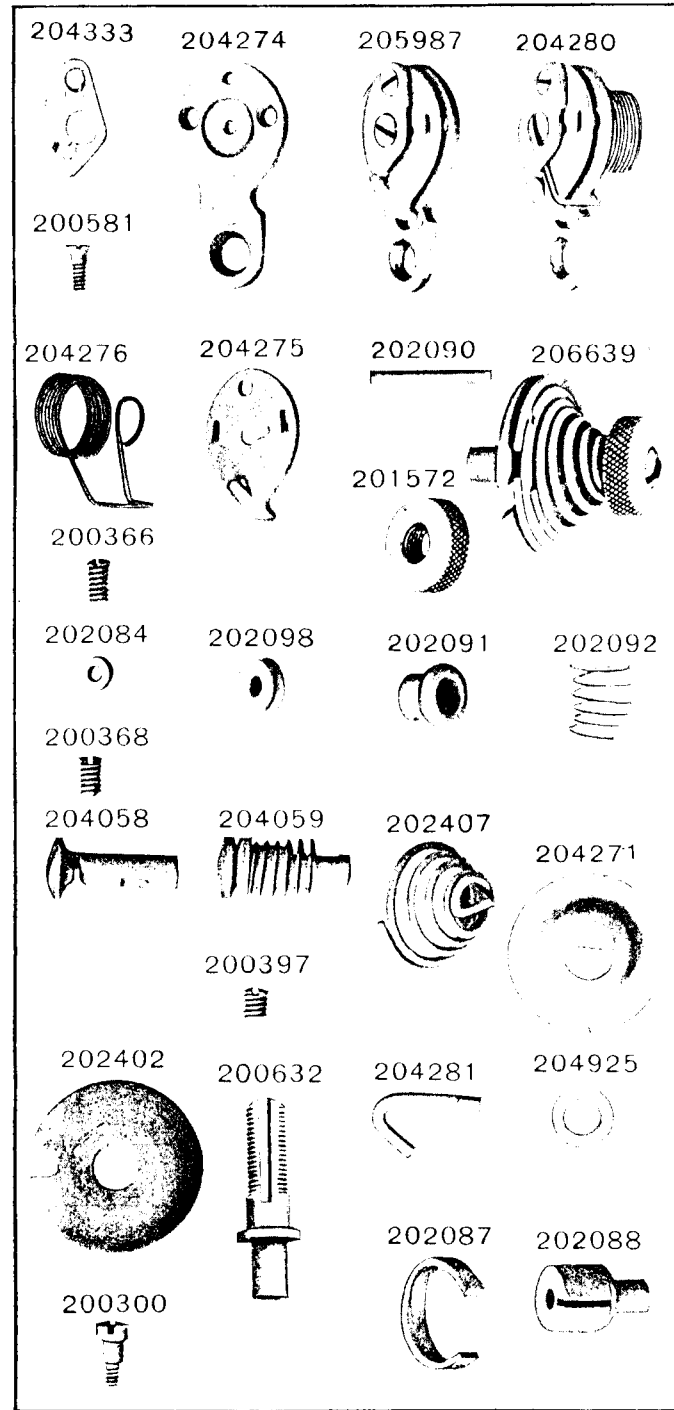 


PLATE 10676--FULL SIZE

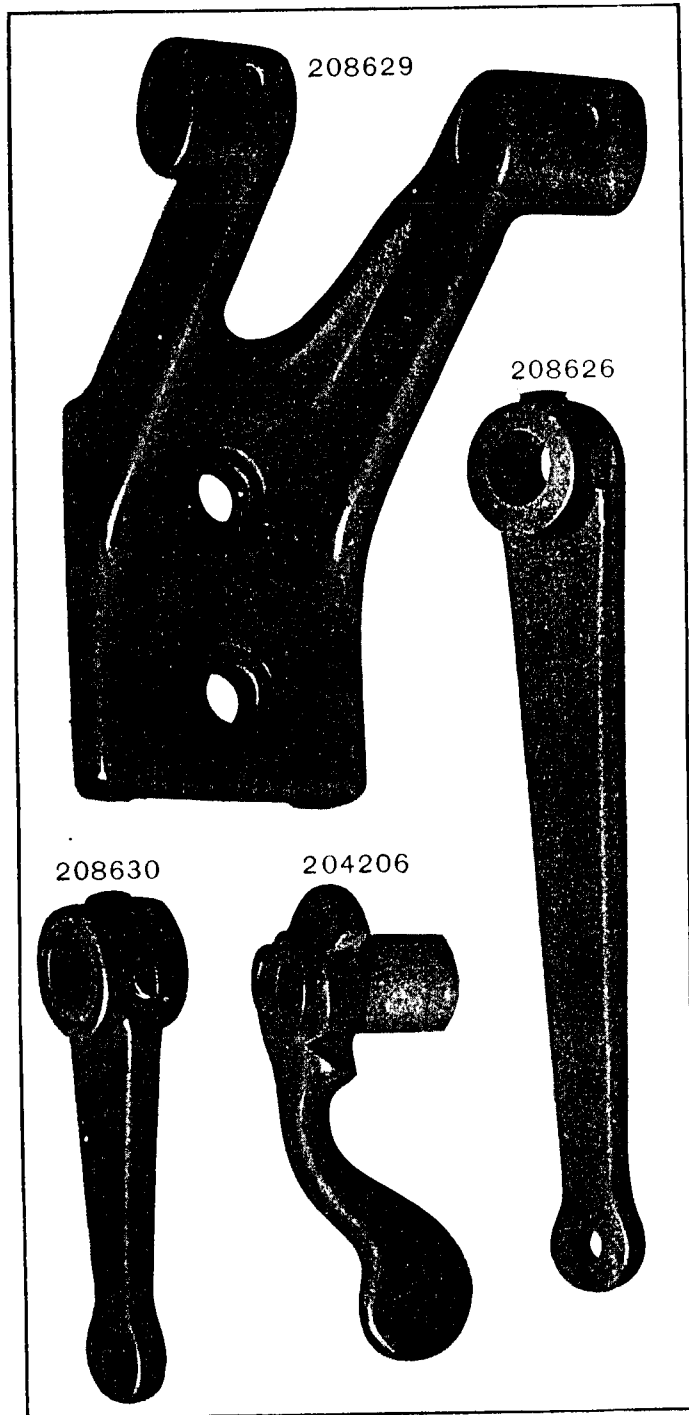 


PLATE 10677--FULL SIZE

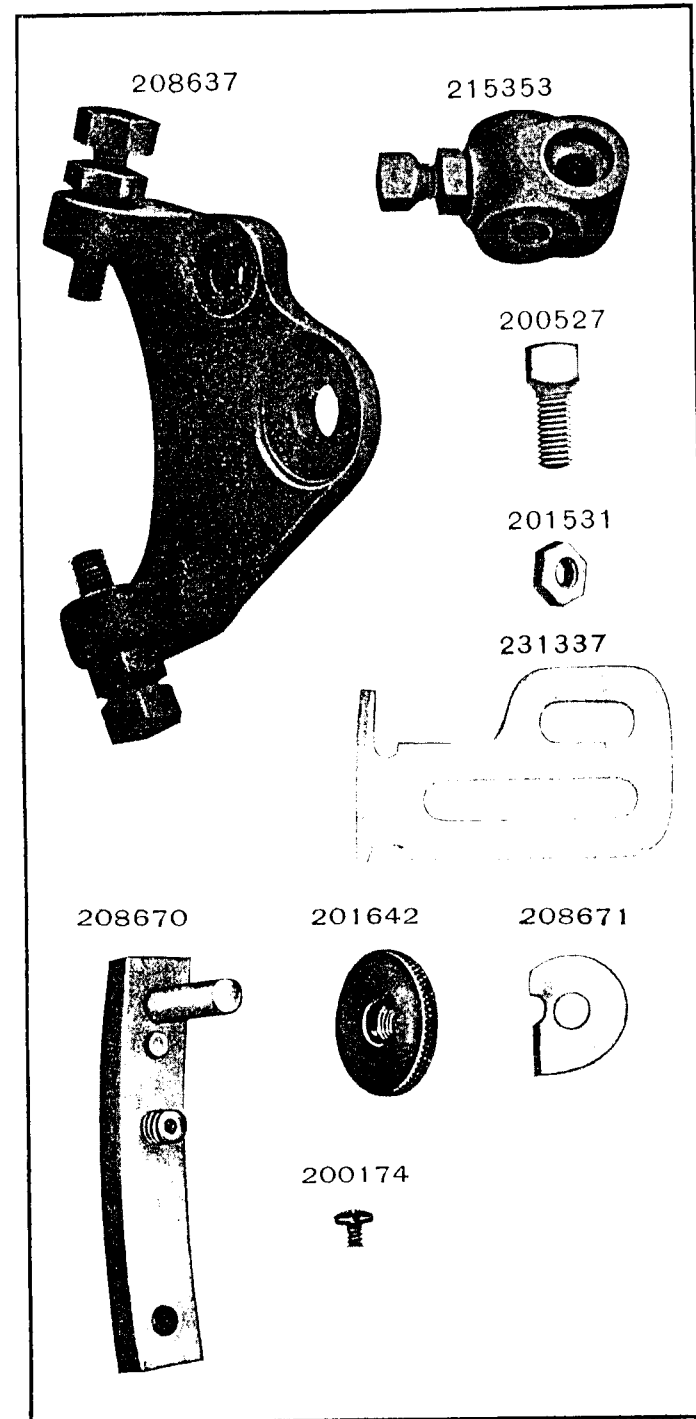 


PLATE 10692 - FULL SIZE

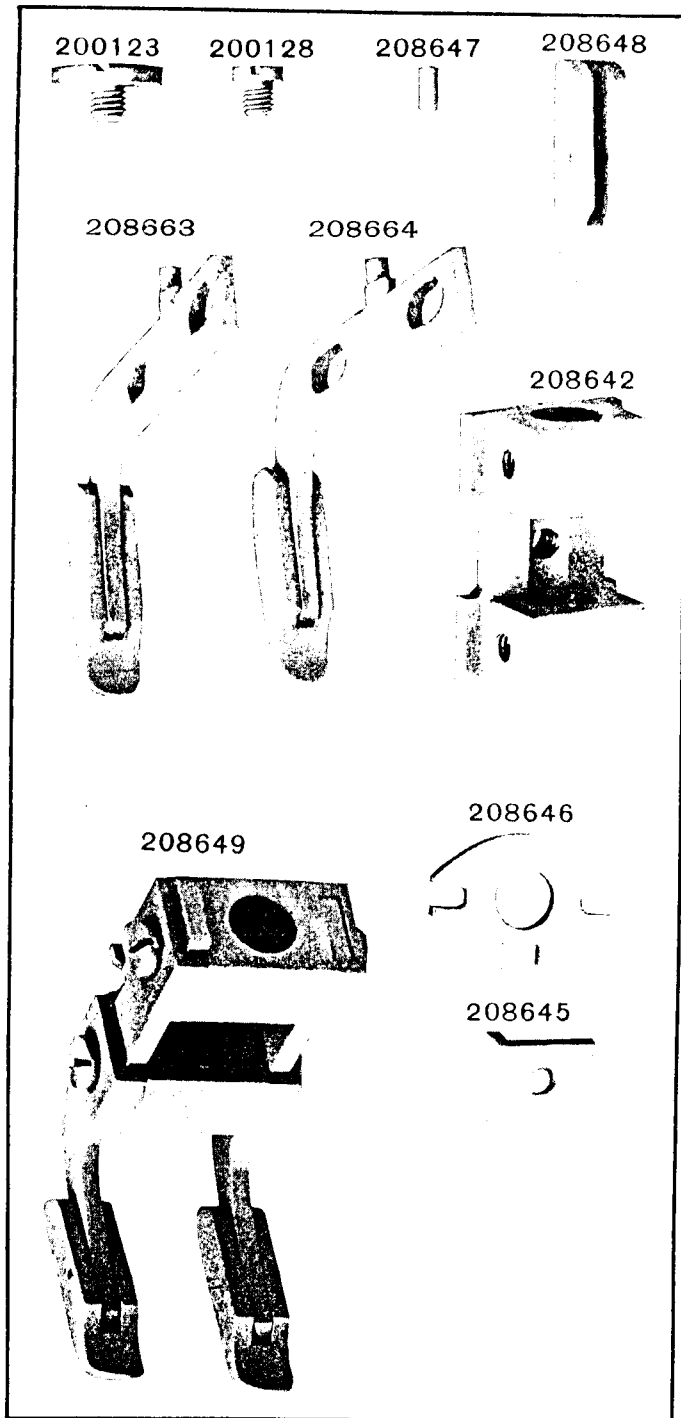


PLATE 10693 - ONE-FOURTH SIZE



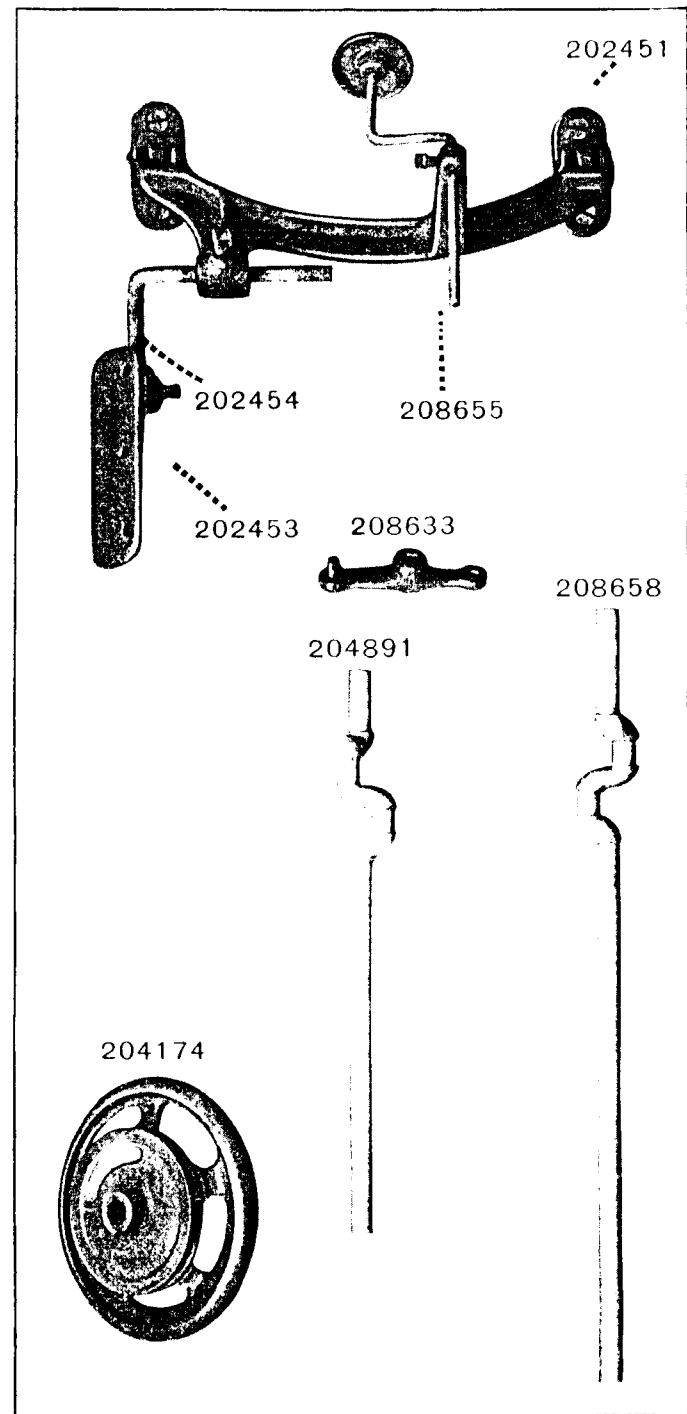 


PLATE 10881—FULL SIZE

225461

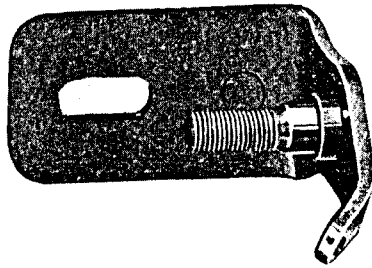

225462

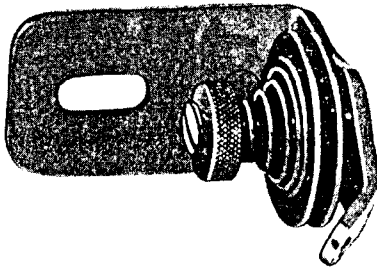 


200082



202104



 2102

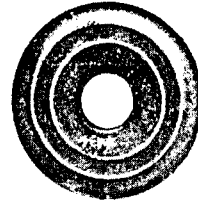

202407



201499

 


201572

 


PLATE 10882—FULL SIZE

225453

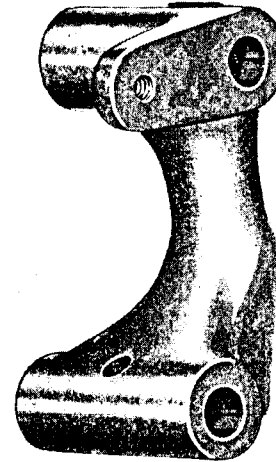

225455



225456



225438



225457



201052



200056



 
200299




225454




225452

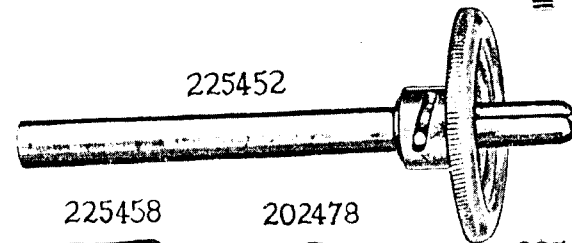

225458

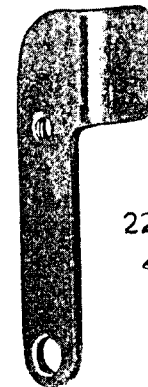 

202478

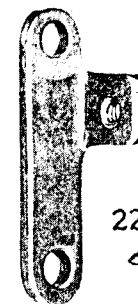 

225444



225459

 


225460




PLATE 10883—ONE-FOURTH SIZE

225463

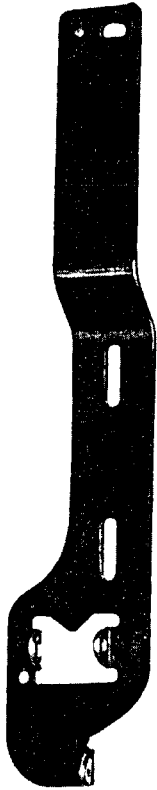

202473

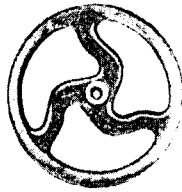

225436


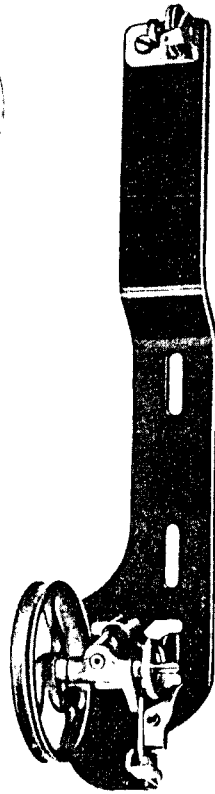 


PLATE 12311—FULL SIZE

 200570



200062

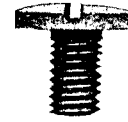

200439



200278



 
200335



200328



200963

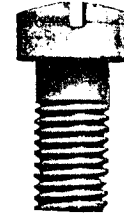

200550



200271



200042



200577



200516



200362



200378



200053



200043



200575



200430



200840



200031



200437



200383



200106



200079



PLATE 12319 - FULL SIZE

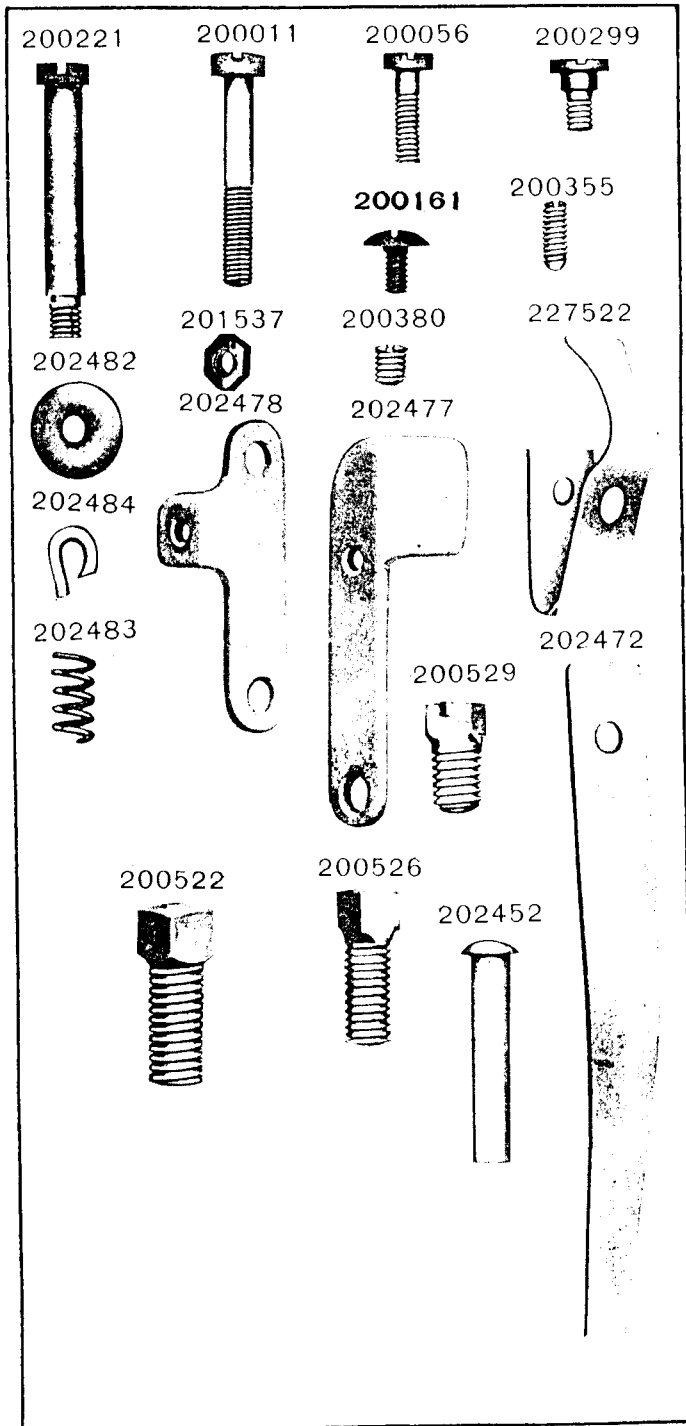


PLATE 12320 - ONE-HALF SIZE


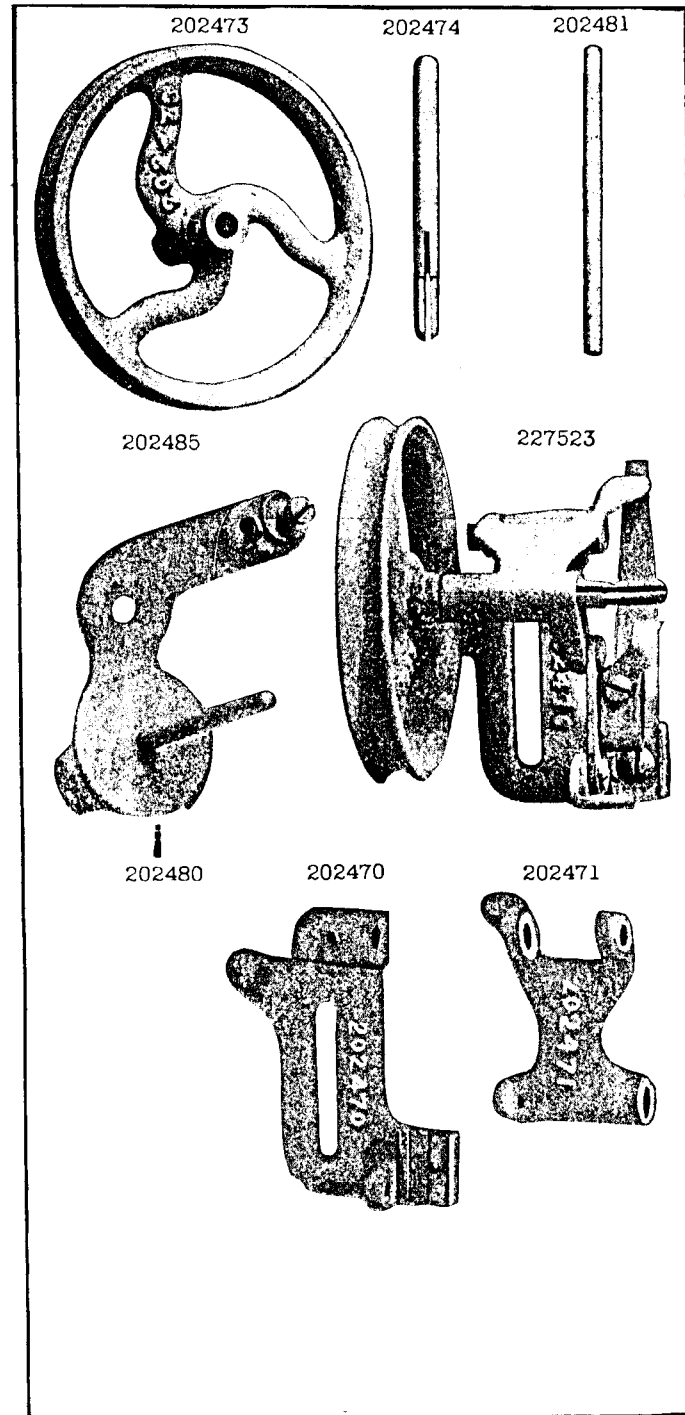


PLATE 12345—ONE-HALF SIZE

 41400



225497



225498



202258



36578

225554



36579

