

**SINGER**  
**167W101**

Form 3229w

LIST OF PARTS COMPLETE  
for  
MACHINE NO. 167w101

Printed in U.S.A.

MACHINE NO. 167w101

\*265601 Arm  
265602 Arm Cover  
200048F Arm Cover Screw (2)  
204235 Arm Position Pin (2)  
200004E Arm Screw (3)  
202005 Arm Screw Washer (3)  
265603 Arm Shaft with 224392 and 350431E  
270004 Arm Shaft Ball Bearing (back)  
265604 Arm Shaft Bushing (center)  
265605 Arm Shaft Bushing 265604 with 265608  
207080 Arm Shaft Bushing (front) with 202244  
202244 Arm Shaft Bushing (front) Oil Packing (wick)  
200327C Arm Shaft Bushing Set Screw (2)  
224104 Arm Shaft Connection Belt Pulley (hook driving) with  
200327C, 200602C and two 202253  
200602C Arm Shaft Connection Belt Pulley (hook driving)  
Position Screw  
200327C Arm Shaft Connection Belt Pulley (hook driving)  
Set Screw  
202253 Arm Shaft Connection Belt Pulley (hook driving)  
Spring Flange  
265606 Arm Shaft Connection Belt Pulley (hook vibrating) with  
202324 and two 200378C  
265607 Arm Shaft Connection Belt Pulley (hook vibrating) Flange  
200378C Arm Shaft Connection Belt Pulley (hook vibrating)  
Set Screw  
202324 Arm Shaft Connection Belt Pulley (hook vibrating)  
Spring Flange

MACHINE NO. 167w101

265608 Arm Shaft Needle Bearing (center)  
265609 Arm Shaft Needle Bearing (center) Collar with  
two 200378C  
200378C Arm Shaft Needle Bearing (center) Collar Set Screw  
224392 Arm Shaft Oil Packing (wick)  
350431F Arm Shaft Oil Packing Stop Screw  
224144 Attachment Slide Plate with 213479 and 236061  
236061 Attachment Slide Plate Friction Slide  
213479 Attachment Slide Plate Friction Slide Spring  
\*265610 Bed with 203376  
54897 Bed Oil Cap (6)  
265611 Bed Slide (back), for use with Throat Plates in  
gauges from 1/4 to 15/32 in.  
265752 Bed Slide (back), for use with Throat Plates in  
gauges from 1/2 to 1 in.  
223811 Bed Slide (back) Stop  
223812 Bed Slide (back) Stop Spring  
265612 Bed Slide (front) for use with Throat Plates in  
gauges from 1/4 to 15/32 in.  
265613 Bed Slide (front) for use with Throat Plates in  
gauges from 1/2 to 1 in.  
233939 Bobbin (2)  
235769 Bobbin Case Base with 202056, 203211 to 203213 and 203216  
203211 Bobbin Case Base Latch  
\*202056 Bobbin Case Base Latch Pin  
203212 Bobbin Case Base Latch Plunger  
203213 Bobbin Case Base Latch Spring

MACHINE NO. 167w101

241676 Bobbin Case with 200594E, 200984C, 235771, 241674, 241675  
and two 350405C

241674 Bobbin Case Oiling Felt

241675 Bobbin Case Oiling Felt Retainer

350405C Bobbin Case Oiling Felt Retainer Screw

248404 Bobbin Case Opener

224005 Bobbin Case Opener Lever with 201349C, 201542C and 203101

201349C Bobbin Case Opener Lever Driving Screw Stud

201542C Bobbin Case Opener Lever Driving Screw Stud Nut

203101 Bobbin Case Opener Lever Driving Screw Stud Oil  
Packing (wick)

265088 Bobbin Case Opener Lever Hinge Stud with 202277

202277 Bobbin Case Opener Lever Hinge Stud Oil Packing (wick)

200364C Bobbin Case Opener Lever Hinge Stud Set Screw

248405 Bobbin Case Opener Lever Link

200118D Bobbin Case Opener Screw

265719 Bobbin Case Stop

200567X Bobbin Case Stop Screw

235771 Bobbin Case Tension Spring

200984C Bobbin Case Tension Spring Regulating Screw

200594E Bobbin Case Tension Spring Screw

203216 Bobbin Case Washer (cloth)

241677 Bobbin Case complete, Nos. 235760 and 241676

265618 Face Plate with 268033

267177 Face Plate Hinge Pin

200389C Face Plate Hinge Pin Set Screw

265619 Face Plate Lock Spring

MACHINE NO. 167w101

268197 Face Plate Lock Spring Plate  
200571X Face Plate Lock Spring Screw (2)  
268033 Face Plate Lock Stud  
265753 Feed Bar (161-1640)  
265754 Feed Bar 265753 with 224052, 225837 and 350594C  
265755 Feed Bar Crank with two each 200354C and 201188C  
(161-1712)  
200354C Feed Bar Crank Set Screw  
265756 Feed Bar Hinge Stud (eccentric) (161-1790)  
201188 Feed Bar Hinge Stud (eccentric) Set Screw  
265757 Feed Dog (back), 1/4 inch gauge, for 265740  
265758 Feed Dog (back), 5/16 inch gauge, for 265741  
265759 Feed Dog (back), 3/8 inch gauge, for 265742  
265760 Feed Dog (back), 7/16 inch gauge, for 265743  
265761 Feed Dog (back), 1/2 inch gauge, for 265744  
265762 Feed Dog (back), 9/16 inch gauge, for 265745  
265763 Feed Dog (back), 5/8 inch gauge, for 265746  
265764 Feed Dog (back), 3/4 inch gauge, for 265747  
265765 Feed Dog (back), 1 inch gauge, for 265748  
200106E Feed Dog (back) Screw (2)  
265766 Feed Dog (front), 1/4 inch gauge, for 265740  
265767 Feed Dog (front), 5/16 inch gauge, for 265741  
265768 Feed Dog (front), 3/8 inch gauge, for 265742  
265769 Feed Dog (front), 7/16 inch gauge, for 265743  
265770 Feed Dog (front), 1/2 inch gauge, for 265744  
265771 Feed Dog (front), 9/16 inch gauge, for 265745  
265772 Feed Dog (front), 5/8 inch gauge, for 265746  
265773 Feed Dog (front), 3/4 inch gauge, for 265747

MACHINE NO. 167w101

265774 Feed Dog (front), 1 inch gauge, for 265748  
200188E Feed Dog (front) Screw (2)  
265637 Feed Driving Connection  
265638 Feed Driving Connection 265637 with 265751  
270015 Feed Driving Connection Crank with 200040E  
200040E Feed Driving Connection Crank Pinch Screw  
200545E Feed Driving Connection Hinge Screw  
201522E Feed Driving Connection Hinge Screw Nut  
265751 Feed Driving Connection Needle Bearing  
265639 Feed Driving Connection Thrust Washer  
270017 Feed Driving Eccentric  
270018 Feed Driving Eccentric Adjusting Disc  
270137 Feed Driving Eccentric Adjusting Disc Spring  
248416 Feed Driving Eccentric Adjusting Disc Spring Collar  
with two 200382ALX  
200382ALX Feed Driving Eccentric Adjusting Disc Spring Collar  
Position Screw  
240231 Feed Driving Eccentric Friction Gib  
350578XC Feed Driving Eccentric Friction Gib Adjusting Screw  
350562XC Feed Driving Eccentric Friction Gib Adjusting Screw  
Set Screw  
265641 Feed Driving Eccentric Regulating Stud  
240245 Feed Driving Eccentric Regulating Stud Retaining Spring  
265642 Feed Driving Eccentric Regulating Stud Socket  
270026 Feed Driving Eccentric Regulating Stud Spring  
265643 Feed Driving Flange with 200333C, 200346C, two each  
350562XC and 350578XC

MACHINE NO. 167w101

200333C Feed Driving Flange Position Screw  
200346C Feed Driving Flange Set Screw  
265644 Feed Driving Rock Shaft  
265645 Feed Driving Rock Shaft Bushing (left)  
350525X Feed Driving Rock Shaft Bushing (left) Oil Stop Screw  
267004 Feed Driving Rock Shaft Bushing (left) Oil Stop Screw  
Gasket  
265646 Feed Driving Rock Shaft Bushing (right)  
200335C Feed Driving Rock Shaft Bushing Set Screw (2)  
203244 Feed Driving Rock Shaft Collar with two 200393C  
200393C Feed Driving Rock Shaft Collar Set Screw  
265647 Feed Lifting Eccentric with 201220C  
224052 Feed Lifting Eccentric Fork with 200173D and 223655  
350594C Feed Lifting Eccentric Fork Screw  
225837 Feed Lifting Eccentric Fork Screw Washer  
223655 Feed Lifting Eccentric Oiling Felt  
200173D Feed Lifting Eccentric Oiling Felt Screw  
201220C Feed Lifting Eccentric Set Screw  
\*224016 Hook (sewing)  
224017 Hook 224016 with 203525, 224025, two each 200590X  
and 201253F  
265720 Hook and Bobbin Case complete, Nos. 224017 and 241677  
224019 Hook Bushing (lower) (bronze)  
200364C Hook Bushing (lower) Set Screw  
224020 Hook Bushing (upper) (bronze)  
200446C Hook Bushing (upper) Position Screw



MACHINE NO. 167w101

267188	Hook Driving Gear (spiral) with 200382ALX and 201220C(2)
201220C	Hook Driving Gear Position Screw
200382ALX	Hook Driving Gear Set Screw
224021	Hook Driving Pinion (spiral) with two 200382ALX
200382ALX	Hook Driving Pinion Set Screw
224022	Hook Driving Pinion Thrust Washer
265651	Hook Driving Shaft (back)
272144	Hook Driving Shaft (back) Ball Bearing
265775	Hook Driving Shaft (front) (162-1711)
265653	Hook Driving Shaft (front) Ball Bearing
265654	Hook Driving Shaft (front) Ball Bearing Collar with 200378C and 201220C
265655	Hook Driving Shaft (front) Ball Bearing Collar 265654 with 265653
201220C	Hook Driving Shaft (front) Ball Bearing Collar Position Screw
200378C	Hook Driving Shaft (front) Ball Bearing Collar Set Screw
265656	Hook Driving Shaft (front) Ball Bearing Retaining Plate
200541E	Hook Driving Shaft (front) Ball Bearing Retaining Plate Screw (2)
224195	Hook Driving Shaft Connection Belt (reinforced neoprene)
265657	Hook Driving Shaft Connection Belt Pulley with 200070C, 202253 and 350576C
350576C	Hook Driving Shaft Connection Belt Pulley Position Screw
200070C	Hook Driving Shaft Connection Belt Pulley Set Screw
202253	Hook Driving Shaft Connection Belt Pulley Spring Flange
265658	Hook Driving Shaft Coupling (back) with 200382ALX and 201220C
201220C	Hook Driving Shaft Coupling (back) Position Screw

MACHINE NO. 167w101

200382ALX Hook Driving Shaft Coupling (back) Set Screw  
265776 Hook Driving Shaft Coupling (front) with 200378C  
and 201222C  
201222C Hook Driving Shaft Coupling (front) Position Screw  
200378C Hook Driving Shaft Coupling (front) Set Screw  
202244 Hook Driving Shaft Oiling Wick  
203525 Hook Gib  
201253F Hook Gib Screw  
265660 Hook Saddle (left) with two 350175E  
265661 Hook Saddle 265660 with 200446C, 224019, 224020 and  
two 200364C  
265662 Hook Saddle (right) with two 350175E  
265663 Hook Saddle 265662 with 200446C, 224019, 224020 and  
two 200364C  
350175E Hook Saddle Pinch Screw  
265664 Hook Saddle Shaft (hollow)  
202244 Hook Saddle Shaft (hollow) Oiling Wick (2)  
265665 Hook Saddle Support (2)  
200335C Hook Saddle Support Set Screw (2)  
265666 Hook Saddle (left) complete, Nos. 200118D, 224005,  
224021, 224022, 248404, 248405, 265088, 265661,  
265686, 265719, 265720, two each 200186X and 200567X  
265667 Hook Saddle (right) complete, Nos. 200118D, 224005,  
224021, 224022, 248404, 248405, 265088, 265663,  
265686, 265719, 265720, two each 200186X and 200567X  
265668 Hook Vibrating Bell Crank with two 270371  
265669 Hook Vibrating Bell Crank Bracket with three 200394C  
200029C Hook Vibrating Bell Crank Bracket Screw (2)  
265670 Hook Vibrating Bell Crank Hinge Stud with 248821 (2)

MACHINE NO. 167w101

248821 Hook Vibrating Bell Crank Hinge Stud Oil Packing (wick)  
200394C Hook Vibrating Bell Crank Hinge Stud Set Screw  
270371 Hook Vibrating Bell Crank Needle Bearing  
265671 Hook Vibrating Bell Crank Swivel  
265672 Hook Vibrating Bell Crank Swivel Retainer (2)  
265721 Hook Vibrating Eccentric  
265673 Hook Vibrating Eccentric Adjusting Disc with 265722  
270137 Hook Vibrating Eccentric Adjusting Disc Spring  
248416 Hook Vibrating Eccentric Adjusting Disc Spring Collar  
with two 200382ALX  
200382ALX Hook Vibrating Eccentric Adjusting Disc Spring Collar  
Position Screw  
265674 Hook Vibrating Eccentric Connection  
265675 Hook Vibrating Eccentric Connection 265674 with 265751  
265676 Hook Vibrating Eccentric Connection Guide Stud  
200394C Hook Vibrating Eccentric Connection Guide Stud Set Screw  
265751 Hook Vibrating Eccentric Connection Needle Bearing  
265677 Hook Vibrating Eccentric Connection Stop Collar with  
200354C and 200362C  
200354C Hook Vibrating Eccentric Connection Stop Collar  
Position Screw  
200362C Hook Vibrating Eccentric Connection Stop Collar Set  
Screw  
240231 Hook Vibrating Eccentric Friction Gib  
350578XC Hook Vibrating Eccentric Friction Gib Adjusting Screw  
350562XC Hook Vibrating Eccentric Friction Gib Adjusting Screw  
Set Screw  
265641 Hook Vibrating Eccentric Regulating Stud

MACHINE NO. 167w101

240245 Hook Vibrating Eccentric Regulating Stud Retaining Spring

265678 Hook Vibrating Eccentric Regulating Stud Socket

270026 Hook Vibrating Eccentric Regulating Stud Spring

265722 Hook Vibrating Eccentric Stop Pin

270944 Hook Vibrating Flange with 200333C, 200346C, two each 350562XC and 350578XC

200333C Hook Vibrating Flange Position Screw

200346C Hook Vibrating Flange Set Screw

265679 Hook Vibrating Pitman with two 200956X

200919C Hook Vibrating Pitman Hinge Screw (2)

\*265680 Hook Vibrating Pitman Hinge Screw Bearing

200956X Hook Vibrating Pitman Hinge Screw Pinch Screw

265681 Hook Vibrating Shaft

272144 Hook Vibrating Shaft Ball Bearing

265682 Hook Vibrating Shaft Bushing with 265728

265722 Hook Vibrating Shaft Bushing Oil Packing (wick)

200335C Hook Vibrating Shaft Bushing Set Screw

265715 Hook Vibrating Shaft Connection Belt (reinforced neoprene)

270034 Hook Vibrating Shaft Connection Belt Pulley with 202253 and two 200070C

200070C Hook Vibrating Shaft Connection Belt Pulley Set Screw

202253 Hook Vibrating Shaft Connection Belt Pulley Spring Flange

265684 Hook Vibrating Shaft Stop Collar with two 200382ALX

200382ALX Hook Vibrating Shaft Stop Collar Set Screw

265685 Hook Vibrating Yoke with 200363AL, 200439C and 265680

MACHINE NO. 167w101

200439C	Hook Vibrating Yoke Position Screw
200363AL	Hook Vibrating Yoke Set Screw
224025	Hook Washer
200590X	Hook Washer Screw
240067	Knee Lifter Connection Lever
200262X	Knee Lifter Connection Lever Hinge Screw
240564	Knee Lifter Connection Lever Lifting Rod
227227	Knee Lifter Connection Lever Lifting Rod Stop Collar with 200113F
200113F	Knee Lifter Connection Lever Lifting Rod Stop Collar Set Screw
232131	Knee Lifter Connection Lever Washer
265716	Knee Lifter Lifting Lever
350464X	Knee Lifter Lifting Lever Hinge Screw
267289	Knee Lifter Lifting Lever Spring
200738X	Knee Lifter Lifting Lever Spring Stop Screw
232131	Knee Lifter Lifting Lever Washer
265686	Loop Deflector
200186X	Loop Deflector Screw
265724	Machine Pulley (aluminum alloy casting) for "V" belt (outside diam. of belt groove 2.9 in.) (rim diam. 4 in.) (inside belt groove), with 350540C and 350541C
265725	Machine Pulley 265724 with 272142
350540C	Machine Pulley Position Screw
350541C	Machine Pulley Set Screw
265636	Needle Bar
265687	Needle Bar Connecting Link

MACHINE NO. 167w101

241410	Needle Bar Connecting Link Guide Block
241342	Needle Bar Connecting Link Guide Block Gib (2)
200581X	Needle Bar Connecting Link Guide Block Gib Screw (4)
241344	Needle Bar Connecting Link Stud with 202254
202254	Needle Bar Connecting Link Stud Oil Packing (wick)
200374AL	Needle Bar Connecting Link Stud Set Screw
200383C	Needle Bar Connecting Link Stud Set Screw
241345	Needle Bar Connecting Stud with 202277
241346	Needle Bar Connecting Stud 241345 with 210882
202277	Needle Bar Connecting Stud Oil Packing (wick)
210882	Needle Bar Connecting Stud Swivel with 200387C
241347	Needle Bar Crank with 200335C, 200374AL, 200383C and 200428C
203172	Needle Bar Crank Friction Washer
200428C	Needle Bar Crank Position Screw
200335C	Needle Bar Crank Set Screw
265688	Needle Bar Frame with 200070C
241349	Needle Bar Frame Guide Stud
200334C	Needle Bar Frame Guide Stud Set Screw
210548	Needle Bar Frame Hinge Stud
200334C	Needle Bar Frame Hinge Stud Set Screw
265689	Needle Bar Frame Pitman with 202277
265690	Needle Bar Frame Pitman 265689 with 265751
210557	Needle Bar Frame Pitman Eccentric Stud
200070C	Needle Bar Frame Pitman Eccentric Stud Set Screw
265751	Needle Bar Frame Pitman Needle Bearing

MACHINE NO. 167w101

265717 Needle Bar Frame Pitman Needle Bearing Oil Tube  
(brass)

202277 Needle Bar Frame Pitman Oil Packing (wick)

200387C Needle Bar Set Screw

267269 Needle Holder, in gauges from 1/4 to 15/32 in.,  
in steps of 1/32 in. with two 200141F

267270 Needle Holder, in gauges from 1/2 to 3/4 in., in  
steps of 1/32 in., with two 200141F

267271 Needle Holder, in gauges from 25/32 to 1 in. in  
steps of 1/32 in., with two 200141F

200141F Needle Set Screw

265721 Needle Vibrating Eccentric

265691 Needle Vibrating Eccentric Adjusting Disc with 265722

270508 Needle Vibrating Eccentric Adjusting Disc Spring

265693 Needle Vibrating Eccentric Cover (plate)

200566D Needle Vibrating Eccentric Cover Screw (4)

240231 Needle Vibrating Eccentric Friction Gib

350578XC Needle Vibrating Eccentric Friction Gib Adjusting Screw

350562XC Needle Vibrating Eccentric Friction Gib Adjusting Screw  
Set Screw

265694 Needle Vibrating Eccentric Indexed Plate

200582X] Needle Vibrating Eccentric Indexed Plate Screw (2)

265722 Needle Vibrating Eccentric Stop Pin

270539 Needle Vibrating Flange with 200333C, 200346C, two  
each 350562XC and 350578XC

200333C Needle Vibrating Flange Position Screw

200346C Needle Vibrating Flange Set Screw

210699 Needle Vibrating Gear (spiral) with two 200382ALX

MACHINE NO. 167w101

200382ALX Needle Vibrating Gear (spiral) Set Screw  
203172 Needle Vibrating Gear Friction Washer  
265695 Needle Vibrating Gear Shaft  
264828 Needle Vibrating Gear Shaft Collar with 200382ALX  
200382ALX Needle Vibrating Gear Shaft Collar Set Screw  
210700 Needle Vibrating Pinion (spiral) with two 200382ALX  
200382ALX Needle Vibrating Pinion (spiral) Set Screw  
265696 Needle Vibrating Regulating Stud  
264709 Needle Vibrating Regulating Stud Cap with 200364C  
200364C Needle Vibrating Regulating Stud Cap Set Screw  
265697 Needle Vibrating Regulating Stud Sleeve  
200386C Needle Vibrating Regulating Stud Sleeve Set Screw  
270026 Needle Vibrating Regulating Stud Spring  
265698 Needle Vibrating Regulating Stud complete, Nos.  
264709, 265696, 265697 and 270026  
244033 Presser Bar (hollow)  
202335 Presser Bar 244033 with 200074F  
241352 Presser Bar Bushing  
200352AL Presser Bar Bushing Set Screw  
202554 Presser Bar Lifter  
200653C Presser Bar Lifter Hinge Screw  
210789 Presser Bar Lifting Releasing Lever Bracket  
200260E Presser Bar Lifting Releasing Lever Bracket Guide  
Screw  
206608 Presser Bar Lifting Releasing Lever Bracket Spring  
202337 Presser Bar Position Guide



MACHINE NO. 167w101

202338	Presser Bar Position Guide Lever with 200086C
200086C	Presser Bar Position Guide Lever Pinch Screw
200352AL	Presser Bar Position Guide Set Screw
350577X	Presser Bar Pressure Regulating Screw
200363AL	Presser Bar Regulating Screw Set Screw
244084	Presser Bar Regulating Screw Set Screw Packing (fibre)
210758	Presser Bar Spring
202346	Presser Bar Spring Stop Rod
230795	Presser Foot Hinge Pin
265777	Presser Foot Plate, 50 needle hole, 1/4 inch gauge
265779	Presser Foot Plate, 50 needle hole, 5/16 inch gauge
265781	Presser Foot Plate, 50 needle hole, in gauges 3/8 and 7/16 inch
265783	Presser Foot Plate, 50 needle hole, 1/2 inch gauge
265785	Presser Foot Plate, 50 needle hole, in gauges 9/16 and 5/8 inch
265787	Presser Foot Plate, 50 needle hole, 3/4 inch gauge
265789	Presser Foot Plate, 50 needle hole, 1 inch gauge
200074F	Presser Foot Screw
202923	Presser Foot Shank
265778	Presser Foot (hinged) complete, 50 needle hole, 1/4 inch gauge, Nos. 202923, 230795 and 265777
265780	Presser Foot (hinged) complete, 50 needle hole, 5/16 inch gauges, Nos. 202923, 230795 and 265779
265782	Presser Foot (hinged) complete, 50 needle hold, in gauges 3/8 and 7/16 inch, Nos. 202923, 230795 and 265781
265784	Presser Foot (hinged) complete, 50 needle hole, 1/2 inch gauge, Nos. 202923, 230795 and 265783

MACHINE NO. 167w101

265786 Presser Foot (hinged) complete, 50 needle hole, in gauges 9/16 and 5/8 inch, Nos. 202923, 230795 and 265785

265788 Presser Foot (hinged) complete, 50 needle hole, 3/4 inch gauge, Nos. 202923, 230795 and 265787

265790 Presser Foot (hinged) complete, 50 needle hole, 1 inch gauge, Nos. 202923, 230795 and 265789

265791 Take-up Lever (formerly Serial 128690)

202399 Take-up Lever Driving Stud with 202277

202277 Take-up Lever Driving Stud Oil Packing (wick)

241356 Take-up Lever Hinge Stud with 202423

202423 Take-up Lever Hinge Stud Oil Packing (wick)

200383C Take-up Lever Hinge Stud Set Screw

202401 Take-up Lever Oiling Felt

200904E Take-up Lever Oiling Felt Screw

263090 Take-up Lever Oiling Wick

263041 Take-up Lever Oiling Wick 263090 with 263097

241357 Take-up Lever Oiling Wick Eyelet

200904E Take-up Lever Oiling Wick Eyelet Screw

\*263097 Take-up Lever Oiling Wick Wire

223702 Tension Bracket with two each 201224X and 236060

200159F Tension Bracket Screw

223705 Tension Bracket complete, Nos. 200978X, 201199F, 223702, 223703, 223706, 237174, two each 13710, 200309E, 204271, 223704, three 201572X and four 244048

244048 Tension Disc

236060 Tension Disc Position Pin

223703 Tension Release Lever

MACHINE NO. 167w101

235072	Tension Release Lever Rod
200309E	Tension Release Lever Screw
223704	Tension Release Plunger
204271	Tension Release Washer
13710	Tension Spring
201224X	Tension Stud
201572X	Tension Thumb Nut
223706	Thread Controller Disc
200978X	Thread Controller Disc Screw
237174	Thread Controller Spring
241360	Thread Controller Spring Stop
200132E	Thread Controller Spring Stop Screw
201199F	Thread Controller Stud with 204925
200061AL	Thread Controller Stud Set Screw
201572X	Thread Controller Stud Thumb Nut
204925	Thread Controller Stud Washer
210954	Thread Guide (lower)
224028	Thread Guide (top of Arm)
267246	Thread Guide (upper)
200582X	Thread Guide Screw
267288	Thread Retainer
265740	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 1/4 inch gauge, for 265757 and 265766
265741	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 5/16 inch gauge, for 265758 and 265767
265742	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 3/8 inch gauge, for 265759 and 265768

MACHINE NO. 167w101

265743	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 7/16 inch gauge, for 265760 and 265769
265744	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 1/2 inch gauge, for 265761 and 265770
265745	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 9/16 inch gauge, for 265762 and 265771
265746	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 5/8 inch gauge, for 265763 and 265772
265747	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 3/4 inch gauge, for 265764 and 265773
265748	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 1 inch gauge, for 265765 and 265774
200161D	Throat Plate Clamp Screw
203376	Throat Plate Position Pin
691F	Throat Plate Screw

MACHINE NO. 167w101

202258	Bed Hinge Connection (2)
200570E	Bed Hinge Connection Screw (4)
233939	Bobbin (4)
259462	Bobbin Winder
228736	Drip Pan
224413	Knee Lifter Lifting Rod Roller Bracket complete
228754	Knee Lifter Rock Lever
228452	Machine Base Oil Drain Jar complete
41400	Machine Rest Pin
135x7	Needles #16 (12)
120342	Oil Can
228476	Screw Driver (Bobbin Case)
225498	Screw Driver
247476	Strip Reel complete
228777	Thread Unwinder
10875	Wrench
225486	Wrench
225554	Wrench
240566	Wrench (1/16 in. hex)

167wl01 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
691F	Throat Plate Screw
10875	Wrench
13710	Tension Spring
41400	Machine Rest Pin
54897	Bed Oil Cap
120342	Oil Can
200004E	Arm Screw
200029C	Hook Vibrating Bell Crank Bracket Screw
200040E	Feed Driving Connection Crank Pinch Screw
200048F	Arm Cover Screw
200061ALX	Thread Controller Stud Set Screw
200070C	Hook Driving Shaft Connection Belt Pulley Set Screw
200070C	Needle Bar Frame Pitman Eccentric Stud Set Screw
200070C	Hook Vibrating Shaft Connection Belt Pulley Set Screw
200074F	Presser Foot Screw
200086C	Presser Bar Position Guide Lever Pinch Screw
200106E	Feed Dog (back) Screw
200113F	Knee Lifter Connection Lever Lifting Rod Stop Collar Set Screw
200118D	Bobbin Case Opener Screw
200132E	Thread Controller Spring Stop Screw
200141F	Needle Set Screw
200159F	Tension Bracket Screw
200161D	Throat Plate Clamp Screw

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
200173D	Feed Lifting Eccentric Oiling Felt Screw
200186X	Loop Deflector Screw
200188E	Feed Dog (front) Screw
200260E	Presser Bar Lifting Releasing Lever Bracket Guide Screw
200262X	Knee Lifter Connection Lever Hinge Screw
200309E	Tension Release Lever Screw
200327C	Arm Shaft Bushing Set Screw
200327C	Arm Shaft Connection Belt Pulley (hook driving) Set Screw
200333C	Feed Driving Flange Position Screw
200333C	Hook Vibrating Flange Position Screw
200333C	Needle Vibrating Flange Position Screw
200334C	Needle Bar Frame Guide Stud Set Screw
200334C	Needle Bar Frame Hinge Stud Set Screw
200335C	Feed Driving Rock Shaft Bushing Set Screw
200335C	Hook Saddle Support Set Screw
200335C	Hook Vibrating Shaft Bushing Set Screw
200335C	Needle Bar Crank Set Screw
200346C	Feed Driving Flange Set Screw
200346C	Hook Vibrating Flange Set Screw
200346C	Needle Vibrating Flange Set Screw
200352AL	Presser Bar Bushing Set Screw
200352AL	Presser Bar Position Guide Set Screw
200354C	Feed Bar Crank Set Screw
200354C	Hook Vibrating Eccentric Connection Stop Collar Position Screw

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
200362C	Hook Vibrating Eccentric Connection Stop Collar Set Screw
200363AL	Hook Vibrating Yoke Set Screw
200363AL	Presser Bar Regulating Screw Set Screw
200364C	Bobbin Case Opener Lever Hinge Stud Set Screw
200364C	Hook Bushing (lower) Set Screw
200364C	Needle Vibrating Regulating Stud Cap Set Screw
200374AL	Needle Bar Connecting Link Stud Set Screw
200378C	Arm Shaft Connection Belt Pulley (hook vibrating) Set Screw
200378C	Arm Shaft Needle Bearing (center) Collar Set Screw
200378C	Hook Driving Shaft (front) Ball Bearing Collar Set Screw
200378C	Hook Driving Shaft Coupling (front) Set Screw
200382ALX	Feed Driving Eccentric Adjusting Disc Spring Collar Position Screw
200382ALX	Hook Driving Gear Set Screw
200382ALX	Hook Driving Pinion Set Screw
200382ALX	Hook Driving Shaft Coupling Set Screw
200382ALX	Hook Vibrating Eccentric Adjusting Disc Spring Collar Position Screw
200382ALX	Hook Vibrating Shaft Stop Collar Set Screw
200382ALX	Needle Vibrating Gear (spiral) Set Screw
200382ALX	Needle Vibrating Gear Shaft Collar Set Screw
200382ALX	Needle Vibrating Pinion (spiral) Set Screw
200383C	Needle Bar Connecting Link Stud Set Screw
200383C	Take-up Lever Hinge Stud Set Screw
200386C	Needle Vibrating Regulating Stud Sleeve Set Screw



167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
200387C	Needle Bar Set Screw
200389C	Face Plate Hinge Pin Set Screw
200393C	Feed Driving Rock Shaft Collar Set Screw
200394C	Hook Vibrating Bell Crank Hinge Stud Set Screw
200394C	Hook Vibrating Eccentric Connection Guide Stud Set Screw
200428C	Needle Bar Crank Position Screw
200439C	Hook Vibrating Yoke Position Screw
200446C	Hook Bushing (upper) Position Screw
200541E	Hook Driving Shaft (front) Ball Bearing Retaining Plate Screw
200545E	Feed Driving Connection Hinge Screw
200566D	Needle Vibrating Eccentric Cover Screw
200567X	Bobbin Case Stop Screw
200570E	Bed Hinge Connection Screw
200571XC	Face Plate Lock Spring Screw
200581X	Needle Bar Connecting Link Guide Block Gib Screw
200582X	Needle Vibrating Eccentric Indexed Plate Screw
200582X	Thread Guide Screw
200590X	Hook Washer Screw
200594E	Bobbin Case Tension Spring Screw
200602C	Arm Shaft Connection Belt Pulley (hook driving) Position Screw
200653C	Presser Bar Lifter Hinge Screw
200738X	Knee Lifter Lifting Lever Stop Screw
200904E	Take-up Lever Oiling Felt Screw
200904E	Take-up Lever Oiling Wick Eyelet Screw

167wl01 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
200919C	Hook Vibrating Pitman Hinge Screw
200956X	Hook Vibrating Pitman Hinge Screw Pinch Screw
200978X	Thread Controller Disc Screw
200984C	Bobbin Case Tension Spring Regulating Screw
201188C	Feed Bar Hinge Stud (eccentric) Set Screw
201199F	Thread Controller Stud with 204925
201220C	Feed Lifting Eccentric Set Screw
201220C	Hook Driving Shaft (front) Ball Bearing Collar Position Screw
201220C	Hook Driving Shaft Coupling (back) Position Screw
201220C	Hook Driving Gear Position Screw
201222C	Hook Driving Shaft Coupling (front) Position Screw
201224X	Tension Stud
201253F	Hook Gib Screw
201349C	Bobbin Case Opener Lever Driving Screw Stud
201522E	Feed Driving Connection Hinge Screw Nut
201542C	Bobbin Case Opener Lever Driving Screw Stud Nut
201572X	Tension Thumb Nut
201572X	Thread Controller Stud Thumb Nut
202005	Arm Screw Washer
*202056	Bobbin Case Base Latch Pin
202244	Arm Shaft Bushing (front) Oil Packing (wick)
202244	Hook Driving Shaft Oiling Wick
202244	Hook Saddle Shaft (hollow) Oiling Wick
202253	Arm Shaft Connection Belt Pulley (hook driving) Spring Flange

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
202253	Hook Driving Shaft Connection Belt Pulley Spring Flange
202253	Hook Vibrating Shaft Connection Belt Pulley Spring Flange
202254	Needle Bar Connecting Link Stud Oil Packing (wick)
202258	Bed Hinge Connection
202277	Bobbin Case Opener Lever Hinge Stud Oil Packing (wick)
202277	Needle Bar Connecting Stud Oil Packing (wick)
202277	Needle Bar Frame Pitman Oil Packing (wick)
202277	Take-up Lever Driving Stud Oil Packing (wick)
202324	Arm Shaft Connection Belt Pulley (hook vibrating) Spring Flange
202335	Presser Bar 244033 with 200074F
202337	Presser Bar Position Guide
202338	Presser Bar Position Guide Lever with 200086C
202346	Presser Bar Spring Stop Rod
202399	Take-up Lever Driving Stud with 202277
202401	Take-up Lever Oiling Felt
202423	Take-up Lever Hinge Stud Oil Packing (wick)
202554	Presser Bar Lifter
202923	Presser Foot Shank
203101	Bobbin Case Opener Lever Driving Screw Stud Oil Packing (wick)
203172	Needle Bar Crank Friction Washer
203172	Needle Vibrating Gear Friction Washer
203211	Bobbin Case Base Latch
203212	Bobbin Case Base Latch Plunger

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
203213	Bobbin Case Base Latch Spring
203216	Bobbin Case Washer (cloth)
203244	Feed Driving Rock Shaft Collar with two 200393C
203376	Throat Plate Position Pin
203525	Hook Gib
204235	Arm Position Pin
204271	Tension Release Washer
204925	Thread Controller Stud Washer
206608	Presser Bar Lifting Releasing Lever Bracket Spring
207080	Arm Shaft Bushing (front) with 202244
210548	Needle Bar Frame Hinge Stud
210557	Needle Bar Frame Pitman Eccentric Stud
210699	Needle Vibrating Gear (spiral) with two 200382ALX
210700	Needle Vibrating Pinion (spiral) with two 200382ALX
210758	Presser Bar Spring
210789	Presser Bar Lifting Releasing Lever Bracket
210882	Needle Bar Connecting Stud Swivel with 200387C
210954	Thread Guide (lower)
213479	Attachment Slide Plate Friction Slide Spring
223655	Feed Lifting Eccentric Oiling Felt
223702	Tension Bracket with two each 201224X and 236060
223703	Tension Release Lever
223704	Tension Release Plunger
223705	Tension Bracket complete, Nos. 200978X, 201199F, 223702, 223703, 223706, 237174, two each 13710, 200309E, 204271, 223704, three 201572X and four 244048

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
223706	Thread Controller Disc
223811	Bed Slide (back) Stop
223812	Bed Slide (back) Stop Spring
224005	Bobbin Case Opener Lever with 201349C, 201542C and 203101
*224016	Hook (sewing)
224017	Hook 224016 with 203525, 224025, two each 200590X and 201253F
224019	Hook Bushing (lower) (bronze)
224020	Hook Bushing (upper) (bronze)
224021	Hook Driving Pinion (spiral) with two 200382ALX
224022	Hook Driving Pinion Thrust Washer
224025	Hook Washer
224028	Thread Guide (top of Arm)
224052	Feed Lifting Eccentric Fork with 200173D and 223655
224104	Arm Shaft Connection Belt Pulley (hook driving) with 200327C, 200602C and two 202253
224144	Attachment Slide Plate with 213479 and 236061
224195	Hook Driving Shaft Connection Belt (reinforced neoprene)
224392	Arm Shaft Oil Packing (wick)
224413	Knee Lifter Lifting Rod Roller Bracket complete
225486	Wrench
225498	Screw Driver
225554	Wrench
225837	Feed Lifting Eccentric Fork Screw Washer
227227	Knee Lifter Connection Lever Lifting Rod Stop Collar with 200113F

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
228452	Machine Base Oil Drain Jar complete
228476	Screw Driver (Bobbin Case)
228736	Drip Pan
228754	Knee Lifter Rock Lever
228777	Thread Unwinder
230795	Presser Foot Hinge Pin
232131	Knee Lifter Lifting Lever Washer
232131	Knee Lifter Connection Lever Washer
233939	Bobbin
235072	Tension Release Lever Rod
235769	Bobbin Case Base with 202056, 203211 to 203213 and 203216
235771	Bobbin Case Tension Spring
236060	Tension Disc Position Pin
236061	Attachment Slide Plate Friction Slide
237174	Thread Controller Spring
240067	Knee Lifter Connection Lever
240231	Feed Driving Eccentric Friction Gib
240231	Hook Vibrating Eccentric Friction Gib
240231	Needle Vibrating Eccentric Friction Gib
240245	Feed Driving Eccentric Regulating Stud Retaining Spring
240245	Hook Vibrating Eccentric Regulating Stud Retaining Spring
240564	Knee Lifter Connection Lever Lifting Rod
240566	Wrench (1/16 in. hex)

167wl01 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
241342	Needle Bar Connecting Link Guide Block Gib
241344	Needle Bar Connecting Link Stud with 202254
241345	Needle Bar Connecting Stud with 202277
241346	Needle Bar Connecting Stud 241345 with 210882
241347	Needle Bar Crank with 200335C, 200374AL, 200383C and 200428C
241349	Needle Bar Frame Guide Stud
241352	Presser Bar Bushing
241356	Take-up Lever Hinge Stud with 202423
241357	Take-up Lever Oiling Wick Eyelet
241360	Thread Controller Spring Stop
241410	Needle Bar Connecting Link Guide Block
241674	Bobbin Case Oiling Felt
241675	Bobbin Case Oiling Felt Retainer
241676	Bobbin Case with 200594E, 200984C, 235771, 241674, 241675 and two 350405C
241677	Bobbin Case complete, Nos. 235769 and 241676
244033	Presser Bar (hollow)
244048	Tension Disc
244084	Presser Bar Regulating Screw Set Screw Packing (fibre)
247476	Strip Reel complete
248404	Bobbin Case Opener
248405	Bobbin Case Opener Lever Link
248416	Feed Driving Eccentric Adjusting Disc Spring Collar with two 200382ALX

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
248416	Hook Vibrating Eccentric Adjusting Disc Spring Collar with two 200382ALX
248821	Hook Vibrating Bell Crank Hinge Stud Oil Packing (wick)
259462	Bobbin Winder
263041	Take-up Lever Oiling Wick 263090 with 263097
263090	Take-up Lever Oiling Wick
*263097	Take-up Lever Oiling Wick Wire
264709	Needle Vibrating Regulating Stud Cap with 200364C
264828	Needle Vibrating Gear Shaft Collar with two 200382ALX
265088	Bobbin Case Opener Lever Hinge Stud with 202277
*265601	Arm
265602	Arm Cover
265603	Arm Shaft with 224392 and 350431E
265604	Arm Shaft Bushing (center)
265605	Arm Shaft Bushing 265604 with 265608
265606	Arm Shaft Connection Belt Pulley (hook vibrating) with 202324 and two 200378C
265607	Arm Shaft Connection Belt Pulley (hook vibrating) Flange
265608	Arm Shaft Needle Bearing (center)
265609	Arm Shaft Needle Bearing (center) Collar with two 200378C
*265610	Bed with 203376
265611	Bed Slide (back) for use with Throat Plates in gauges from 1/4 to 15/32 inch
265612	Bed Slide (front) for use with Throat Plates in gauges from 1/4 to 15/32 inch



167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
265613	Bed Slide (front) for use with Throat Plates in gauges from 1/2 to 1 inch
265618	Face Plate with 268033
265619	Face Plate Lock Spring
265636	Needle Bar
265637	Feed Driving Connection
265638	Feed Driving Connection 265637 with 265751
265639	Feed Driving Connection Thrust Washer
265641	Feed Driving Eccentric Regulating Stud
265641	Hook Vibrating Eccentric Regulating Stud
265642	Feed Driving Eccentric Regulating Stud Socket
265643	Feed Driving Flange with 200333C, 200346C, two each 350562XC and 350578XC
265644	Feed Driving Rock Shaft
265645	Feed Driving Rock Shaft Bushing (left)
265646	Feed Driving Rock Shaft Bushing (right)
265647	Feed Lifting Eccentric with 201220C
265651	Hook Driving Shaft (back)
265653	Hook Driving Shaft (front) Ball Bearing
265654	Hook Driving Shaft (front) Ball Bearing Collar with 200378C and 201220C
265655	Hook Driving Shaft (front) Ball Bearing Collar 265654 with 265653
265656	Hook Driving Shaft (front) Ball Bearing Retaining Plate
265657	Hook Driving Shaft Connection Belt Pulley with 200070C, 202253 and 350576C

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
265658	Hook Driving Shaft Coupling (back) with 200382ALX and 201220C
265660	Hook Saddle (left) with two 350175E
265661	Hook Saddle 265660 with 200446C, 224019, 224020 and two 200364C
265662	Hook Saddle (right) with two 350175E
265663	Hook Saddle 265662 with 200446C, 224019, 224020 and two 200364C
265664	Hook Saddle Shaft (hollow)
265665	Hook Saddle Support
265666	Hook Saddle (left) complete, Nos. 200118D, 224005, 224021, 224022, 248404, 248405, 265088, 265661, 265686, 265719, 265720, two each 200186X and 200567X
265667	Hook Saddle (right) complete, Nos. 200118D, 224005, 224021, 224022, 248404, 248405, 265088, 265663, 265686, 265719, 265720, two each 200186X and 200567X
265668	Hook Vibrating Bell Crank with two 270371
265669	Hook Vibrating Bell Crank Bracket with three 200394C
265670	Hook Vibrating Bell Crank Hinge Stud with 248821
265671	Hook Vibrating Bell Crank Swivel
265672	Hook Vibrating Bell Crank Swivel Retainer
265673	Hook Vibrating Eccentric Adjusting Disc with 265722
265674	Hook Vibrating Eccentric Connection
265675	Hook Vibrating Eccentric Connection 265674 with 265751
265676	Hook Vibrating Eccentric Connection Guide Stud
265677	Hook Vibrating Eccentric Connection Stop Collar with 200354C and 200362C
265678	Hook Vibrating Eccentric Regulating Stud Socket

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
265679	Hook Vibrating Pitman with two 200956X
*265680	Hook Vibrating Pitman Hinge Screw Bearing
265681	Hook Vibrating Shaft
265682	Hook Vibrating Shaft Bushing with 265728
265684	Hook Vibrating Shaft Stop Collar with two 200382ALX
265685	Hook Vibrating Yoke with 200363AL, 200439C and 265680
265686	Loop Deflector
265687	Needle Bar Connecting Link
265688	Needle Bar Frame with 200070C
265689	Needle Bar Frame Pitman with 202277
265690	Needle Bar Frame Pitman 265689 with 265751
265691	Needle Vibrating Eccentric Adjusting Disc with 265722
265693	Needle Vibrating Eccentric Cover Plate
265694	Needle Vibrating Eccentric Indexed Plate
265695	Needle Vibrating Gear Shaft
265696	Needle Vibrating Regulating Stud
265697	Needle Vibrating Regulating Stud Sleeve
265698	Needle Vibrating Regulating Stud complete, Nos. 264709, 265696, 265697 and 270026
265715	Hook Vibrating Shaft Connection Belt (reinforced neoprene)
265716	Knee Lifter Lifting Lever
265717	Needle Bar Frame Pitman Needle Bearing Oil Tube (brass)
265719	Bobbin Case Stop

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
265720	Hook and Bobbin Case complete, Nos. 224017 and 241677
265721	Hook Vibrating Eccentric
265721	Needle Vibrating Eccentric
265722	Needle Vibrating Eccentric Stop Pin
265722	Hook Vibrating Eccentric Stop Pin
265724	Machine Pulley (aluminum alloy casting) for "V" belt, (outside diam. of belt groove 2.9 in.) (rim diam. 4 in.) (inside belt groove) with 350540C and 350541C
265725	Machine Pulley 265724 with 272142
265728	Hook Vibrating Shaft Bushing Oil Packing (wick)
265740	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 1/4 in. gauge, for 265757 and 265766
265741	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 5/16 in. gauge for 265758 and 265767
265742	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 3/8 in. gauge, for 265759 and 265768
265743	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 7/16 in. gauge, for 265760 and 265769
265744	Throat Plate, 50 needle hole, for needle sizes 16 and 18, in 1/2 in. gauge, for 265761 and 265770
265745	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 9/16 in. gauge, for 265762 and 265771
265746	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 5/8 in. gauge, for 265763 and 265772
265747	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 3/4 in. gauge, for 265764 and 265773
265748	Throat Plate, 50 needle hole, for needle sizes 16 and 18, 1 in. gauge, for 265765 and 265774
265751	Feed Driving Connection Needle Bearing

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
265751	Hook Vibrating Eccentric Connection Needle Bearing
265751	Needle Bar Frame Pitman Needle Bearing
265752	Bed Slide (back) for use with Throat Plates in gauges from 1/2 to 1 in.
265753	Feed Bar
265754	Feed Bar 265753 with 224052, 225837 and 350594C
265755	Feed Bar Crank with two each 200354C and 201188C
265756	Feed Bar Hinge Stud (eccentric)
265758	Feed Dog (back) for 1/4 inch and 5/16 inch gauge, for 265740 and 265741
265759	Feed Dog (back), 3/8 inch gauge, for 265742
265760	Feed Dog, (back), 7/16 inch gauge, for 265743
265761	Feed Dog (back), 1/2 inch gauge, for 265744
265762	Feed Dog (back), 9/16 inch gauge, for 265745
265763	Feed Dog (back), 5/8 in. gauge, for 265746
265764	Feed Dog (back), 3/4 in. gauge, for 265747
265765	Feed Dog (back), 1 in. gauge, for 265748
265767	Feed Dog (front), for 1/4 in. and 5/16 in. gauge, for 265740 and 265741
265768	Feed Dog (front), 3/8 in. gauge, for 265742
265769	Feed Dog (front), 7/16 in. gauge, for 265743
265770	Feed Dog (front), 1/2 in. gauge, for 265744
265771	Feed Dog (front), 9/16 in. gauge, for 265745
265772	Feed Dog (front), 5/8 in. gauge, for 265746
265773	Feed Dog (front), 3/4 in. gauge, for 265747
265774	Feed Dog (front), 1 in. gauge, for 265748

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
265775	Hook Driving Shaft (front)
265776	Hook Driving Shaft Coupling (front) with 200378C and 201220C
265777	Presser Foot Plate, 50 needle hole, 1/4 in. gauge
265778	Presser Foot (hinged) complete, 50 needle hole, 1/4 in. gauge, Nos. 202923, 230795 and 265777
265779	Presser Foot Plate, 50 needle hole, 5/16 in. gauge
265780	Presser Foot (hinged) complete, 50 needle hole, 5/16 in. gauge, Nos. 202923, 230795 and 265779
265781	Presser Foot Plate, 50 needle hole, in gauges 3/8 and 7/16 inch
265782	Presser Foot (hinged) complete, 50 needle hole, in gauges 3/8 and 7/16 in., Nos. 202923, 230795 and 265781
265783	Presser Foot Plate, 50 needle hole, 1/2" gauge
265784	Presser Foot (hinged) complete, 50 needle hole, 1/2 in. gauge, Nos. 202923, 230795 and 265783
265785	Presser Foot Plate, 50 needle hole, in gauges 9/16 and 5/8 inch
265786	Presser Foot (hinged) complete, 50 needle hole, in gauges 9/16 and 5/8 in., Nos. 202923, 230795 and 265785
265787	Presser Foot Plate, 50 needle hole, 3/4 in. gauge
265788	Presser Foot (hinged) complete, 50 needle hole, 3/4 in. gauge, Nos. 202923, 230795 and 265787
265789	Presser Foot Plate, 50 needle hole, 1 in. gauge
265790	Presser Foot (hinged) complete, 50 needle hole, 1 in. gauge, Nos. 202923, 230795 and 265789
265791	Take-up Lever
267004	Feed Driving Rock Shaft Bushing (left) Oil Stop Screw Gasket

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
267177	Face Plate Hinge Pin
267188	Hook Driving Gear (spiral) with 200382ALX and 201220C
267246	Thread Guide (upper)
267269	Needle Holder in gauges from 1/4 to 15/32 in., in steps of 1/32 in., with two 200141F
267270	Needle Holder in gauges from 1/2 to 3/4 in., in steps of 1/32 in., with two 200141F
267271	Needle Holder in gauges from 25/32 to 1 in., in steps of 1/32 in., with two 200141F
267288	Thread Retainer
267289	Knee Lifter Lifting Lever Spring
268033	Face Plate Lock Stud
268197	Face Plate Lock Spring Plate
270015	Feed Driving Connection Crank with 200040E
270017	Feed Driving Eccentric
270018	Feed Driving Eccentric Adjusting Disc
270026	Feed Driving Eccentric Regulating Stud Spring
270026	Hook Vibrating Eccentric Regulating Stud Spring
270026	Needle Vibrating Regulating Stud Spring
270034	Hook Vibrating Shaft Connection Belt Pulley with 202253 and two 200070C
270137	Feed Driving Eccentric Adjusting Disc Spring
270137	Hook Vibrating Eccentric Adjusting Disc Spring
270371	Hook Vibrating Bell Crank Needle Bearing
270508	Needle Vibrating Eccentric Adjusting Disc Spring

167w101 List of Parts - Numerical Order

<u>Part Number</u>	<u>Description</u>
270539	Needle Vibrating Flange with 200333C, 200346C, two each 350562XC and 350578XC
270944	Hook Vibrating Flange with 200333C, 200346C, two each 350562XC and 350578XC
272142	Arm Shaft Ball Bearing (back) (double shielded Bearing)
272144	Hook Driving Shaft (back) Ball Bearing
272144	Hook Vibrating Shaft Ball Bearing
350175E	Hook Saddle Pinch Screw
350405C	Bobbin Case Oiling Felt Retainer Screw
350431E	Arm Shaft Oil Packing Stop Screw
350464X	Knee Lifter Lifting Lever Hinge Screw
350525X	Feed Driving Rock Shaft Bushing (left) Oil Stop Screw
350540C	Machine Pulley Position Screw
350541C	Machine Pulley Set Screw
350562XC	Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw
350562XC	Hook Driving Eccentric Friction Gib Adjusting Screw Set Screw
350562XC	Needle Vibrating Eccentric Friction Gib Adjusting Screw Set Screw
350576C	Hook Driving Shaft Connection Belt Pulley Position Screw
350577X	Presser Bar Pressure Regulating Screw
350578XC	Feed Driving Eccentric Friction Gib Adjusting Screw
350578XC	Hook Vibrating Eccentric Friction Gib Adjusting Screw
350578XC	Needle Vibrating Eccentric Friction Gib Adjusting Screw
350594C	Feed Lifting Eccentric Fork Screw
135x7	Needles #16