

# **SINGER**

**262-1,-2,-3**

Form 21226  
(162)  
Printed in U.S.A.

LIST OF PARTS COMPLETE

FOR

Machine No. 262-1, 262-2 and 262-3

THE SINGER MANUFACTURING COMPANY

**SUPPLEMENTARY PARTS LIST FOR**  
**SINGER\***  
**MACHINES 262-1 AND 262-3**

<b>MACHINE 262-1</b>		
Same as 262-2, except for the following:		
PARTS ADDED	DESCRIPTION	PARTS REMOVED
146121	Arm Shaft (horizontal) and Crank with 1036(830), 140542(830) and 140552(830)	146075
146122	Arm Shaft (horizontal) 146121 with 143494-001, 140359(805) and 143236	146076
146123	Bed Rotary Shaft	146081
146124	Bed Rotary Shaft 146123 with 146558	146082
152579	Combination of Feed and Stitch Regulator Parts, Nos. 143015, 143040, 143049, 146864, 146883 and 152578	146242
142357	Feed Dog for use with 146247	142363
152578	Feed Lifting Eccentric with three 440(830)	146914
146247	Throat Plate for 10 to 18 stitches to the inch for chaining-off for use with 142357	146248-002
<b>MACHINE 262-3</b>		
Same as 262-2, except for the following:		
146152	Arm Shaft (horizontal) and Crank with 1036(830), 140542(830) and 140552(830)	146075
146153	Arm Shaft (horizontal) 146152 with 143494-001, 140359(805) and 143236	146076
146154	Bed Rotary Shaft	146081
146155	Bed Rotary Shaft 146154 with 146558	146082
160618	Edge Guide	-
922(819)	Edge Guide Thumb Screw	-
142388	Feed Dog, for use with 54129	142363
131355	Presser Foot, (hinged) Nos. 26276, 131353 and 131354	146202
131353	Presser Foot Plate	-
131354	Presser Foot Shank with 442(830) and 1695(809)	-
442(830)	Presser Foot Shank Adjusting Screw	-
1695(809)	Presser Foot Shank Adjusting Screw Nut	-
146160	Thread (looper) Take-up (small) with two 465(830)	-
465(830)	Thread (looper) Take-up (small) Set Screw	-
146161	Thread (looper) Take-up Stripper Plate	146625
146237	Thread (looper) Take-up Stripper Plate 146161 with 237(809), 139148, 146623, 146624, 146626, 146628 and two 190(809)	146603
146235	Thread (looper) Take-up Stripper Staple (left)	-
190(809)	Thread (looper) Take-up Stripper Staple (left) Screw	-
54129	Throat Plate for use with 142388	146248-002

**THE SINGER COMPANY**

\*A Trademark of THE SINGER COMPANY

List of Parts Complete

for

No. 262-1 Machine

No.		Name
16532	2	Arm Dowel Pin
50608(813)		Arm Hole Plug Screw (for access to Needle Bar Bushing Oil Wick)
139017		Arm Hole Plug Screw Washer
146551	2	Arm Screw Stud (back)
146552	2	Arm Screw (front)
146121		Arm Shaft (horizontal) with 1036(830) and 140542(830)
146122		Arm Shaft (horizontal) 146121 with 143494
146864		Arm Shaft (horizontal) Bevel Gear, right hand spiral with 140333(830) and two 1259(830)
140333(830)		Arm Shaft (horizontal) Bevel Gear Position Screw
1259(830)	2	Arm Shaft (horizontal) Bevel Gear Set Screw
152503		Arm Shaft (horizontal) Bushing (center)
140296(830)		Arm Shaft (horizontal) Bushing (center) Set Screw
147112		Arm Shaft (horizontal) Flanged Bushing (back)
146790		Arm Shaft (horizontal) Flanged Bushing (back) Oil Sump Tube
207(805)		Arm Shaft (horizontal) Flanged Bushing (back) Oil Sump Tube Holder Screw
140296(830)		Arm Shaft (horizontal) Flanged Bushing (back) Set Screw
147005		Arm Shaft (horizontal) Flanged Bushing (front)
140331(830)		Arm Shaft (horizontal) Flanged Bushing (front) Set Screw

Parts for 262-1 Machine

No.	Name
50555(805)	Arm Shaft (horizontal) Plug Screw
144(804)	Arm Shaft (horizontal) Screw (back)
140359(805)	Arm Shaft (horizontal) Screw Plug (front)
143236	Arm Shaft (horizontal) Screw Plug (front) Washer (fiber)
147468	Arm Shaft (horizontal) Thrust Collar with two 457(830)
457(830)	2 Arm Shaft (horizontal) Thrust Collar Set Screw
146077	Arm Shaft (upright)
143015	Arm Shaft (upright) Bevel Gear (lower) left hand spiral with two 1259(830)
1259(830)	2 Arm Shaft (upright) Bevel Gear (lower) Set Screw
143015	Arm Shaft (upright) Bevel Gear (upper) left hand spiral with two 1259(830)
1259	2 Arm Shaft (upright) Bevel Gear (upper) Set Screw
146505	Arm Shaft (upright) Bushing (lower)
140298(830)	Arm Shaft (upright) Bushing (lower) Set Screw
147111	Arm Shaft (upright) Bushing (upper)
50504(830)	Arm Shaft (upright) Bushing (upper) Set Screw
146867	Arm Top Cover
146868	Arm Top Cover and Stitch Regulator Cap
146869	Arm Top Cover and Stitch Regulator Cap complete, Nos. 333(819), 146868, 146870 and 146871
146870	Arm Top Cover and Stitch Regulator Cap Gasket
146871	Arm Top Cover and Stitch Regulator Cap Latch
335(819)	Arm Top Cover and Stitch Regulator Cap Latch Screw

Parts for 262-1 Machine

No.		Name
146508		Arm Top Cover Gasket
51369(813)	4	Arm Top Cover Screw
142385		Attachment Slide
142386		Attchment Slide complete, Nos. 51282(819), 142385 and 146874
146874		Attachment Slide Spring
51282(819)		Attachment Slide Spring Screw
704		<i>attachment thumb screw</i>
143024		Bed Hole Plug
146078		Bed Leg (back)
965(805)	2	Bed Leg (back) Screw
146079		Bed Leg (front, long)
146123		Bed Rotary Shaft
146124		Bed Rotary Shaft 146123 with 132790, 146556, 164232 and two 131928 (for Agents only)
146517		Bed Rotary Shaft Bevel Gear, right hand spiral with two 1259(830)
1259(830)	2	Bed Rotary Shaft Bevel Gear Set Screw
146518		Bed Rotary Shaft Bushing (back)
50554(830)		Bed Rotary Shaft Bushing (back) Set Screw
146519		Bed Rotary Shaft Bushing (front)
50554(830)		Bed Rotary Shaft Bushing (front) Set Screw
64342		Bed Rotary Shaft Collar with 454(830)
454(830)		Bed Rotary Shaft Collar Set Screw
146521		Bed Slide (left)
4307		Bed Slide (left) Spring

Parts for 262-1 Machine

No.		Name
725(819)	2	Bed Slide (left) Spring, Screw
146522		Bed Slide (left) complete, Nos. 4307, 146521 and two 725(819)
146127		Bed Slide (right) Body
146688		Bed Slide (right) Latch
146689		Bed Slide (right) Latch Guide
1470(819)	2	Bed Slide (right) Latch Guide Screw
146690		Bed Slide (right) Latch Spring
146691		Bed Slide (right) Spring
1470(819)	2	Bed Slide (right) Spring Screw
146131		Bed Slide (right) complete, Nos. 146127, 146688, 146689, 146690, 146691 and four 1470(819)
152579		Combination of Feed and Stitch Regulator Parts, Nos. 143015, 143040, 143049, 146864, 146883 and 152578 (for Agents only)
143447		Face Plate
143543		Face Plate Gasket
140061(809)	3	Face Plate Screw (lower)
140050(809)		Face Plate Screw (upper)
146240		Feed Bar
146241		Feed Bar 146240 with 1607(819) and 140695(819)
146243		Feed Bar Assembly 146241 with 146244 (for Agents only)
147022		Feed Bar Carrier with two each 158(805) and 176(805)
158(805)	2	FeedBar Carrier Clamping Screw
147023		Feed Bar Carrier Hinge Pin

Parts for 262-1 Machine

No.		Name
176(805)	2	Feed Bar Carrier Hinge Pin Clamping Screw
143031		Feed Bar Carrier Oil Wick (felt) (for oiling Feed Bar Connecting Link)
143032		Feed Bar Carrier Oil Wick Holder
147024		Feed Bar Carrier Oil Wick Holder 143032 with 143031
228(805)	2	FeedBar Carrier Oil Wick Holder Screw
52266		Feed Bar Slide Block
52267		Feed Bar Slide Block 52266 with 125060
125060		Feed Bar Slide Block HingeStud
146881		Feed Bar Slide Block Oil Wick
146539		Feed Bar Slide Block Oil Wick Holder
50579(809)		Feed Bar Slide Block Oil Wick Holder Screw
142357		Feed Dog, 23 teeth (18 teeth to the inch) for 10 to 18 stitches per inch for chaining off, for use with 126202 and 146247
		Note: No. 142357 is regularly furnished unless otherwise specified on order.
157(809)		Feed Dog Screw
140695(819)		Feed Dog Stop Screw
1607(819)		Feed Dog Stop Screw Nut
51061(830)	3	Feed Eccentric Body Set Screw
7071	2	Feed Eccentric Clamping Washer
217(809)	2	Feed Eccentric Clamping Washer Screw
146883		Feed Eccentric (adjustable) complete, Nos. 50328(803), two each 217(809), 7071 and three 51061(830)
152578		Feed Lifting Eccentric with three 440(830)



Parts for 262-1 Machine

No.		Name
440(830)	3	Feed Lifting Eccentric Set Screw
146095		Feed Lifting Rock Shaft
146096		Feed Lifting Rock Shaft Nos. 197(805), 140359(805), 143236, 146095, 146891, 146892, 147047 and two 147037
143052		Feed Lifting Rock Shaft and Feed Rock Shaft Oil Wick Holder
228(805)		Feed Lifting Rock Shaft and Feed Rock Shaft Oil Wick Holder Screw
147028		Feed Lifting Rock Shaft Bushing (back)
147042		Feed Lifting Rock Shaft Bushing (front)
447(830)	2	Feed Lifting Rock Shaft Bushing set Screw
143039		Feed Lifting Rock Shaft Cap
223(805)	2	Feed Lifting Rock Shaft Cap Screw
147029		Feed Lifting Rock Shaft Collar with two 460(830)
460(830)	4	Feed Lifting Rock Shaft Collar Set Screw
143040		Feed Lifting Rock Shaft Connecting Rod
140230(803)		Feed Lifting Rock Shaft Connecting Rod Hinge Screw
1518(809)		Feed Lifting Rock Shaft Connecting Rod Hinge Screw Nut
146094		Feed Lifting Rock Shaft Crank with 140228(830)
140228(830)		Feed Lifting Rock Shaft Crank (back) Clamping Screw
146889		Feed Lifting Rock Shaft Crank (front) with 157(819)
146244		Feed Lifting Rock Shaft Crank (front) 146889 with 50579(809), 52267, 146539 and 146881
157(819)		Feed Lifting Rock Shaft Crank (front) Clamping Screw
140359(805)		Feed Lifting Rock Shaft Oil Plug Screw

Parts for 262-1 Machine

No.		Name
143236		Feed Lifting Rock Shaft Oil Plug Screw Washer (fiber)
146891		Feed Lifting Rock Shaft Oil Wick
146892		Feed Lifting Rock Shaft Oil Wick (long)
147037	2	Feed Lifting Rock Shaft Oil Wick (short)
147047		Feed Lifting Rock Shaft Oil Wick Clamping Plate
197(805)		Feed Lifting Rock Shaft Oil Wick Clamping Plate Screw
50328(803)		Feed Regulating Screw
146091		Feed Rock Shaft
146092		Feed Rock Shaft Nos. 197(805), 140359(805), 143236, 146091, 146891, 146896, 147047 and two 146045
147028		Feed Rock Shaft Bushing (back)
447(830)		Feed Rock Shaft Bushing (back) Set Screw
146097		Feed Rock Shaft Bushing (front)
624(830)		Feed Rock Shaft Bushing (front) Set Screw
146098		Feed Rock Shaft Cap
50258(805)		Feed Rock Shaft Cap Screw (long)
223(805)		Feed Rock Shaft Cap Screw (short)
147029		Feed Rock Shaft Collar with two 460(830)
460(830)	2	Feed Rock Shaft Collar Set Screw
143049		Feed Rock Shaft Connecting Rod
140230(803)		Feed Rock Shaft Connecting Rod Hinge Screw
1518(809)		Feed Rock Shaft Connecting Rod Hinge Screw Nut
146099		Feed Rock Shaft Crank with 140228(803)

Parts for 262-1 Machine

No.	Name
140228(803)	Feed Rock Shaft Crank Clamping Screw
140359(805)	Feed Rock Shaft Oil Plug Screw
143236	Feed Rock Shaft Oil Plug Screw Washer (fiber)
146891	Feed Rock Shaft Oil Wick
146896	Feed Rock Shaft Oil Wick (long)
147045	2 Feed Rock Shaft Oil Wick (short)
147047	Feed Rock Shaft Oil Wick Clamping Plate
197(805)	Feed Rock Shaft Oil Wick Clamping Plate Screw
131133	Looper
131134	Looper 131133 with 229(809) and 131135
146550	Looper Avoiding Eccentric with two 1259(830)
146234	Looper Avoiding Eccentric Connection (forked) with two 896(830)
896(830)	2 Looper Avoiding Eccentric Connection Clamping Screw
1259(830)	2 Looper Avoiding Eccentric Set Screw
146554	Looper Avoiding Eccentric Slide Block
146556	Looper Ball Crank
146897	Looper Ball Crank Arm with 51320(830)
146923	Looper Ball Crank Arm 146897 with 1520(809), 128551 and 146919
51320(830)	Looper Ball Crank Arm Clamping Screw
132790	Looper Ball Crank Connection Ball Sleeve (two pieces)
164232	Looper Ball Crank Connection Ball Sleeve Guide

Parts for 262-1 Machine

No.	Name
146557	Looper Ball Crank Connection with two 131928 (for Agents only)
146558	Looper Ball Crank Connection with 132790, 146556, 164232 and two 131928 (for Agents only)
896(830)	2 Looper Ball Crank Connection Cap (lower) Screw
131927	2 Looper Ball Crank Connection Cap (upper) Screw Stud
51715(830)	2 Looper Ball Crank Connection Cap (upper) Screw Stud Nut
131928	Looper Ball Crank Connection Cap (upper) Screw Stud Nut Lock Washer
146559	Looper Ball Crank Hinge Pin
448(830)	2 Looper Ball Crank Hinge Pin Set Screw
146948	Looper Ball Crank Pitman Ball Screw Stud (right)
1520(809)	Looper Ball Crank Pitman Ball Screw Stud (right) Nut
128551	Looper Ball Crank Pitman Ball Screw Stud (right) Nut Locking Plate
146730	Looper Ball Crank Pitman End Bearing (left) and two 175(830) (for Agents only)
175(830)	2 Looper Ball Crank Pitman End Bearing (left) Cap Screw
1664(809)	Looper Ball Crank Pitman End Bearing (left) Nut
175(830)	2 Looper Ball Crank Pitman End Bearing (right) Body Cap Screw
146918	Looper Ball Crank Pitman Head (right) and two 175(830)
146919	Looper Ball Crank Pitman Head (right) 146918 with 146948
146963	Looper Ball Crank Pitman Rod
146964	Looper Ball Crank Pitman Rod 146963 with 51769(803)
51769(803)	Looper Ball Crank Pitman Rod Nut

Parts for 262-1 Machine

No.	Name
146947	Looper Ball Crank Pitman Rod Oil Shield
51460(805)	Looper Ball Crank Pitman Rod Oil Shield Screw
7071	Looper Ball Crank Pitman Rod Oil Shield Screw Washer
146018	Looper Holder with 624(830) and 896(830)
146741	Looper Holder 146018 with 1664(809), 146567, and two 175(830)
146567	Looper Holder Bushing (eccentric) with 146647
146647	Looper Holder Bushing Pin
896(830)	Looper Holder Clamping Screw
146105	Looper Holder Hinge Pin
146106	Looper Holder Hinge Pin Spacer
146225	Looper Holder Rock Shaft with 140439(805)
143126	Looper Holder Rock Shaft Bracket Oil Pipe Clamping Sleeve Adaptor
231(805)	Looper Holder Rock Shaft Bracket Oil Plug Screw (back)
140640(805)	Looper Holder Rock Shaft Bracket Oil Plug Screw (front)
147109	Looper Holder Rock Shaft Bracket Oil Plug Screw (front) Washer (fiber)
140734(805)	2 Looper Holder Rock Shaft Bracket Screw
126150	2 Looper Holder Rock Shaft Bracket Screw Washer
146226	Looper Holder Rock Shaft Bushing (back)
448(830)	Looper Holder Rock Shaft Bushing (back) Set Screw
146227	Looper Holder Rock Shaft Bushing (front)
448(830)	Looper Holder Rock Shaft Bushing (front) Set Screw

Parts for 262-1 Machine

No.		Name
140439(805)		Looper Holder Rock Shaft Oil Plug Screw
131135		Looper Needle Guard with 46105
46105		Looper Needle Guard Pin
229(809)		Looper Needle Guard Screw
624(830)		Looper Set Screw
146512		Machine Pulley (disc, power) "V" belt groove (outside diameter of belt groove 2.9 in.) with two 51283(830)
51283(830)	2	Machine Pulley Set Screw
146125		Needle Bar (hollow) with 140239(830)
146126		Needle Bar complete, Nos. 50579(819), 146125 and 146962
146907		Needle Bar Bushing (lower)
1133(830)		Needle Bar Bushing (lower) Set Screw
143490		Needle Bar Bushing (lower and upper) Oil Wick
143491		Needle Bar Bushing (lower and upper) Oil Wick complete, Nos. 143490, 146703 and two 146580
146703		Needle Bar Bushing (lower and upper) Oil Wick Clamp and Retainer
146580	2	Needle Bar Bushing (lower and upper) Oil Wick Clip
143492		Needle Bar Bushing (lower and upper) Oil Wick Guide Tube (inside Face of Arm)
143493		Needle Bar Bushing (upper)
140440(819)		Needle Bar Bushing (upper) Oil Plug Screw
1133(830)		Needle Bar Bushing (upper) Set Screw
143494		Needle Bar Connecting Link with 139533 and 143495

Parts for 262-1 Machine

No.		Name
140552(830)		Needle Bar Connecting Link Hinge Stud Clamping Screw
1036(830)		Needle Bar Connecting Link Hinge Stud Position Set Screw
139533		Needle Bar Connecting Link Screw Cap
143495		Needle Bar Connecting Stud with 140061(805) and 143619
140061(805)		Needle Bar Connecting Stud Clamping Screw
143619		Needle Bar Connecting Stud Oil Wick (felt)
139111		Needle Bar Connecting Stud Slide Block
143496		Needle Bar Connecting Stud Slide Block Guide
1485(805)	2	NeedleBar Connecting Stud Slide Block Guide Screw
59456	2	Needle Bar Connecting Stud Slide Block Guide Screw Washer
140542(830)		Needle Bar Crank Position Screw
146962		Needle Bar Thread Guide
50575(819)		Needle Bar Thread Guide Screw
146108		Needle Guard
146109		Needle Guard Holder
146745		Needle Guard Holder Bracket
190(809)		Needle Guard Holder Bracket Screw
190(809)		Needle Guard Holder Screw
190(809)		Needle Guard Screw
140239(830)		Needle Set Screw
143176	2	Number Plate Rivet
146591		Oil Flow Body
143061	2	Oil Flow Body Gasket
143062		Oil Flow Window

Parts for 262-1 Machine

No.		Name
143063		Oil Flow Window Cap
50257(809)	4	Oil Flow Window Cap Screw
143370		Oil Lead
51369(805)		Oil Lead Screw
146593		Oil Pipe
146022		Oil Pipe with two each 143124 and 143125 for oiling Looper Rock Shaft Hinge Pin
146110		Oil Pipe with two each 143124 and 143125, for oiling Thread (under) Take-up Shaft Front Bearing
143065		Oil Pipe Clamping Sleeve
143066		Oil Pipe Clamping Sleeve Nut
146597		Oil Pipe complete from Oil Pump to Arm Shaft (horizontal) Center Bearing, 146593 with 143065 and 143066 (for Agents only)
143124	4	Oil Pipe Clamping Sleeve
143126	2	Oil Pipe Clamping Sleeve Adaptor for 146024
143126		Oil Pipe Clamping Sleeve Adaptor (fastened to Looper Ball Crank Hinge Pin)
143125	4	Oil Pipe Clamping Sleeve Nut
146659		Oil Pump (Centrifugal) Body
146024		Oil Pump (centrifugal) Body 146659 with 146025 and two 143126
146025		Oil Pump (centrifugal) Body Plug
143071	2	Oil Pump (centrifugal) Body Position Pin
157(805)	3	Oil Pump (centrifugal) Body Screw
146600		Oil Pump (centrifugal) Cover



Parts for 262-1 Machine

No.	Name
143073	Oil Pump (centrifugal) Impeller
50123(805)	Oil Pump (centrifugal) Impeller Locking Screw
146657	Oil Pump (centrifugal) Screen
146658	Oil Pump (centrifugal) Screen Frame
189(805)	3 Oil Pump (centrifugal) Screen Frame Screw
147107	Oil Removing Wick (head end)
149205	Oil Removing Wick (head end) Hinge Plate and Cover
147055	Oil Removing Wick (head end) Hinge Plate and Cover Gasket
197(819)	4 Oil Removing Wick (head end) Hinge Plate and Cover Screw
146745	Oil Removing Wick (head end) Holder Body
147108	Oil Removing Wick (head end) Holder Body 146745 with 146698 and 147107 (for Agents only)
140553(805)	Oil Removing Wick (head end) Holder Body Hinge Screw
146698	Oil Removing Wick (head end) Holder Body Spring
149206	Oil Removing Wick (head end) Holder Body complete, Nos. 140553(805), 146698, 146745, 147055, 147107 and 149205
146604	Oil Wick for oiling Looper Ball Crank Pitman End Bearing (left)
146605	Oil Wick Holder
193(805)	Oil Wick Holder Tube Bracket Screw
146606	Oil Wick Position Bracket and 140239(830)
140239(830)	Oil Wick Position Bracket Screw
139462	Presser Bar
146751	Presser Bar Bushing (lower)

Parts for 262-1 Machine

No.		Name
1133(830)		Presser Bar Bushing (Lower) Set Screw
146694		Presser Bar Guide Bracket with 1057(830)
1057(830)		Presser Bar Guide Bracket Clamping Screw
146676		Presser Bar Guide Bracket Lifter
807(819)		Presser Bar Guide Bracket Lifter Hinge Screw
143510		Presser Bar Lifting Lever
146111		Presser Bar Lifting Lever Extension
161(819)	2	Presser Bar Lifting Lever Extension Screw
802(819)		Presser Bar Lifting Lever Hinge Screw
143511		Presser Bar Lifting Lever Spring
143512		Presser Bar Spring
146612		Presser Bar Spring Guide Pin
139134		Presser Foot Plate (back) (3/32 in. to 5/32 in. gauges)
26276		Presser Foot Plate (back) Hinge Pin
142358		Presser Foot Plate (front)
26276		Presser Foot Plate (front) Hinge Pin
142359		Presser Foot Plate Connection
26276		Presser Foot Plate Connection Hinge Pin
37160		Presser Foot Plate Connection Spring
139137		Presser Foot Shank

**Parts for 262-1 Machine**

No.	Name
146202	<b>Presser Foot (triple hinged) complete, Nos. 37160, 139134 (3/32 in. to 5/32 in. gauges), 139137, 142358, 142359 and three 26276, for use with 142357 and 146247</b>
	<b>Note: No. 139134 must be furnished in gauge of 3/32 in. when used for No. 146202.</b>
	<b>Note: No. 146202 is regularly furnished, unless otherwise specified on order.</b>
176(809)	<b>Presser Foot Screw</b>
141001(818)	<b>Pressure Regulating Thumb Screw</b>
51614(818)	<b>Pressure Regulating Thumb Screw Nut</b>
146616	<b>Set of Mated Gears for Lower Shaft, Nos. 143015 and 146517</b>
146911	<b>Set of Mated Gears for Upper Shaft, Nos. 143015 and 146864</b>
146617	<b>Slack Thread Controller</b>
54242	<b>Slack Thread Controller Clamp</b>
176(809)	<b>Slack Thread Controller Clamp Screw</b>
140239(809)	<b>Slack Thread Controller Position Screw</b>
2102	<b>2 Tension (looper thread) Disc</b>
51570(803)	<b>Tension (looper thread) Regulating Thumb Nut</b>
140442(803)	<b>Tension (looper thread) Screw Stud</b>
146618	<b>Tension (looper thread) Screw Stud 140442(803) with 51570(803)</b>
131740	<b>Tension (looper thread) Spring</b>
59537	<b>Tension (looper thread) Spring Bushing (large)</b>
59538	<b>Tension (looper thread) Spring Bushing (small)</b>
146117	<b>Tension (looper thread) Thread Guard</b>
914(809)	<b>Tension (looper thread) Thread Guard Screw</b>

Parts for 262-1 Machine

No.		Name
131696		Tension (looper thread) Thread Guide
146795		Tension (looper thread) Uncurler
54070		Tension (needle thread) Bracket
140443(809)		Tension (needle thread) Bracket Screw
2102	2	Tension (needle thread) Disc
51570(803)		Tension (needle thread) Regulating Thumb Nut
32572		Tension (needle thread) Releasing Disc
54988		Tension (needle thread) Releasing Pin
54071		Tension (needle thread) Releasing Shaft
54872		Tension (needle thread) Releasing Shaft Crank with 624(830)
146620		Tension (needle thread) Releasing Shaft Crank Connecting Link
110(803)	2	Tension (needle thread) Releasing Shaft Crank Connecting Link Hinge Screw
624(830)		Tension (needle thread) Releasing Shaft Crank Set Screw
68261		Tension (needle thread) Releasing Shaft Spring
316(803)		Tension (needle thread) Releasing Shaft Stop Screw
15444		Tension (needle thread) Releasing Shaft Stop Screw 316(803) with 1547(809)
1547(809)		Tension (needle thread) Releasing Shaft Stop Screw Nut
50326(803)		Tension (needle thread) Screw Stud
59539		Tension (needle thread) Screw Stud 50326(803) with 51570(803)
225(819)		Tension (needle thread) Screw Stud Hole Plug
131741		Tension (needle thread) Spring
59537		Tension (needle thread) Spring Bushing (large)

Parts for 262-1 Machine

No.		Name
59538		Tension (needle thread) Spring Bushing (small)
131696		Tension (needle thread) Thread Guide
143570		Thread Guide (front of arm)
140180(809)		Thread Guide (front of arm) Screw
146621		Thread (looper) Take-up with 465(830)
1029(809)		Thread (looper) Take-up Screw
146622		Thread (looper) Take-up Screw Washer (fiber)
465(830)		Thread (looper) Take-up Set Screw
146623		Thread (looper) Take-up Stripper
146624		Thread (looper) Take-up Stripper Holder with 906(830)
146625		Thread (looper) Take-up Stripper Plate
146603		Thread (looper) Take-up Stripper Plate 146625 with 237(809), 139148, 146623, 146624, 146626, 146628 and two 190(809)
237(809)		Thread (looper) Take-up Stripper Plate Screw
146626	2	Thread (looper) Take-up Stripper Plate Support Plate  Note: One No. 146626 is screwed onto Machine Bed.
190(805)	4	Thread (looper) Take-up Stripper Plate Support Plate Screw
906(830)		Thread (looper) Take-up Stripper Set Screw
139148		Thread (looper) Take-up Stripper Staple
190(809)	2	Thread (looper) Take-up Stripper Staple Screw
146627		Thread (looper) Take-up Thread Guide (left)
207(830)		Thread (looper) Take-up Thread Guide (left) Screw
146628		Thread (looper) Take-up ThreadGuide (right)

Parts for 262-1 Machine

No.		Name
237(809)		Thread (looper) Take-up Thread Guide (right) Screw
146238		Thread (looper) Thread Tube
1628(819)		Thread (looper) ThreadTube Screw Stud Nut
146671		Thread (looper) Thread Tube Screw Stud Nut Washer
146632		Thread (looper) Thread Tube Thread Guide
50027(809)		Thread (looper) ThreadTube Thread Guide Screw
146031		Thread (needle) Eyelet (side of arm)
176(809)		Thread (needle) Eyelet (side of arm) Position Screw
7071		Thread (needle) Eyelet (side of arm) Position Screw Washer
724(809)		Thread (needle) Eyelet (side of arm) Screw
146120		Thread (needle) Take-up with 147079
147079		Thread (needle) Take-up Thread Eyelet Bushing
139158		Thread (needle) Thread Guide
146629		Thread (needle) Thread Guide Bracket
229(809)	2	Thread (needle) Thread Guide Screw
146247		Throat Plate for 10 to 18 stitches per inch, for chaining-off for use with 142357 and 146202
		Note: No. 146247 is regularly furnished with machine
142390		Throat Plate (needle hole for chaining-off) for use with 142387 and 142388, for 11 to 22 stitches to the inch.
		Note: No. 142390 is furnished on order only.
691(806)	2	Throat Plate Screw
143176	2	Trade Mark Rivet

## ACCESSORIES

No.		Name
12361	2	Machine Hinge Connection
151559	4	Machine Rest Pad (rubber)
232333(805)	4	Machine Rest Pad Nail (5/8 in. (flat head) #17 barbed)
41564		Machine Rest Pin
120344		Oiler (not filled) with 120345
120345		Oiler Spout
121741		One Quart can (light grade) Oil
121108		Screw Driver (machine)
120440		Screw Driver
151109		Thread Unwinder (see Page headed "Thread Unwinder")
120341		Tweezers (curved)
8908		Wrench
23535		Wrench
42850		Wrench
151281		Wrench (socket)

## FITTINGS FOR SEAMING TROUSERS

No.	Name
146201	Feed Dog, 26 teeth (18 teeth to the inch) for use with 146202 and 146203
139134	Presser Foot Plate (back) (3/32 in. to 5/32 in gauges).
26276	Presser Foot Plate (back) Hinge Pin
142358	Presser Foot Plate (front)
26276	Presser Foot Plate (front) Hinge Pin
142359	Presser Foot Plate Connection
26276	Presser Foot Plate Connection Hinge Pin
37160	Presser Foot Plate Connection Spring
139137	Presser Foot Shank
146202	Presser Foot (triple hinged) complete, for use with 146201 and 146203, Nos. 37160, 139134, (3/32 in to 5/32 in gauge), 139137, 142358, 142359 and three 26276
146203	Throat Plate for use with 146201 and 146202

## KNEE LIFTER PARTS

146168	Chain, length 13 1/2 in. with 39576 and 56864
56864	Chain Hook (large)
39576	Chain Hook (small)
12501	Chain Pulley
141054(850)	Chain Pulley Hinge Screw Stud
1606(850)	Chain Pulley Hinge Screw Stud Nut
146169	Rock Shaft



No.	Name
146170	Rock Shaft Crank with 140351(830) and 143282
140350(803)	Rock Shaft Crank Adjusting Screw
143282	Rock Shaft Crank Adjusting Screw 140350(830) with 51649(809)
51649(809)	Rock Shaft Crank Adjusting Screw Lock Nut
140351(830)	Rock Shaft Crank Clamping Screw
146171	Rock Shaft Crank Collar with two 462(830)
462(830)	2 Rock Shaft Crank Collar Set Screw
143283	Rock Shaft Knee Arm
147489	Rock Shaft Knee Arm Hub with 140351(830) and 140737(869)
140351(830)	Rock Shaft Knee Arm Hub Clamping Screw
2767	Rock Shaft Knee Arm Plate with 356(830)
150668	Rock Shaft Knee Arm Plate Pad (rubber)
	Note: No. 150668 is used with but not regularly furnished with the Knee Lifter and is supplied on order only.
356(830)	Rock Shaft Knee Arm Plate Set Screw
140737(869)	Rock Shaft Knee Arm Set Screw
146236	Rock Shaft Lifting Lever with 51183(805)
51183(805)	Rock Shaft Lifting Lever Set Screw
146768	Rock Shaft Spring
1115(819)	Rock Shaft Spring Screw

MACHINE BASE AND OIL RESERVOIR

No.	Name
146148	Machine Base and Oil Reservoir with 141139(869)
146151	Machine Base and Oil Reservoir 146148 with 146150, 146245, 146640, 146693, 151560, and 151561 (for Agents only)
141139(869)	Machine Base and Oil Reservoir Drain Plug
146150	Machine Base and Oil Reservoir Gasket (left)
146693	Machine Base and Oil Reservoir Oil Return Wick
146245	Machine Base and Oil Reservoir Oil Return Wick Position Pad (felt)
146640	Machine Pad (felt)
151560	Machine Pad (felt, left back)
151561	Machine Pad (felt, left front)

TENSION (looper thread) RELEASER ASSEMBLY  
No. 146115

146792		Tension (looper thread) Releaser
146793		Tension (looper thread) Releaser Fastening Plate
217(809)		Tension (looper thread) Releaser Screw
146794		Tension (looper thread) Releaser Slide
146114		Tension (looper thread) Releaser Slide Connecting Link
110(803)	2	Tension (looper thread) Releaser Slide Connecting Link Hinge Screw
72(803)	2	Tension (looper thread) Releaser Slide Hinge Screw
146115		Tension (looper thread) Releaser Nos. 217(809), 146114, 146792, 146793, 146794, 146796, 146797 and two each 72(803) and 110(830)

Note: No. 146115 is not regularly furnished with Machine but will be supplied if machine order so states and at an additional charge.

No.		Name
146796		Tension (looper) Uncurler Plate (back)
146797		Tension (looper) Uncurler Plate (front)
THREAD UNWINDER for TWO SPOOLS		
151032		Base with 138(813) and three wood screws 1 in. No. 12 F.H.
228764	2	Spool Pin
228766		Spool Rest with 201254(803)
151108		Spool Rest Bracket
151034		Spool Rest Bracket Rod
138(813)		Spool Rest Bracket Rod Set Screw
150203	2	Spool Rest Cushion (felt)
1395(813)		Spool Rest Screw
201254(803)		Spool Rest Set Screw
151035	2	Thread Guide
1521(813)	4	Thread Guide Nut
9525(813)	4	Thread Guide Nut Washer
151109		Thread Unwinder complete, Nos. 1395(813), 151032, 151034, 151108, 228766, two 150203, 151035, 228764 and four each 1521(813) and 9525(813)

List of Parts for 262-2 Machine

Note: This machine is the same as No. 262-1 but with the following exceptions:

No.	Name
146075	Arm Shaft (horizontal) with 1036(830) and 140542(830) in place of 146121
146076	Arm Shaft (horizontal) 146075 with 143494, in place of 146122
146081	Bed Rotary Shaft, in place of 146123
146082	Bed Rotary Shaft 146081 with 132790, 146556, 164232 and two 131928 (for Agents only) in place of 146124
146242	Combination of Feed and Stitch Regulator Parts, Nos. 143015, 143040, 143049, 146864, 146883 and 146914 (for Agents only) in place of 152579
142363	Feed Dog, 25 teeth (18 teeth to the inch) for 6 to 10 stitches per inch, for chaining-off, for use with 146202 and 146248, in place of 142357
	Note: No. 142363 is regularly furnished with machine unless otherwise specified on order.
146914	Feed Lifting Eccentric with three 440(830), in place of 152578
146248	Throat Plate for 6 to 10 stitches per inch, for chaining-off, for use with 142363 and 146202, in place of 146247

Note: No. 146248 is regularly furnished with machine unless otherwise specified on order.

List of Parts for 262-3 Machine

Note: This machine is the same as No. 262-1 but with the following exceptions:

No.	Name
146152	Arm Shaft (horizontal) with 1036(830) and 140542(830), in place of 146121
146153	Arm Shaft (horizontal) 146152 with 143494, in place of 146122
146154	Bed Rotary Shaft, in place of 146123
146155	Bed Rotary Shaft 146154 with 132790, 146556, 164232 and two 131928 (for Agents only), in place of 146124
146242	Combination of Feed and Stitch Regulator Parts, Nos. 143015, 143040, 143049, 146864, 146883 and 146914 (for Agents only), in place of 152579
160618	Edge Guide
922(818)	Edge Guide Thumb Screw
142388	Feed Dog, 15 teeth (12 teeth to the inch) for use with 54129 and 131355, in place of 142357
	Note: No. 142388 is regularly furnished with machine unless otherwise specified on order.
140914	Feed Lifting Eccentric with three 440(830), in place of 152578
131353	Presser Foot Plate
26276	Presser Foot Plate Hinge Pin
131354	Presser Foot Shank with 442(830) and 1695(809)
442(830)	Presser Foot Shank Adjusting Screw
1695(809)	Presser Foot Shank Adjusting Screw Nut
131355	Presser Foot (hinged) complete, for regular pants seaming, Nos. 26276, 131353 and 131354, in place of 146202

Note: No. 131355 is regularly furnished with machine unless otherwise specified on order.

Parts for 262-3 Machine

No.	Name
146160	Thread (looper) Take-up (small) with two 465(830)
465(830)      2	Thread (looper) Take-up (small) Set Screw
146161	Thread (looper) Take-up Stripper Plate, in place of 146625
146237	Thread (looper) Take-up Stripper Plate 146161 with 237(809) 139148, 146623, 146624, 146626, 146628 and two 190(809), in place of 146603
146235	Thread (looper) Take-up Stripper Staple (left)
190(809)	Thread (looper) Take-up Stripper Staple (left) Screw
54129	Throat Plate, in place of 146247

Note: No. 54129 is regularly furnished with machine unless otherwise specified on order.