

HISTORICAL COPY

NUMBERING DEPARTMENT

JANUARY 16, 1913

DO NOT REMOVE

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 58-10

For regular and Milo shoe buttons. Has automatic adjustable Button Carrier and Automatic Thread Cutting Device. Makes 12 stitches in button shank and four fastening stitches, no stitches between buttons.

|        |   |    |    |
|--------|---|----|----|
| *43590 | Arm and Cylinder with 21503.....  | 25 | 00 |
| 21633  | " Shaft.....  | 2  | 00 |
| *21503 | " " Bushing (front)   |    | 30 |
| 43591  | " " Collar with two 445c.....   |    | 30 |
| 445c   | " " " Set Screw.....  |    | 03 |
| 21634  | " " Flanged Bushing (back)  |    | 50 |
| 437c   | " " " Adjusting Screw   |    | 04 |
| 1517E  | " " " " Nut   |    | 04 |
| 448c   | " " " Set Screw.....  |    | 03 |
| 1069D  | " " Screw.....  |    | 12 |
| 43592  | Button Carrier.....   | 1  | 75 |
| 43593  | " " 43592 with 43606 to 43608.....  | 3  | 00 |
| 43594  | " " Adjusting Arm with 1159D.....   | 1  | 75 |
| 1159D  | " " " Clamping Screw.....   |    | 03 |
| 43595  | " " Lever.....  | 2  | 00 |
| 43596  | " " Connection (latch end) with 43602 and 43604.....                      | 2  | 00 |
| 43597  | Button Carrier Lever Connection (lever end) with 43604.....               | 1  | 50 |
| 43598  | Button Carrier Lever Connection Adjusting Collar with 454c.....           |    | 50 |
| 454c   | Button Carrier Lever Connection Adjusting Collar Set Screw.....           |    | 02 |
| 43599  | Button Carrier Lever Connection Adjusting Collar Set Screw Lock Stud..... |    | 01 |
| 652D   | Button Carrier Lever Connection Hinge Screw.....                          |    | 08 |
| 1637E  | " " " " Nut.....  |    | 03 |
| 43600  | " " " " Latch with 43602.....   | 1  | 00 |
| 184D   | " " " " H i n g e S c r e w.....  |    | 02 |
| 43601  | Button Carrier Lever Connection Latch Spring.....                         |    | 02 |
| 43602  | " " " " " Hook.....   |    | 01 |

|        |  |      |
|--------|--|------|
| 50174C | Button Carrier Lever Connection Latch Trip Screw Stud.....                         | 10   |
| 1520E  | Button Carrier Lever Connection Latch Trip Screw Stud Nut.....                     | 03   |
| 43603  | Button Carrier Lever Connection Spring.....  | 10   |
| 43604  | " " " " Stud.....  | 10   |
| 43605  | Button Carrier Lever Connection complete, Nos. 184D, 43596 to 43601 and 43603..... | 5 15 |
| 802C   | Button Carrier Lever Hinge Screw.....  | 10   |
| 2269   | " " Pin.....   | 01   |
| 43606  | " " Plate.....   | 1 25 |
| 43607  | " " Hinge Pin.....   | 01   |
| 43608  | " " Spring.....  | 01   |
| 43609  | " " Rod.....   | 25   |
| 43610  | " " Adjusting Collar with 457C.....  | 20   |
| 457C   | " " " " Set Screw.....   | 02   |
| 43611  | " " " " " " Lock Stud.....   | 01   |
| 43612  | Button Carrier Rod Head with 457C.....   | 75   |
| 457C   | " " " " Set Screw.....   | 02   |
| 652D   | " " " Hinge Screw.....   | 08   |
| 1637E  | " " " " Nut.....   | 03   |
| 43613  | " " Supporting Arm.....  | 75   |
| 2269   | " " " " Pin.....   | 01   |
| 43614  | " " " " Shaft.....   | 30   |
| 207F   | " " " " Cap Screw.....   | 02   |
| 43615  | " " " " " " Washer.....  | 03   |
| 43616  | Button Carrier Supporting Stud with 175D.....                                      | 1 00 |
| 233D   | " " " " Cap Screw.....   | 02   |
| 43617  | " " " " Washer.....  | 03   |
| 175D   | " " " " Clamping Screw.....  | 02   |
| 43588  | " Guide with 43589 and two 1053D.....  | 1 00 |
| 21597  | " " Adjusting Block.....   | 25   |
| 43589  | " " Extension.....   | 10   |
| 1053D  | " " " " Screw.....   | 02   |
| 715D   | " " Thumb Screw.....   | 20   |
| 43618  | " Retaining Spring.....  | 03   |
| 337D   | " " " " Screw.....   | 02   |
| 43563  | " Switch Stud (lower).....   | 25   |
| 460C   | " " " " Set Screw.....   | 02   |
| 43564  | " " " (upper).....   | 25   |
| 1019C  | " " " " Set Screw.....   | 02   |
| 43619  | Chute Cover with 50079D.....   | 1 00 |
| 1711H  | " " Lock Nut.....  | 02   |
| 50079D | " " Screw Stud.....  | 08   |
| 43566  | " " Spring.....  | 03   |
| 1538D  | " " Thumb Nut.....   | 06   |

|       |  |      |
|-------|--|------|
| 43620 | Chute Frame with 50079D.....   | 3 00 |
| 207F  | " " Screw (lower).....   | 02   |
| 171F  | " " " (upper).....   | 03   |
| 43621 | " Support Bracket.....   | 30   |
| 43569 | " " Washer.....  | 10   |
| 43622 | Chute complete, Nos. 43619, 43620 and two each 1538D, 1711H and 43566.....             | 4 30 |
| 12108 | Crank Connecting Rod with 4349 and two 158E.....                                       | 70   |
| *4349 | " " " Cap.....   | 15   |
| 158E  | " " " Screw.....   | 03   |
| 375c  | " " " Hinge Screw.....   | 12   |
| 1518E | " " " " Nut.....   | 04   |
| 43623 | Hopper Base with 460c, 1019c, 2273, 43563, 43564, 43635 and 50024E.....                | 8 00 |
| 944F  | Hopper Base Screw.....   | 06   |
| 21538 | " Brush.....   | 15   |
| 21539 | " " Carrier.....   | 60   |
| 43624 | " " " Eccentric with two 456C.....   | 1 00 |
| 456c  | " " " " Set Screw.....   | 02   |
| 43625 | " " " Forked Connection with 457C.....   | 3 00 |
| 43626 | " " " " " Shaft.....   | 25   |
| 43627 | " " " " " Bushing.....   | 35   |
| 448c  | Hopper Brush Carrier Forked Connection Shaft Bushing Set Screw.....                    | 03   |
| 43804 | Hopper Brush Carrier Forked Connection Shaft Collar with 1053c.....                    | 10   |
| 1053c | Hopper Brush Carrier Forked Connection Shaft Collar Set Screw.....                     | 02   |
| 457c  | Hopper Brush Carrier Forked Connection Set Screw.....                                  | 02   |
| 43628 | " " " Handle.....  | 50   |
| 14026 | " " " Pin.....   | 01   |
| 946D  | " " " " Screw.....   | 08   |
| 21542 | " " " Shaft.....   | 1 00 |
| 43629 | " " " Ratchet Wheel.....   | 1 50 |
| 43630 | " " " " Brake Lever.....   | 2 00 |
| 43631 | Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Block.....                        | 25   |
| 43632 | Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Block Pin.....                    | 10   |
| 43633 | Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Block Spring.....                 | 03   |
| 445c  | Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Block Spring Adjusting Screw..... | 03   |
| 43634 | Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Spring.....                       | 05   |
| 43635 | Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Spring Hook.....                  | 01   |

|              |  |       |
|--------------|--|-------|
| <b>43636</b> | Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Stop Bracket.....   | 25    |
| 190D         | Hopper Brush Carrier Shaft Ratchet Wheel Brake Lever Stop Bracket Screw.....   | 03    |
| <b>43637</b> | Hopper Brush Carrier Shaft Ratchet Wheel Hub with two 454C.....  | 1 00  |
| 454C         | Hopper Brush Carrier Shaft Ratchet Wheel Hub Set Screw.....  | 02    |
| <b>43638</b> | Hopper Brush Carrier Shaft Ratchet Wheel Lever   | 1 50  |
| <b>43639</b> | " " " " " " " " Guide Bracket.....   | 1 00  |
| 190D         | Hopper Brush Carrier Shaft Ratchet Wheel Lever Guide Bracket Screw.....  | 03    |
| 184D         | Hopper Brush Carrier Shaft Ratchet Wheel Lever Guide Screw.....  | 02    |
| 184D         | Hopper Brush Carrier Shaft Ratchet Wheel Lever Hinge Screw.....  | 02    |
| <b>43640</b> | Hopper Brush Carrier Shaft Ratchet Wheel Lever Pawl with 2273.....   | 75    |
| 184D         | Hopper Brush Carrier Shaft Ratchet Wheel Lever Pawl Hinge Screw.....   | 02    |
| <b>43641</b> | Hopper Brush Carrier Shaft Ratchet Wheel Lever Pawl Spring.....  | 03    |
| 2273         | Hopper Brush Carrier Shaft Ratchet Wheel Lever Pawl Spring Pin.....  | 01    |
| 229D         | Hopper Brush Carrier Shaft Ratchet Wheel Lever Pawl Spring Screw.....  | 02    |
| 2049         | Hopper Brush Carrier Shaft Ratchet Wheel Pin.....  | 01    |
| 171F         | " " " " " " " " Screw.....   | 03    |
| 21603        | " " " " " " " " Lifter.....  | 05    |
| 43511        | " " " " " " " " Gate.....  | 35    |
| 50024E       | " " " " " " " " Screw Stud.....  | 03    |
| 2273         | " " " " " " " " Pin.....   | 01    |
| 1538D        | " " " " " " " " Thumb Nut.....   | 06    |
| 43573        | " " " " " " " " Rim.....   | 2 50  |
| 207F         | " " " " " " " " Screw.....   | 02    |
| <b>43642</b> | " " " " " " " " Washer.....  | 10    |
| <b>43643</b> | Hopper complete, Nos. 445C, 715D, 946D, 1538D, 2049, 14026, 21539, 21542, 21597, 43511, 43573, 43588, 43622, 43623, 43628 to 43634, 43636, 43637, 43639, 43642, two 21603, four each 171F, 190D, 207F and six 21538..... | 26 50 |
| 21549        | Needle Bar with 857H.....  | 45    |
| 3045         | " " " " " " " " Connecting Link.....   | 30    |
| 377C         | " " " " " " " " Hinge Screw.....   | 12    |
| 1518E        | " " " " " " " " Nut.....   | 04    |
| <b>43644</b> | " " " " " " " " Stud with 187D.....  | 1 00  |
| 187D         | " " " " " " " " Clamping Screw.....  | 02    |

|              |   |      |
|--------------|---|------|
| <b>43645</b> | Needle Bar Frame.....   | 2 00 |
| 21551        | " " " " " " " " Driving Lever.....  | 2 00 |
| 802C         | " " " " " " " " Hinge Screw.....  | 10   |
| 1887         | " " " " " " " " Roller and Screw Stud.....  | 30   |
| 1906         | Needle Bar Frame Driving Lever Roller and Screw Stud 1887 with 1520E and 14017..... | 40   |
| 1520E        | Needle Bar Frame Driving Lever Roller and Screw Stud Nut.....                       | 03   |
| 14017        | Needle Bar Frame Driving Lever Roller and Screw Stud Nut Washer.....                | 05   |
| 43534        | Needle Bar Frame Pitman Connection (frame end).....                                 | 1 50 |
| 43535        | " " " " " " " " (lever end).....  | 1 00 |
| 191F         | " " " " " " " " Screw.....  | 03   |
| 43536        | Needle Bar Frame Pitman (adjustable) complete, Nos. 43534, 43535 and two 191F.....  | 2 50 |
| 377C         | Needle Bar Frame Pitman Hinge Screw.....  | 12   |
| 1518E        | " " " " " " " " Nut.....  | 11   |
| 577C         | " " " " " " " " Screw Centre (lower).....   | 06   |
| 1517E        | " " " " " " " " Nut.....  | 04   |
| 945E         | " " " " " " " " (upper).....  | 10   |
| 1517D        | " " " " " " " " Nut.....  | 04   |
| 21553        | " " " " " " " " Thread Eyelet.....  | 05   |
| 219F         | " " " " " " " " Screw.....  | 02   |
| 21554        | " " " " " " " " Thread Eyelet.....  | 01   |
| 665D         | " " " " " " " " Screw.....  | 02   |
| <b>43646</b> | " " Plate with 43547 and two 1053D.....   | 3 50 |
| 691F         | " " " " " " " " Screw.....  | 04   |
| 857H         | " " " " " " " " Set Screw.....  | 02   |
| 21555        | Oscillating Rock Shaft (steel).....   | 1 00 |
| 21630        | " " " " " " " " 21555 with 4784 and 12388.....                                      | 1 50 |
| 12388        | " " " " " " " " Hinge Pin.....  | 50   |
| 448C         | " " " " " " " " Set Screw.....  | 03   |
| 4784         | " " " " " " " " Oil Pad.....  | 01   |
| 21556        | " " " " " " " " Shaft.....  | 40   |
| 21557        | " " " " " " " " Crank with 460C and 1921.....                                       | 50   |
| 2049         | " " " " " " " " Pin.....  | 01   |
| 1921         | " " " " " " " " Roller and Stud.....  | 25   |
| 460C         | " " " " " " " " Set Screw.....  | 02   |
| 43576        | Presser Bar.....  | 60   |
| 21559        | " " " " " " " " Lifting Bracket with 446C.....                                      | 3 00 |
| <b>43647</b> | " " " " " " " " Guide Bar.....  | 20   |
| 456C         | " " " " " " " " Set Screw.....  | 02   |
| 446C         | " " " " " " " " Set Screw.....  | 03   |
| <b>43648</b> | " " " " " " " " Lever with 119D, 1528E, 1810, 21658 and two 2017.....               | 2 50 |
| 119D         | Presser Bar Lifting Lever Adjusting Screw.....                                      | 05   |
| 21658        | " " " " " " " " Bracket.....  | 25   |

|       |   |         |      |
|-------|---|---------|------|
| 2017  | Presser Bar Lifting Lever Adjusting Screw Bracket Rivet.....                              | PER 100 | 25   |
| 1528E | Presser Bar Lifting Lever Adjusting Screw Nut.....  |         | 03   |
| 25C   | " " " " Hinge Screw.....  |         | 15   |
| 1810  | " " " " Roller and Stud.....  |         | 30   |
| 21586 | " " " " Spring.....   |         | 10   |
| 191c  | " " " " " Screw.....  |         | 03   |
| 21709 | " " " " (intermediate) with 1419c, 1521E, 1611E and 21710.....                            |         | 80   |
| 21700 | Presser Bar Lifting Lever (intermediate) Hinge Stud.....                                  |         | 15   |
| 448C  | Presser Bar Lifting Lever (intermediate) Hinge Stud Set Screw.....                        |         | 03   |
| 1419C | Presser Bar Lifting Lever (intermediate) Trip Stud.....                                   |         | 12   |
| 1521E | " " " " " " " " Lock Nut.....   |         | 03   |
| 1611E | Presser Bar Lifting Lever (intermediate) Trip Stud Nut.....                               |         | 03   |
| 21710 | Presser Bar Lifting Lever (intermediate) Trip Stud Spring.....                            |         | 02   |
| 11167 | Presser Bar Spring.....   |         | 05   |
| 11170 | " " " Washer.....   |         | 01   |
| 43649 | " Foot with 43663 and four 1329D.....   |         | 7 00 |
| 172F  | " " Screw.....  |         | 04   |
| 688E  | Pressure Regulating Thumb Screw.....  |         | 25   |
| 21638 | Pulley (loose).....   |         | 1 00 |
| 43650 | " (tight).....  |         | 1 50 |
| 43651 | Pulley (tight) complete, Nos. 871E, 21615 to 21617, 21647, 21653, 43650 and two 997E..... |         | 4 25 |
| 23668 | Pulley (tight) Pin.....   |         | 01   |
| 43652 | Pulleys complete, Nos. 21638 and 43651.....   |         | 5 25 |
| 2996  | Shuttle Bobbin.....   |         | 05   |
| 15140 | " " Case Latch.....   |         | 10   |
| 2973  | " " " " Lever.....  |         | 10   |
| 2974  | " " " " " Fulcrum Pin.....  | PER 100 | 10   |
| 2975  | " " " " Spring.....   |         | 02   |
| 592E  | " " " " Stop Screw.....   |         | 02   |
| 15141 | " " " Hinge, Nos. 2973, 2974 and 15140.....   |         | 25   |
| 4820  | Shuttle Bobbin Case Position Finger.....  |         | 10   |
| 2523  | " " " " Rivet.....  | PER 100 | 25   |
| 43653 | Shuttle Bobbin Case complete, Nos. 591F, 592E, 2523, 2975, 4820, 15098 and 15141.....     |         | 75   |
| 21562 | Shuttle Body.....   |         | 75   |
| 591F  | " Tension Regulating Screw.....   |         | 02   |
| 15098 | " Spring.....   |         | 10   |
| 43654 | Shuttle, 1 1/4 in. diam., Nos. 2996, 21562 and 43653.....                                 |         | 1 50 |
| 21563 | " Driver.....   |         | 1 25 |

|       |   |         |       |
|-------|---|---------|-------|
| 2049  | Shuttle Driver Pin.....   |         | 01    |
| 43542 | " Race Body.....  |         | 1 50  |
| 43543 | " " Cap.....  |         | 15    |
| 662D  | " " " Screw.....  |         | 02    |
| 2523  | " " " Steady Pin.....   | PER 100 | 25    |
| 43544 | " " Ring.....   |         | 3 00  |
| 18413 | " " Spring.....   |         | 03    |
| 1289D | " " " " Screw.....  |         | 03    |
| 43545 | Shuttle Race (flexible) complete, Nos. 662D, 2523, 43542 to 43544 and two each 1289D and 18413.....   |         | 4 75  |
| 171F  | Shuttle Race Screw.....   |         | 03    |
| 43655 | Starting Lever with 1811.....   |         | 3 50  |
| 43656 | Starting Lever complete, Nos. 159F, 717c, 913c, 1520E, 1638E, 21643, 21645, 21649, 21651, 43583, 43655, 43658, two each 158E, 399F and three 14277..... |         | 8 00  |
| 43657 | Starting Lever Bell Crank with 1920.....  |         | 3 00  |
| 802c  | " " " " Hinge Screw.....  |         | 10    |
| 1920  | " " " " Roller and Stud.....  |         | 20    |
| 21643 | " " " Belt Shifter.....   |         | 75    |
| 159F  | " " " Set Screw.....  |         | 03    |
| 21644 | " " Bracket.....  |         | 1 00  |
| 8582  | " " Dowel Pin.....  |         | 02    |
| 123E  | " " Screw.....  |         | 06    |
| 21645 | " " Cushion (raw hide).....   |         | 03    |
| 399F  | " " " Screw.....  |         | 02    |
| 43658 | " " Extension.....  |         | 1 25  |
| 158E  | " " " Screw.....  |         | 03    |
| 1811  | " " Roller and Stud.....  |         | 20    |
| 564c  | " " Screw Centre.....   |         | 12    |
| 1508E | " " " Nut.....  |         | 06    |
| 14174 | " " Spring.....   |         | 08    |
| 717c  | " " Stop Screw.....   |         | 08    |
| 1520E | " " " Nut.....  |         | 03    |
| 43659 | Stitch Forming Cam, 2 5/8 in. diam., 17 teeth.....  |         | 10 00 |
| 14250 | " " " Driver.....   |         | 4 00  |
| 21707 | " " " Cam with 448c and 765c.....   |         | 1 00  |
| 765c  | Stitch Forming Cam Driver Cam Position Screw.....   |         | 05    |
| 448c  | " " " " Set Screw.....  |         | 03    |
| 14253 | " " " " Sliding Block.....  |         | 45    |
| 810D  | " " " " " Cap.....  |         | 03    |
| 21647 | Stop Cam with 21652.....  |         | 1 50  |
| 43583 | " " Interlocking Rod.....   |         | 50    |
| 21649 | " " " Guide with 1070c.....   |         | 1 00  |
| 1070c | " " " " Set Screw.....  |         | 08    |
| 14277 | " " " " Washer (raw hide).....  |         | 05    |

|       |  |      |
|-------|--|------|
| 21651 | Stop Cam Interlocking Rod Spring.....                                    | 10   |
| 913C  | " " " " Regulating<br>Thumb Screw.....                                   | 40   |
| 1638E | Stop Cam Interlocking Rod Spring Regulating<br>Thumb Screw Nut.....      | 12   |
| 21652 | Stop Cam Pin.....  | 05   |
| 21615 | " " Spring (long).....   | 08   |
| 21616 | " " " (short).....   | 05   |
| 21653 | " " " Cover.....   | 25   |
| 997E  | " " " Screw.....   | 05   |
| 21617 | " " " Stop Block.....  | 25   |
| 871E  | " " " " Screw.....   | 04   |
| 2921  | Tension Disc.....  | 05   |
| 1560C | " Regulating Thumb Nut.....  | 04   |
| 20037 | " Releaser.....  | 15   |
| 43660 | " Releasing Lever.....   | 60   |
| 90D   | " " " Hinge Screw.....   | 05   |
| 413F  | " Screw Stud.....  | 10   |
| 2923  | " Spring.....  | 05   |
| 12149 | " Thread Guard.....  | 05   |
| 43547 | Thread Cutter for 43645.....   | 30   |
| 1053D | " " Screw.....   | 02   |
| 43661 | " Clamping Blade.....  | 20   |
| 43662 | " Cutting Blade.....   | 20   |
| 43663 | " " " Cap.....   | 1 00 |
| 1329D | " " " " Screw.....   | 02   |
| 43664 | " " " Connection.....  | 50   |
| 93C   | " " " Hinge S c r e w<br>(holder end).....                               | 04   |
| 86D   | Thread Cutting Blade Connection Hinge Screw<br>(lever end).....          | 05   |
| 43665 | Thread Cutting Blade Holder.....   | 80   |
| 43666 | " " " Lever with 190C and 1975.....                                      | 00   |
| 2049  | " " " " Pin.....   | 01   |
| 1975  | " " " " Roller and Screw Stud<br>with 1520E and 14017.....               | 40   |
| 190C  | Thread Cutting Blade Lever Roller and Screw Stud<br>Adjusting Screw..... | 03   |
| 1520E | Thread Cutting Blade Lever Roller and Screw Stud<br>Nut.....             | 03   |
| 14017 | Thread Cutting Blade Lever Roller and Screw Stud<br>Nut Washer.....      | 05   |
| 43667 | Thread Cutting Blade Lever Shaft.....                                    | 40   |
| 43668 | " " " " " Arm with 207F<br>and 1906.....                                 | 75   |
| 8554  | Thread Cutting Blade Lever Shaft Arm Pin.....                            | 02   |
| 1887  | " " " " " Roller and<br>Screw Stud.....                                  | 30   |

|       |  |    |
|-------|--|----|
| 1906  | Thread Cutting Blade Lever Shaft Arm Roller and<br>Screw Stud 1887 with 1520E and 14017..... | 40 |
| 1520E | Thread Cutting Blade Lever Shaft Arm Roller and<br>Screw Stud Nut.....                       | 03 |
| 14017 | Thread Cutting Blade Lever Shaft Arm Roller and<br>Screw Stud Nut Washer.....                | 05 |
| 207F  | Thread Cutting Blade Lever Shaft Arm Set Screw.....  | 02 |
| 233D  | " " " Screw.....   | 02 |
| 21577 | " Eyelet (side of arm) back.....   | 05 |
| 29642 | " " " " front.....   | 15 |
| 460C  | " " " " " Set Screw.....   | 02 |
| 21578 | " Take-up Cam with 446C.....   | 50 |
| 3012  | " " " Pin.....   | 01 |
| 446C  | " " " Set Screw.....   | 03 |
| 21579 | " " Lever with 1819.....   | 60 |
| 76C   | " " " Hinge Screw.....   | 06 |
| 1819  | " " " Roller and Stud.....   | 20 |
| 8511  | " " Spring (music wire).....   | 03 |
| 7336  | " " Regulator.....   | 20 |
| 448C  | " " " " Set Screw.....   | 03 |

## ACCESSORIES

|       |  |    |
|-------|--|----|
| 599E  | Bolt with 1524E, to secure machine to table..... | 03 |
| 1524E | " Nut.....                                       | 02 |
| 6055  | " " Washer.....                                  | 01 |
| 35859 | Oiler with Cap and 35861.....                    | 07 |
| 35860 | " 35859, filled with oil.....                    | 10 |
| 35861 | " Spout, 3 1/2 in. long.....                     | 03 |
| 26026 | Screw Driver (machine).....                      | 10 |
| 26485 | " " (shuttle tension).....                       | 05 |
| 4822  | Wrench for 1521, 1528 and 1637.....              | 05 |
| 10875 | " " 1517, 1518, 1520 and 1611.....               | 10 |
| 21654 | " " 1508 and 1638.....                           | 10 |

## BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

|       |   |         |     |
|-------|---|---------|-----|
| 27540 | Base.....   |         | 15  |
| 15072 | Bobbin Position Pin.....  | PER 100 | 10  |
| 27302 | Frame.....  |         | 15  |
| 32D   | " Hinge Screw.....  |         | 10  |
| 27303 | " Spring.....   |         | 03  |
| 27541 | Pulley.....   |         | 15  |
| 27538 | Spindle with 15072.....   |         | 20  |
| 27306 | Spool Pin.....  |         | 05  |
| 27307 | " Stand.....  |         | 10  |
| 27308 | Spool Stand complete, Nos. 418D, 1562, 2106, 10141,<br>11241, 27306, 27307 and two each 2455 and<br>wood screws 1 in. No. 10..... |         | 35  |
| 11241 | Spool Washer (cloth).....   | PER 100 | 25  |
| 27312 | Stop Latch.....   |         | 08  |
| 35D   | " " Hinge Screw.....  |         | 07  |
| 2455  | Tension Disc.....   |         | 02  |
| 1562  | " Regulating Thumb Nut.....   |         | 04  |
| 418D  | " Screw Stud.....   |         | 08  |
| 10141 | " Spring.....   |         | 01  |
| 2106  | " Thread Guide.....   |         | 01  |
| 27647 | Bobbin Winder, Nos. 32D, 35D, 27302, 27303, 27312,<br>27538, 27540, 27541 and two wood screws<br>1 in. No. 7.....                 |         | 90  |
| 27544 | Bobbin Winder (swinging automatic, right hand)<br>complete, Nos. 27308 and 27647.....   |         | 125 |

## STARTING TREADLE PARTS

|       |  |  |    |
|-------|--|--|----|
| 14209 | Starting Treadle.....  |  | 30 |
| 14081 | " " Connection (lower).....  |  | 10 |
| 21581 | " " " (upper).....   |  | 10 |
| 9079  | " " " Clamp with 354c.....   |  | 12 |
| 354c  | " " " " Screw.....   |  | 06 |
| 21582 | Starting Treadle Connection complete, Nos. 9079,<br>14081 and 21581.....                         |  | 32 |
| 7585  | Starting Treadle Shaft.....  |  | 05 |
| 14210 | " " Stand.....   |  | 25 |
| 14211 | Starting Treadle complete, Nos. 7585, 14209, 14210<br>and four wood screws 1 1/4 in. No. 12..... |  | 60 |

## TABLE BELT GUIDE PARTS

|       |   |  |     |
|-------|---|--|-----|
| 14229 | Bracket with 448c.....  |  | 30  |
| 14230 | Pulley.....   |  | 35  |
| 14231 | " Shaft with 858c.....  |  | 35  |
| 858c  | " " Plug Screw.....   |  | 03  |
| 448c  | " " Set Screw.....  |  | 03  |
| 14232 | Table Belt Guide complete, Nos. 14229 to 14231 and<br>four wood screws 1 1/4 in. No. 10, R. H. B..... |  | 100 |

## THREAD UNWINDER

FOR TWO LARGE SPOOLS OR TWO LARGE CONES  
OF THREAD

|       |  |  |     |
|-------|--|--|-----|
| 27623 | Spool Pin.....   |  | 08  |
| 155c  | " " Set Screw.....   |  | 03  |
| 41530 | " Rest.....  |  | 30  |
| 41531 | " " 41530 with 1149c and two each 155c and<br>27623.....   |  | 50  |
| 1149c | Spool Rest Set Screw.....  |  | 04  |
| 27940 | " Stand with 453c.....   |  | 20  |
| 41514 | " Weight, 4 in. diam., with 41515.....   |  | 15  |
| 41515 | " " Centre Pin.....  |  | 05  |
| 27739 | Thread Cone (wood).....  |  | 05  |
| 41631 | " Guard with 208E and two 41569.....   |  | 35  |
| 41569 | " " Eyelet.....  |  | 03  |
| 41637 | " " Rod (lower).....   |  | 10  |
| 41638 | " " " (upper).....   |  | 15  |
| 41639 | " " " Coupling with two 456c.....  |  | 20  |
| 456c  | " " " Set Screw.....   |  | 02  |
| 41640 | Thread Guard Rod complete, 30 in. long, Nos. 41637<br>to 41639.....  |  | 45  |
| 453c  | Thread Guard Rod Set Screw.....  |  | 02  |
| 208E  | " " Screw.....   |  | 02  |
| 41533 | Thread Unwinder complete, Nos. 27940, 41531,<br>41631, 41640, two each 27739, 41514 and<br>three wood screws 1 in. No. 12..... |  | 180 |