

Singer 82-11

3114

Form 20871  
(1056)  
Printed in U.S.A.

**HISTORICAL COPY  
DO NOT REMOVE**

LIST OF PARTS COMPLETE  
FOR  
MACHINE NO. 82-11

7378

THE SINGER COMPANY

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 82-11

FOR SILK, LISLE TRICOT, KID MILANESE OR CHAMOISSETTE GLOVES.  
 ALSO FOR STITCHING LIGHT FABRICS. ONE NEEDLE, ONE LOOPER  
 AND SPREADER. CLEARANCE UNDER PRESSER FOOT 5/32". LENGTH  
 OF STITCH 16 TO 25 TO THE INCH. SELF-SETTING NEEDLE.  
 THE LOOPER MECHANISM OSCILLATES PARALLEL TO THE LINE OF  
 STITCHING MAKING IT POSSIBLE TO OBTAIN A VERY TIGHT STITCH.

No.	Plate	Name
42598	-----	Arm, upper and lower (solid) with two each 462AL, 1259AL, 9830 and 42602
42599	5133	Arm Rock Shaft
42600	5134	Arm Rock Shaft Crank (back) with two 1259AL
1259AL	5134	Arm Rock Shaft Crank (back) Position
1259AL	5134	Arm Rock Shaft Crank (back) Set Screw
42601	5134	Arm Rock Shaft Crank (front) with two 1259AL
1259AL	5134	Arm Rock Shaft Crank (front) Position Screw
1259AL	5134	Arm Rock Shaft Crank (front) Set Screw
42602	5134	Arm Rock Shaft Flanged Bushing (back)
1259AL	5134	Arm Rock Shaft Flanged Bushing (back) Set Screw
42602	5134	Arm Rock Shaft Flanged Bushing (front)
1259AL	5134	Arm Rock Shaft Flanged Bushing (front) Set Screw
42671	5114	Arm Rotary Shaft
199D	5137	Arm Rotary Shaft Screw
57039	-----	Arm Side Cover
42604	5114	Arm Side Cover (hinged) 57039 with 665J, 42605, 57040 and 57041
57040	-----	Arm Side Cover Hinge
57041	-----	Arm Side Cover Hinge Pin
42605	5128	Arm Side Cover Lock Spring
665J	4	Arm Side Cover Lock Spring Screw
330J	30	Arm Side Cover Screw (2)
57174	-----	Cloth Plate (small, rounded corner)
57175	-----	Cloth Plate (small, rounded corner) com- plete, Nos. 24D, 193J, 1443F, 42650, 57135, 57174 and 57177
57176	-----	Cloth Plate 57175 with 1230F and 57169

## PARTS FOR MACHINE NO. 82-11

No.	Plate	Name
387F	5137	Cloth Plate Screw (2)
57098	5137	Connecting Rod with two 171AL
171AL	5137	Connecting Rod Cap Screw (2)
378C	5134	Connecting Rod Hinge Screw
1520E	5134	Connecting Rod Hinge Screw Nut
42612	5122	Face Plate
50318D	5137	Face Plate Screw (2)
42613	5134	Feed Bar
42614	5134	Feed Bar Hinge Stud
1147AL	5135	Feed Bar Hinge Stud Nut
42615	5134	Feed Bar Slide Block
42507	5135	Feed Connecting Rod with two 1057AL
1057AL	5135	Feed Connecting Rod Cap Screw (2)
42616	5124	Feed Dog for 57169
42675	5124	Feed Dog for 57172
190J	5137	Feed Dog Screw
42561	5116	Feed Eccentric with two 1258AL
1258AL	70	Feed Eccentric Set Screw (2)
42670	5135	Feed Regulator with 157E and 233J
1038C	5135	Feed Regulator Adjusting Screw
7070	5135	Feed Regulator Adjusting Screw Sleeve
1589C	5135	Feed Regulator Adjusting Screw Thumb Nut
157E	5135	Feed Regulator Clamping Screw
233J	5135	Feed Regulator Stop Screw
42618	5134	Feed Rock Shaft
42619	5149	Feed Rock Shaft Bracket with 448AL
130E	5137	Feed Rock Shaft Bracket Screw
21509	5134	Feed Rock Shaft Collar with 207C
207C	5134	Feed Rock Shaft Collar Set Screw
42620	5135	Feed Rock Shaft Crank with 157E and 1147AL
157E	5135	Feed Rock Shaft Crank Clamping Screw
42621	5123	Looper
42622	5139	Looper Cam (double) with two 1036AL
1036AL	5139	Looper Cam Set Screw (2)
42623	5123	Looper Carrier with 1036AL
42624	-----	Looper Carrier complete, Nos. 337E, 757E, 2656, 42621, 42623, 42625, 42626, 42627, 42638 and 50025F
42625	5123	Looper Carrier Arm with 42639
42626	5123	Looper Carrier Arm Hinge Pin
42627	5123	Looper Carrier Latch
50025F	80	Looper Carrier Latch Hinge Screw
2656	229	Looper Carrier Latch Spring

## PARTS FOR MACHINE NO. 82-11

No.	Plate	Name
1036AL	69	Looper Carrier Set, Screw
57177	-----	Looper Gate
24D	49	Looper Gate Hinge Screw
42650	5114	Looper Gate Spring (flat)
193J	2	Looper Gate Spring Screw
42630	5127	Looper Rock Shaft
19009	2158	Looper Rock Shaft Collar with two 454AL
454AL	68	Looper Rock Shaft Collar Set Screw (2)
42631	5127	Looper Rock Shaft Crank (forked) with 157E and 18154
157E	2	Looper Rock Shaft Crank Clamping Screw
18154	5169	Looper Rock Shaft Crank Oil Pad (felt)
757J	41	Looper Screw
57168	-----	Machine Pulley
42672	5129	Needle Bar
9830	5135	Needle Bar Bushing
462AL	5135	Needle Bar Bushing Set Screw (2)
57167	-----	Needle Bar Connecting Link with two 1313E
42580	5120	Needle Bar Connecting Link 57167 with 220J and 42586
1313E	5135	Needle Bar Connecting Link Adjusting Screw (2)
50026C	5135	Needle Bar Connecting Link Screw Stud
1520E	5134	Needle Bar Connecting Link Screw Stud Nut
9570	5135	Needle Bar Connecting Stud with 140706E
140706E	-----	Needle Bar Connecting Stud Clamping Screw
1629C	152	Needle Clamping Nut
34103	5136	Presser Bar
38540	5136	Presser Bar Lifter
85E	5136	Presser Bar Lifter Screw
42652	5128	Presser Bar Lifting Bracket with 1133AL
42832	5141	Presser Bar Lifting Bracket Guide
185J	5137	Presser Bar Lifting Bracket Guide Screw (2)
1133AL	5141	Presser Bar Lifting Bracket Set Screw
9534	5142	Presser Bar Spring
22405	5136	Presser Bar Spring Washer
42673	5124	Presser Foot
185J	5137	Presser Foot Screw
32282	-----	Pulley, 2 in. diam.
1167D	5137	Pulley Screw
42653	5128	Slack Thread Regulator
42654	5128	Slack Thread Regulator Connection
220J	3	Slack Thread Regulator Connection Screw (2)

## PARTS FOR MACHINE NO. 82-11

No.	Plate	Name
2273	224	Slack Thread Regulator Pin
42655	5128	Slack Thread Regulator Shaft
42656	5128	Slack Thread Regulator Shaft Crank with 208AL
208AL	3	Slack Thread Regulator Shaft Crank Ad- justing Screw
42634	5127	Spreader
42635	5127	Spreader Cam with 1036AL
1036AL	69	Spreader Cam Set Screw
42636	5127	Spreader Lever with 51938
42637	5127	Spreader Lever Hinge Stud
448AL	68	Spreader Lever Hinge Stud Set Screw
51938	-----	Spreader Lever Roller and Stud
665D	4	Spreader Screw
2102	5136	Tension (under thread) Disc (2)
1560C	5136	Tension (under thread) Regulating Thumb Nut
50261C	93	Tension (under thread) Screw Stud
64981	-----	Tension (under thread) Screw Stud 50261C with 1560C
42337	7335	Tension (under thread) Spring
13915	6928	Tension (under thread) Spring Bushing
17547	5136	Tension (under thread) Thread Guide
2102	5136	Tension (upper thread) Disc (2)
1560C	5136	Tension (upper thread) Regulating Thumb Nut
50261C	93	Tension (upper thread) Screw Stud
64881	-----	Tension (upper thread) Screw Stud 50261C with 1560C
52975	7335	Tension (upper thread) Spring
13915	6928	Tension (upper thread) Spring Bushing
17547	2815	Tension (upper thread) Thread Guide
42643	5128	Thread (under) Eyelet (side of arm)
42638	5123	Thread (under) Eyelet for 42624
337E	30	Thread (under) Eyelet Screw for 42624
42639	5123	Thread (under) Eyelet Steady Pin for 42625
42640	5129	Thread (under) Take-up with 209X, 1253AL and 42642
42641	5129	Thread (under) Take-up Bracket
175D	2	Thread (under) Take-up Bracket Screw (2)
1253AL	7	Thread (under) Take-up Set Screw
42642	5129	Thread (under) Take-up Stripper
209X	3	Thread (under) Take-up Stripper Set Screw
42586	5120	Thread (upper) Controller
220J	3	Thread (upper) Controller Screw

PARTS FOR MACHINE NO. 82-11

No.	Plate	Name
42657	5128	Thread (upper) Take-up with 465AL
465AL	68	Thread (upper) Take-up Set Screw
57169	-----	Throat Plate for 42616
57172	-----	Throat Plate for 42675
57171	-----	Throat Plate (rounded corner) for 42616
1230F	5142	Throat Plate Screw
57135	-----	Throat Plate Steady Pin
1443F	8	Throat Plate Steady Pin Screw

## ACCESSORIES

No.	Plate	Name
42588	5110	Belt Guard with two wood screw 3/4 in. No. 10
4718	356	Machine Washer (felt) (3)
120342	413	Oiler (copper plated) with 120343
120343	413	Oiler Spout (3 1/2 in. long)
26026	6930	Screw Driver (large)
26485	6930	Screw Driver (small)
120341	2362	Tweezers
8908	6930	Wrench
19079	2158	Wrench

## KNEE LIFTER PARTS

14224	-----	Chain, with 56864
56864	8508	Chain Hook
42658	5140	Lifting Lever
21D	5137	Lifting Lever Hinge Screw
19081	6932	Lifting Lever Spring
1002C	5142	Lifting Lever Stop Screw
7124	6929	Rock Shaft
2764	6929	Rock Shaft Hanger (back) with two wood screws 1 in. No. 10
16128	6929	Rock Shaft Hanger (front) with two wood screws 1 in. No. 10
16646	6929	Rock Shaft Knee Arm with 1509E
16302	-----	Rock Shaft Knee Arm complete, Nos. 2766, 2767 and 16646
2766	6929	Rock Shaft Knee Arm Hub with 356C
1509C	151	Rock Shaft Knee Arm Hub Position Nut
356C	3817	Rock Shaft Knee Arm Hub Set Screw
2767	6929	Rock Shaft Knee Plate with 356C
356C	3817	Rock Shaft Knee Plate Set Screw
6337	6929	Rock Shaft Lifting Bracket with two 356C
6338	6929	Rock Shaft Lifting Bracket Hook
356C	3817	Rock Shaft Lifting Bracket Hook Set Screw



### KNEE LIFTER PARTS

No.	Plate	Name
356C	3817	Rock Shaft Lifting Bracket Set Screw
2770	6929	Rock Shaft Stop Dog with 140219C (2)
140219C	26C	Rock Shaft Stop Dog Set Screw
16129	6929	Rock Shaft complete, Nos. 2764, 6337, 6338, 7124, 16128, 16302 and two 2770
42659	-----	Knee Lifter complete (power table) Nos. 21D, 1002C, 14224, 16129, 19081 and 42658

### THREAD UNWINDER

228692	-----	Spool Pin (2)
201528X	-----	Spool Pin Nut (2)
228693	-----	Spool Pin Washer (2)
225257	23289	Spool Rest with 201018C and two each 201528K, 228692 and 228693
150203	23289	Spool Rest Cushion (felt) (2)
225388	23289	Spool Rest Rod
200383C	23289	Spool Rest Rod Set Screw
201018C	23289	Spool Rest Set Screw
259658	23289	Spool Stand with 200383C
225391	23289	Thread Guide (2)
201696J	23289	Thread Guide Lock Nut
225326	23289	Thread Guide Position Cup
225324	23289	Thread Guide Rod with 208AL and 225322
208AL	23289	Thread Guide Rod Screw
225322	23289	Thread Guide Rod Washer
225258	23289	Thread Unwinder complete, Nos. 201696J, 225257, 225324, 225326, 225388, 259658, two each 150203, 225391 and three wood screws 7/8 In. No. 12 F.H.
27739	23289	Thread Cone (wood) for large cone
225390	23289	Thread Cone Holder for inverted cones

Note: Nos. 27739 and 225390 are used with but included in 225258