


Form 8654
(520)
Printed in U.S.A.

LIST OF PARTS

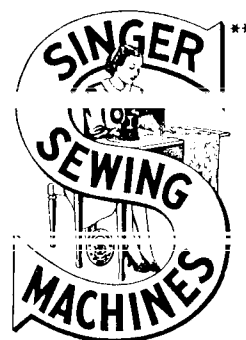

SINGER** MACHINES

Nos. 114-3 and 114-4

THE SINGER MANUFACTURING COMPANY

**A Trade Mark of THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, "TYPE B" or "TYPE D" OIL, sold by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL".

"TYPE D" OIL should be used when an oil is desired which will produce a minimum of stain on fabrics, even after a long period of storage.

INDEX

| | PAGE |
|---|------|
| ACCESSORIES..... | 18 |
| MACHINE No. 114-3..... | 7 |
| " " 114-4..... | 18 |
| NUMERICAL LIST OF PARTS..... | 23 |
| OBSOLETE PARTS..... | 21 |
| PROTECTOR..... | 19 |
| STARTING LEVER AND FOOT LIFTER PARTS..... | 20 |
| TABLE BELT GUIDE..... | 20 |
| THREAD UNWINDER..... | 20 |

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated
- C. Hardened only.
- D. Polished only.
- E. Soft, not Polished.
- F. Hardened and Polished.
- G.
- H. Blued
- J. Plated only.
- K. Hardened and Plated.
- L. Brass or Gilt.
- M. Oxidized.
- P. Japanned.
- R. Parkerized.

These letters **MUST BE USED** when they appear in the list, and **AFTER** the number *as* in the list.

In this series

1 to 1500 and 50001 to 51500 are Screw Numbers.

1501 to 1800 are Nut Numbers.

1801 to 2000 are Roller Numbers.

2001 to 50000 and 52001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.


Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

SINGER Needles should be used
in SINGER Machines
These Needles and their Containers
are marked with the
Company's Trade Mark **SINGER**. 1

Needles in Containers marked
"FOR SINGER MACHINES"
are **NOT SINGER** made needles. 2

LIST OF PARTS COMPLETE
FOR
MACHINE No. 114-3

**FOR SEWING TWO OR FOUR-HOLE BUTTONS ON SHIRTS, WAISTS
AND UNDERWEAR. SMALL BUTTONS ONLY. MAKES TWO
PARALLEL BARS IN FOUR-HOLE BUTTONS. MAKES FOURTEEN
STITCHES INCLUDING THE FASTENING STITCHES.**

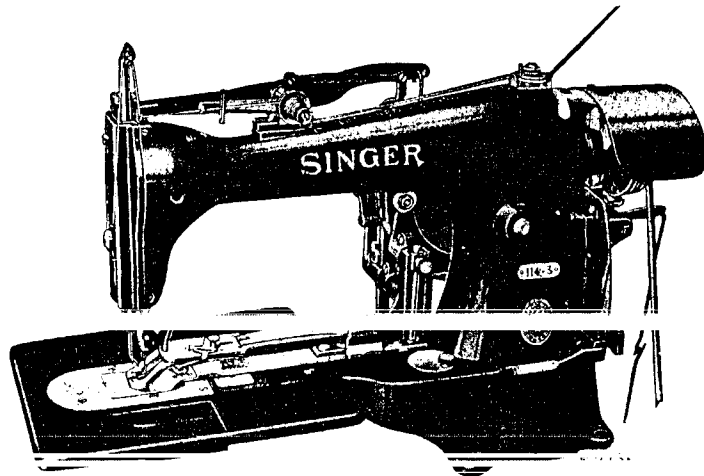

MACHINE No. 114-3

| NO. | PLATE | NAME |
|--------|-------|---|
| *59701 | — | Arm with 4449, 59767 and two 164E.... |
| 16532 | 6976 | " Dowel Pin..... |
| 4448 | 6976 | " Oil Tube, for intermediate bearing.. |
| 56015 | 6976 | " " " " oiling 59705 and 59706. |
| 880E | 6998 | " Screw..... |
| 59702 | 6975 | " Shaft (horizontal)..... |
| 17703 | 6981 | " " " Bushing (back)... |
| 50333c | 6998 | " " " " " Ad- justing Screw..... |
| 4029E | 6991 | Arm Shaft (horizontal) Bushing (back) Adjusting Screw Nut..... |
| *4449 | — | Arm Shaft (horizontal) Bushing (front).. |
| 59703 | 6976 | " " " Gear with two 1036c..... |
| 1008E | 6976 | Arm Shaft (horizontal) Gear Box Screw... |
| 59704 | 6976 | " " (upright)..... |
| 59705 | 6976 | " " " Bushing (lower).... |
| 435c | 7015 | " " " " " Set Screw..... |
| 59706 | 6976 | Arm Shaft (upright) Bushing (upper).... |
| 448c | 6992 | " " " " " Set Screw..... |
| 59707 | 6976 | Arm Shaft (upright) Gear (lower) with two 1253c..... |
| 1253c | 6976 | Arm Shaft (upright) Gear (lower) Set Screw..... |
| 59708 | 6976 | Arm Shaft (upright) Gear (upper) with two 1253c..... |
| 1253c | 6976 | Arm Shaft (upright) Gear (upper) Set Screw..... |
| 18498 | 6975 | Belt Cover..... |
| 59795 | 6977 | " " Bracket with 184E and 59796. |
| 184E | 6998 | " " " Screw Stud..... |
| 59796 | 6988 | " " " Stud..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 50372D | 7015 | Stop Cam Interlocking Rod Case Bracket Screw..... |
| 1204E | 6998 | Stop Cam Interlocking Rod Case Hinge Screw..... |
| 17859 | 6977 | Stop Cam Interlocking Rod Case Socket Joint..... |
| 898D | 6998 | Stop Cam Interlocking Rod Case Socket Joint Cap Screw..... |
| 39343 | 6981 | Stop Cam Interlocking Rod Case Spring (flat)..... |
| 430C | 6994 | Stop Cam Interlocking Rod Case Spring Adjusting Screw..... |
| 1520E | 6994 | Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut..... |
| 39344 | 6994 | Stop Cam Interlocking Rod Case Spring Bracket with 430C and 1520E..... |
| 1186F | 6991 | Stop Cam Interlocking Rod Case Spring Bracket Screw..... |
| 17861 | 6994 | Stop Cam Interlocking Rod Case Stop Stud..... |
| 1254C | 6998 | Stop Cam Interlocking Rod Case Stop Stud..... |
| 1508E | 6999 | Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut..... |
| 17862 | 6994 | Stop Cam Interlocking Rod Case Stop Stud Spring..... |
| 59771 | 6994 | Stop Cam Interlocking Rod Case Wearing Block..... |
| 193F | 6983 | Stop Cam Interlocking Rod Case Wearing Block Screw..... |
| 17863 | 6994 | Stop Cam Interlocking Rod Spring..... |
| 17864 | 6994 | " " " " Stop..... |
| 1318D | 6994 | " " " " " Screw... |
| 3012 | 6988 | " " Pin..... |
| 1206C | 6994 | " " Screw..... |
| 2102 | 6995 | Tension Disc..... |
| 1560C | 6995 | " Regulating Thumb Nut..... |
| 50148C | 6995 | " Screw Stud..... |
| 42336 | 6995 | " Spring..... |
| 13915 | 6995 | " " Bushing..... |
| 10145 | 6995 | " Thread Guide..... |
| 59772 | 6995 | Thread Eyelet (head of arm)..... |
| 233D | 6995 | " " " " " Set Screw... |
| 1743D | 6979 | " Nipper Adjusting Thumb Nut... |
| 59773 | 6995 | " " Body..... |
| 624C | 6991 | " " " Set Screw..... |
| 59774 | 6995 | " " Cam with two 50150C.... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 50150C | 6991 | Thread Nipper Cam Set Screw..... |
| 2921 | 6995 | " " Disc..... |
| 12162 | 6995 | " " " Guide Pin..... |
| 62169 | 6979 | " " " Spring..... |
| 59775 | 6995 | " " Eyelet..... |
| 1527D | 6995 | " " Lock Nut..... |
| 59776 | 6995 | " " Stud with 13538..... |
| 13538 | 6995 | " " " Position Pin..... |
| 13539 | 6995 | " " " Roller..... |
| 13540 | 6995 | " " " " Pin..... |
| 2026 | 6995 | " " " Spring..... |
| 59777 | — | Thread Nipper Stud complete, Nos. 13539, 13540 and 59776..... |
| 59778 | — | Thread Nipper complete, Nos. 1527D, 1743D, 2026, 59773, 59775, 59777, 62169 and two 2921..... |
| 62138 | 6987 | Thread Pull-off Cam..... |
| 208D | 6980 | " " " Screw (large)..... |
| 227D | 7015 | " " " " (small)..... |
| 59780 | 6996 | " " Driving Lever..... |
| 1196C | 6998 | " " " " H i n g e Screw..... |
| 59781 | 6996 | Thread run-on Driving Lever Spring.... |
| 59782 | 6996 | " " Lever..... |
| 59783 | 6996 | " " " Bushing..... |
| 1445H | 6996 | " " " " Screw.... |
| 59784 | 6996 | " " " Connection..... |
| 50111D | 6996 | " " " " H i n g e Screw (driving lever end)..... |
| 50111D | 6996 | Thread Pull-off Lever Connection Hinge Screw (lever end)..... |
| 59785 | 6996 | Thread Pull-off Regulator..... |
| 62170 | — | " Take-up Body with 62172..... |
| 42808 | 6979 | " " Roller..... |
| 62171 | 6979 | " " " Cap..... |
| 337D | 6979 | " " " " Screw..... |
| 62172 | 6979 | " " " Pin..... |
| 62173 | 6979 | Thread Take-up complete, Nos. 337D, 42808, 62170 and 62171..... |
| 691F | 6990 | Thread Take-up Screw..... |
| 39452 | 6979 | " Wiper Body..... |
| 39453 | 6979 | " " " Finger..... |
| 330D | 6979 | " " " " Screw..... |
| 1207D | 6979 | " " " Hinge Screw..... |
| 59787 | 6979 | " " " Support..... |
| 641D | 6979 | " " " " Set Screw.. |
| 39455 | 6979 | " " " Wire..... |

| NO. | PLATE | NAME |
|-------|-------|-----------------------------------|
| 39456 | 6979 | Thread Wiper Body Wire Clamp..... |
| 1302D | 6979 | “ “ “ “ “ Screw.. |
| 62139 | 7016 | Throat Plate..... |
| 62199 | 7016 | “ “ Needle Guard..... |
| 206D | 7016 | “ “ “ “ Screw..... |
| 691F | 6990 | “ “ Screw..... |
| 17872 | 6994 | Trip Lever..... |
| 1196C | 6998 | “ “ Hinge Screw..... |
| 17873 | 6994 | “ “ Spring..... |
| 1182E | 6978 | “ “ “ Screw..... |
| 17874 | 6987 | Tripping Point..... |
| 190D | 6990 | “ “ “ Screw..... |

MACHINE No. 114-4

FOR SEWING TWO OR FOUR-HOLE BUTTONS ON SHIRTS, WAISTS AND UNDERWEAR. SMALL BUTTONS ONLY. MAKES TWO PARALLEL BARS IN FOUR-HOLE BUTTONS. MAKES TWENTY-ONE STITCHES INCLUDING THE FASTENING STITCHES.

This machine is the same as No. 114-3 with the following exception:

| NO. | PLATE | NAME |
|-------|-------|---|
| 62200 | 7015 | Feed Cam with two each 190D, 208D, 207D, 1102C, 17874 and 62128, in place of 62196..... |

ACCESSORIES

| NO. | PLATE | NAME |
|-------|-------|--|
| 59797 | 7005 | Button Tray with two wood screws 1¼ in. No. 14..... |
| 18419 | — | Cylinder Base Plate with two 453C..... |
| 18420 | 7006 | “ “ “ Hinge Connection..... |
| 18423 | 7006 | “ “ “ “ “ “ Hinge Pin..... |
| 453C | 6987 | Cylinder Base Plate Hinge Connection Hinge Pin Set Screw..... |
| 18424 | 7005 | Cylinder Base Plate (hinged) complete, Nos. 18419, two each 18420, 18423, three wood screws 1¼ in. No. 12 and four 134D..... |
| 134D | — | Cylinder Base Plate Screw..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 35565 | 7007 | Oiler (copper plated) with 36566..... |
| 36566 | 7007 | “ Spout, 9 in. long, with 120117..... |
| 120117 | 7014 | “ “ Washer (leather)..... |
| 11831 | 7007 | Screw Driver (large)..... |
| 26026 | 7007 | “ “ (small)..... |
| 4822 | 7007 | Wrench for 1528 and 1547..... |
| 10875 | 7007 | “ “ 1518, 1520, 1649, 1650 and 1662..... |
| 17905 | 7007 | Wrench for 1176, 1178, 1654, 1655, 1676 and 1681..... |
| 25200 | 7007 | Wrench for 1527..... |
| 27662 | 7007 | “ “ 1254 and 1508..... |

PROTECTOR

| NO. | PLATE | NAME |
|-------|-------|---|
| 39489 | 7008 | Arm with 39490..... |
| 160C | 7009 | “ Clamping Screw..... |
| 39490 | — | Blade..... |
| 39491 | 7008 | Bracket with two each 426C and 448C.... |
| 426C | 7009 | “ Adjusting Screw..... |
| 39492 | 7009 | Crank with 160C..... |
| 39493 | 7009 | “ Bracket with 1120C and two 454C.... |
| 454C | 7009 | “ “ Set Screw..... |
| 52598 | 7009 | “ Hinge Stud..... |
| 1120C | 7009 | “ “ “ Set Screw..... |
| 39494 | 7008 | Rod..... |
| 15261 | 7009 | “ Collar with 237F..... |
| 237F | 7009 | “ “ Set Screw..... |
| 39495 | 7009 | “ Connection..... |
| 176D | 7009 | “ “ Screw..... |
| 1099F | 7009 | “ Screw Stud..... |
| 39496 | 7008 | “ Sleeve..... |
| 448C | 7009 | “ “ Set Screw..... |
| 39497 | 7009 | “ Spring..... |
| 15261 | 7009 | “ “ Collar with 237F..... |
| 237F | 7009 | “ “ “ Set Screw..... |
| 39498 | — | Protector (front of needle) complete, Nos. 1099F, 39489, 39491 to 39497, 52598 and two each 176D, 15261 and 50351D..... |

PLATE 2836—ONE-FOURTH SIZE

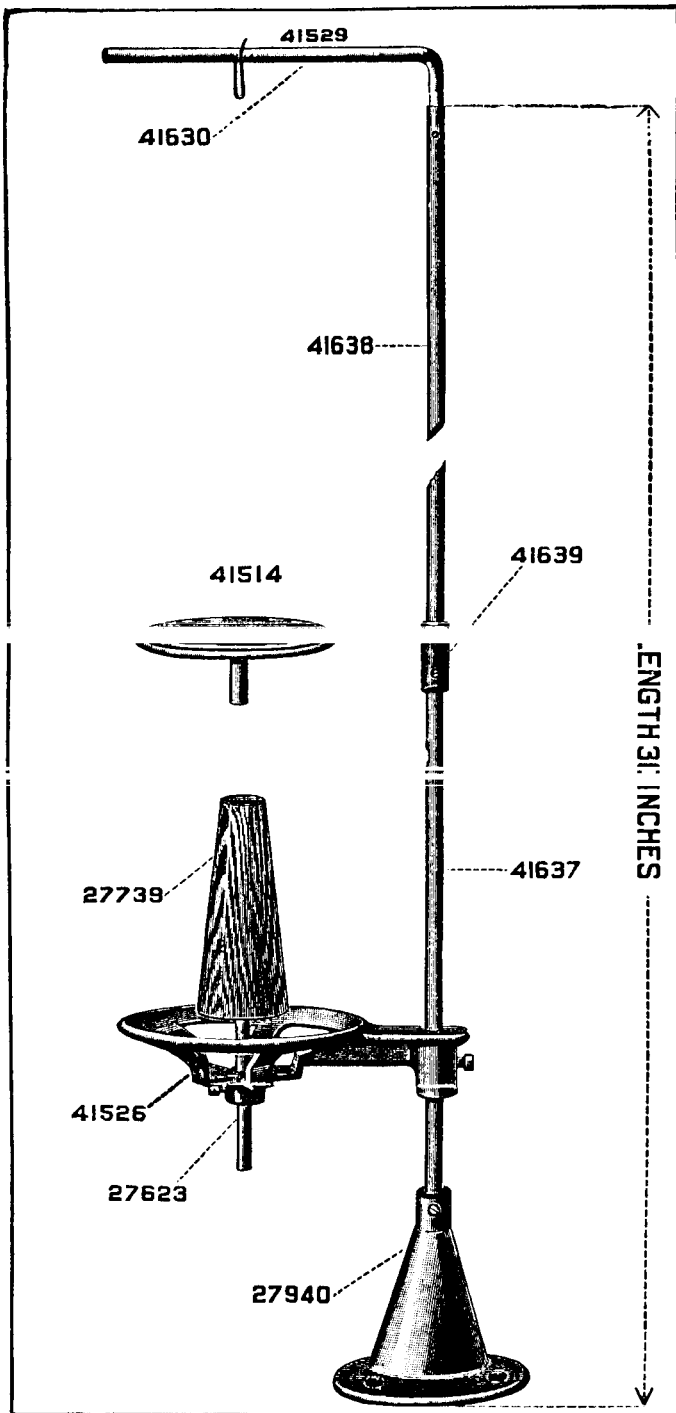


PLATE 3747—FULL SIZE

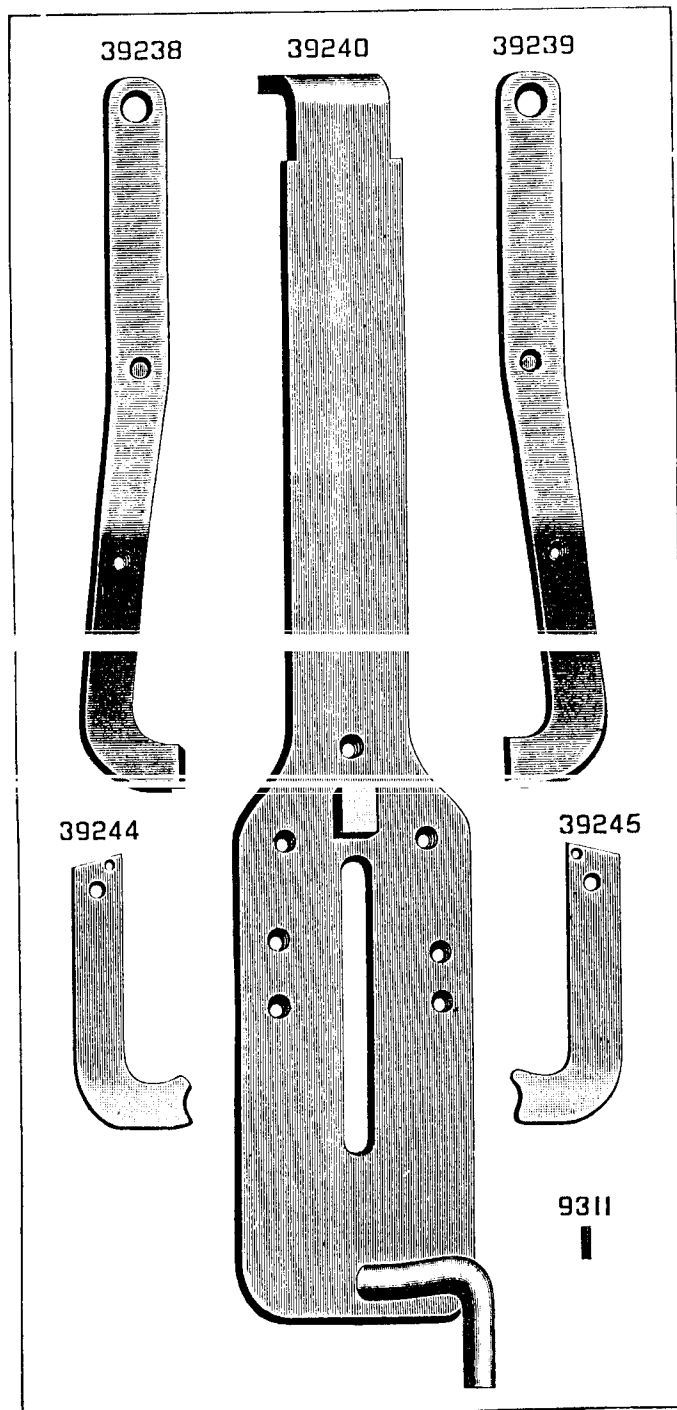


PLATE 3751—FULL SIZE


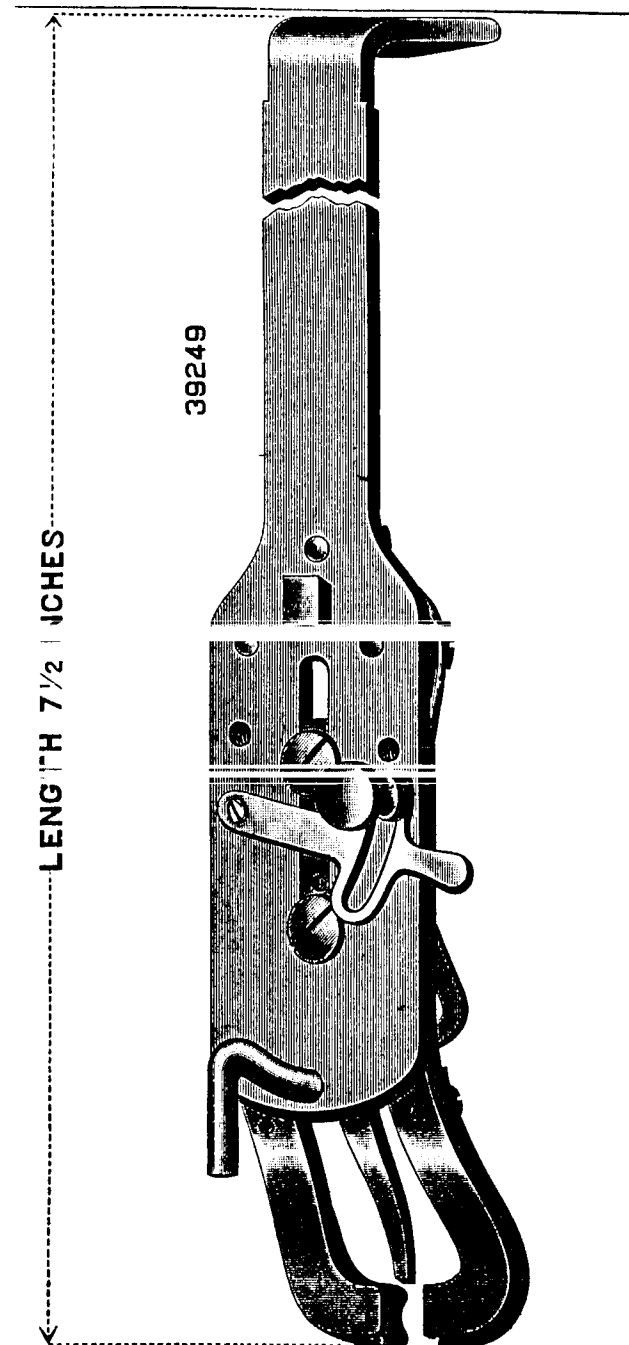


PLATE 6975—ONE-FOURTH SIZE

59702




18498

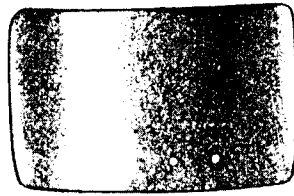

62124



62105

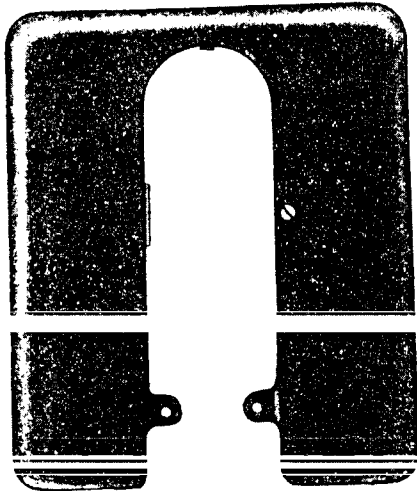

62182


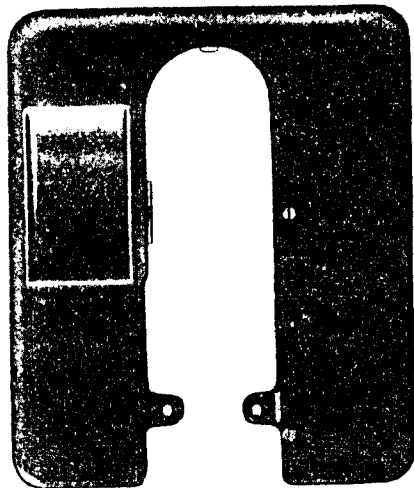


PLATE 6976—FULL SIZE


59704



59708

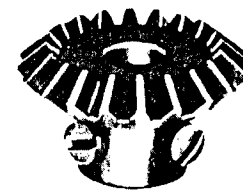

59703

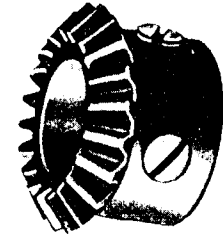

59706



1036



39223



1253



4449



1055



59705



56015



59707



16532



21828



PLATE 6977—ONE-HALF SIZE

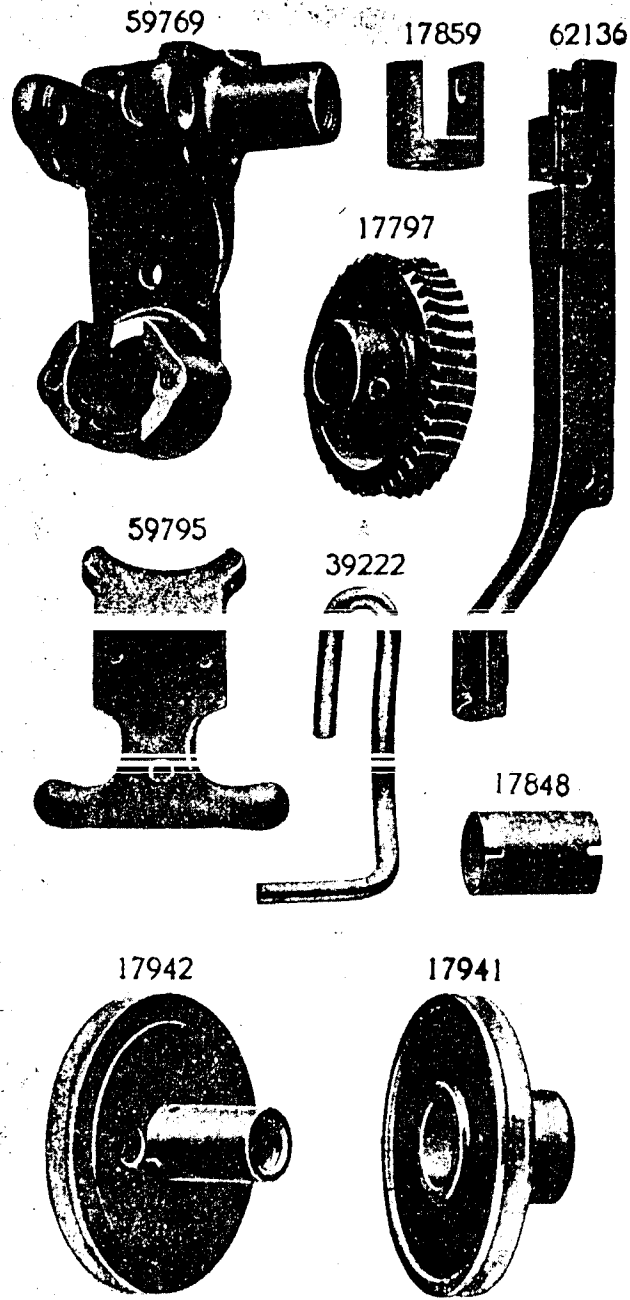


PLATE 6978—FULL SIZE

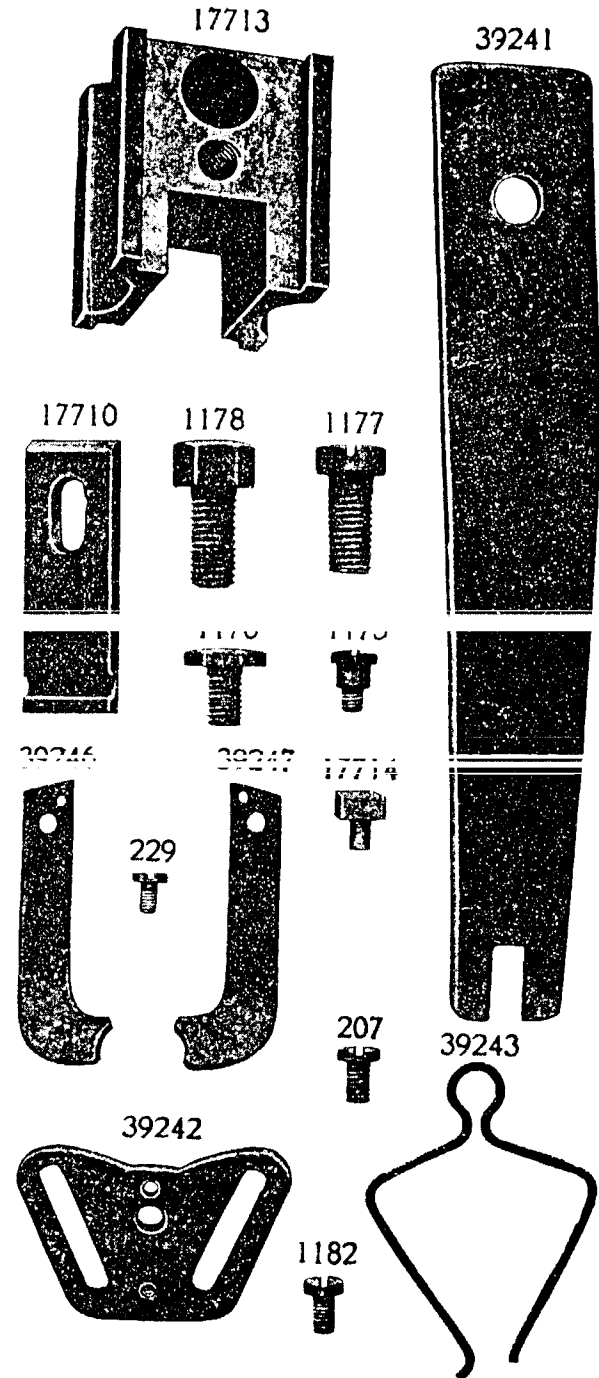


PLATE 6979—FULL SIZE

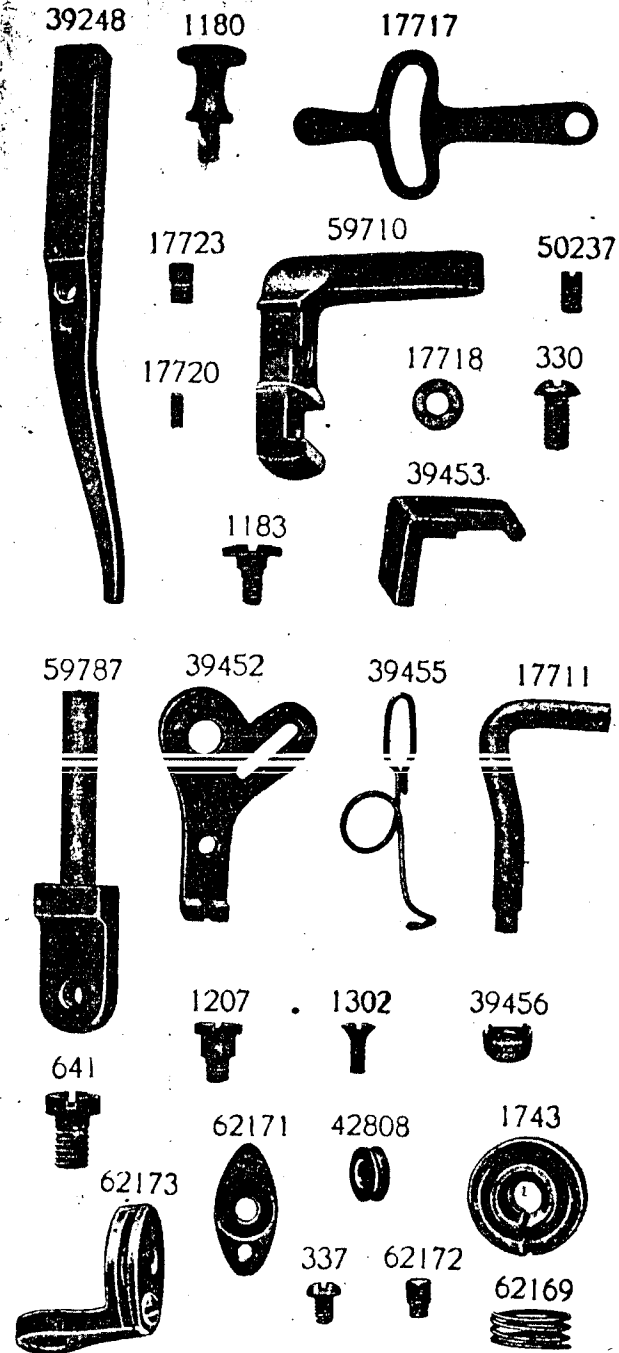


PLATE 6980—FULL SIZE

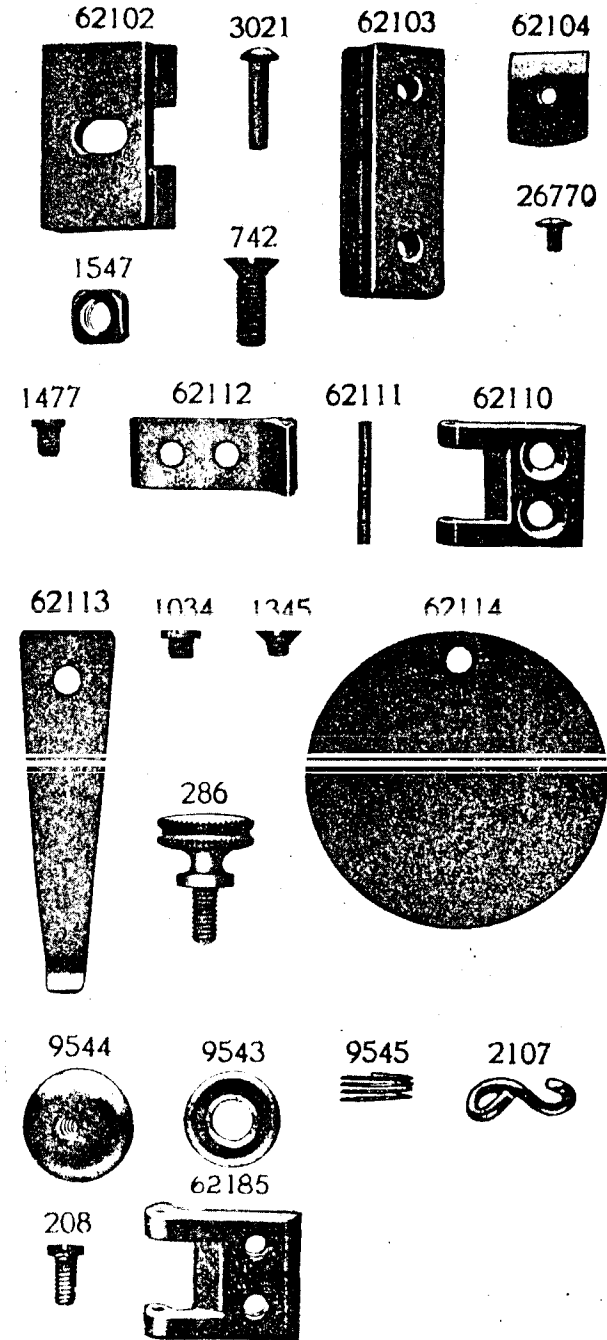


PLATE 6981—ONE-HALF SIZE

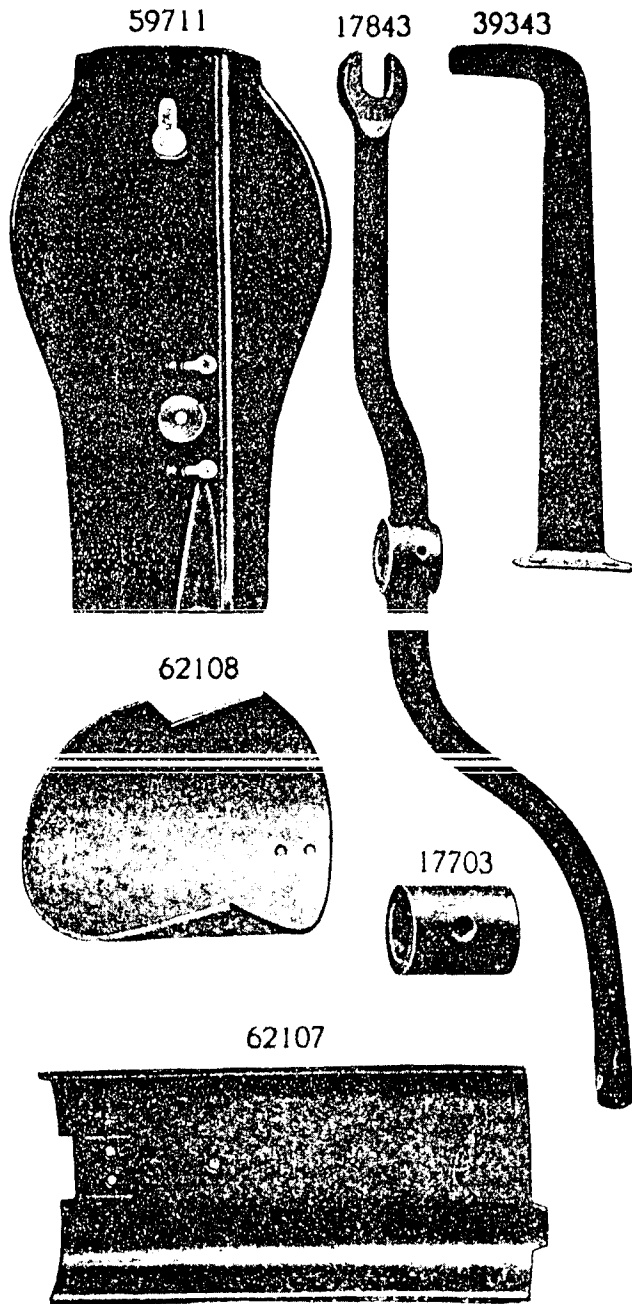


PLATE 6982—FULL SIZE

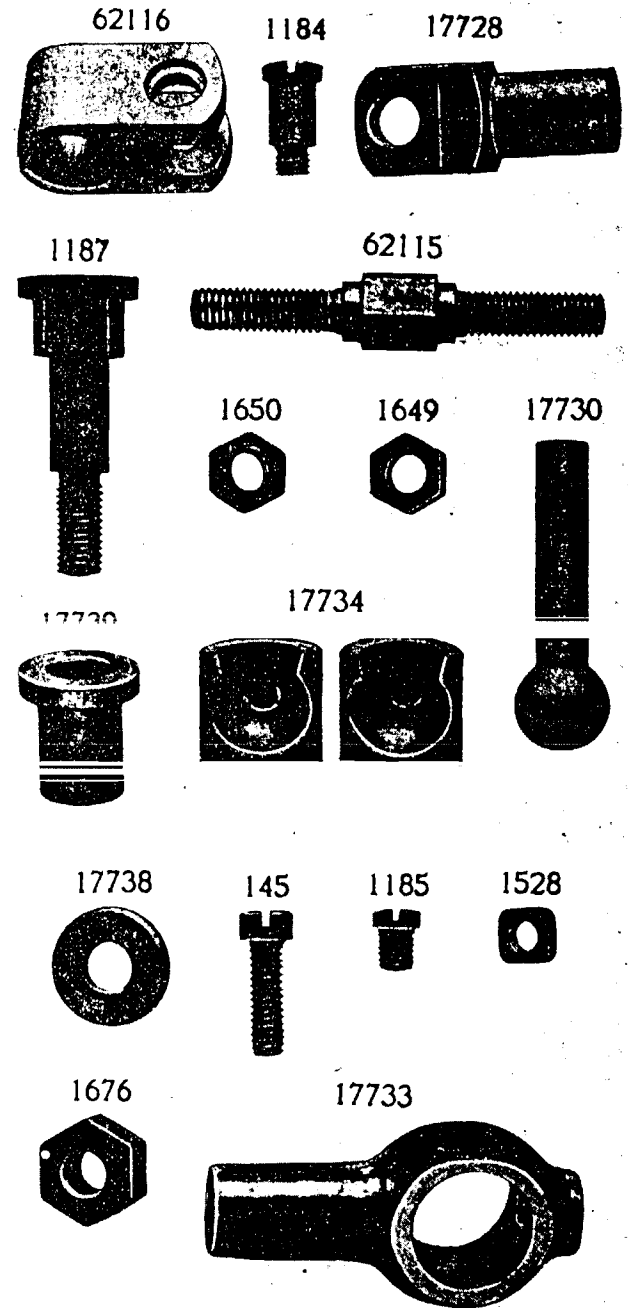


PLATE 6983—FULL SIZE

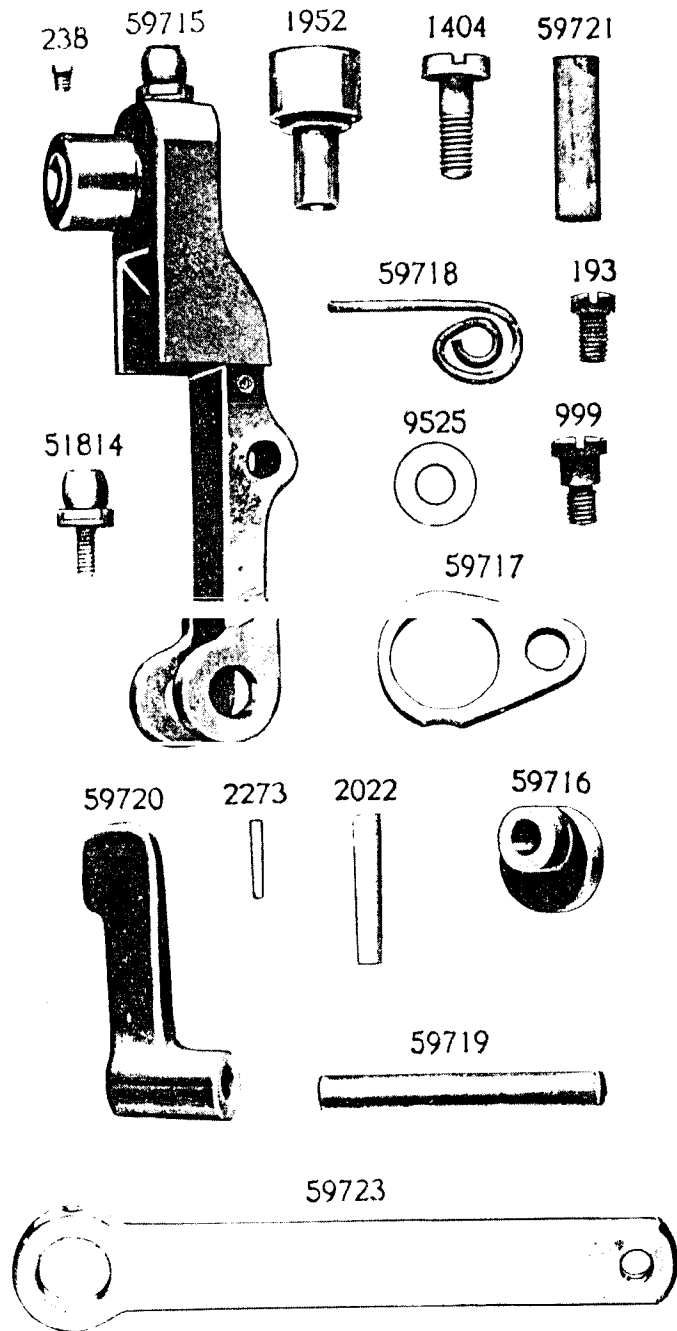


PLATE 6984—ONE-HALF SIZE


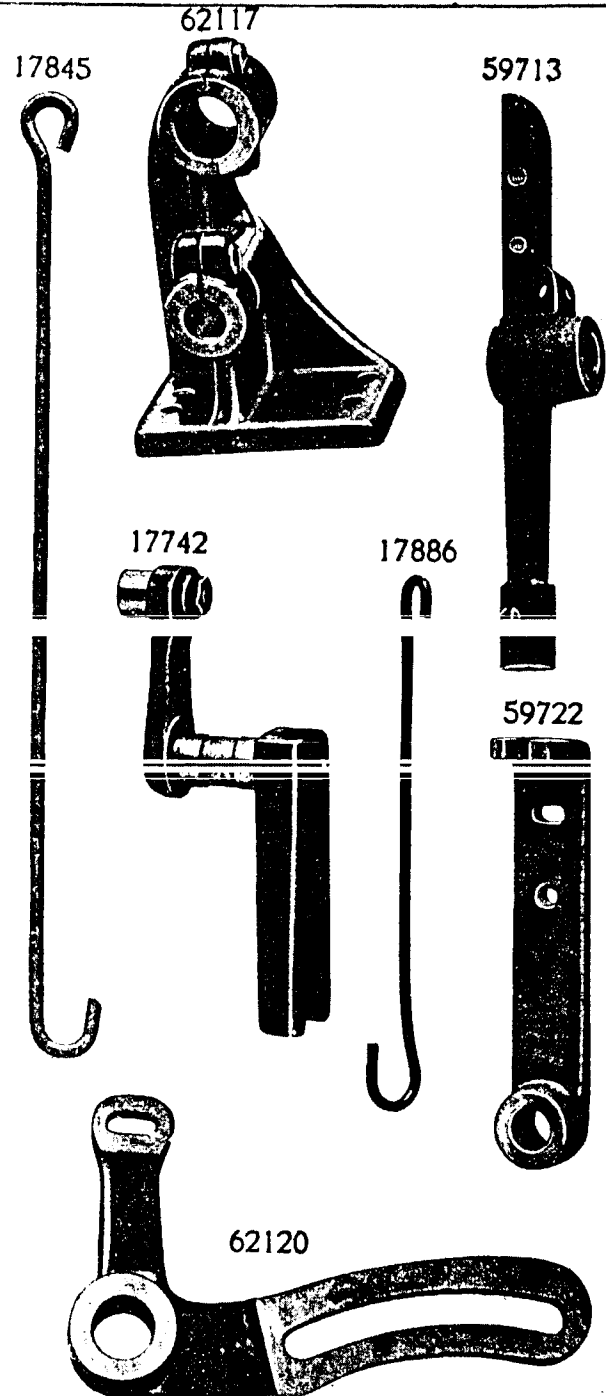


PLATE 6985—FULL SIZE



62118


1094

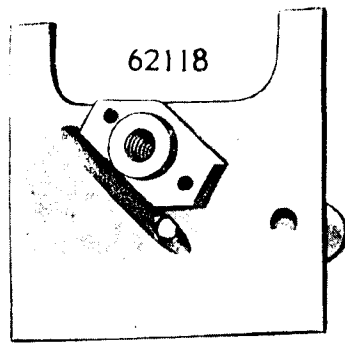

55300



62119

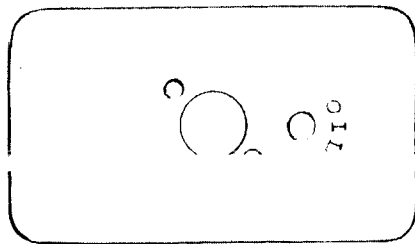


17741



50324



52121

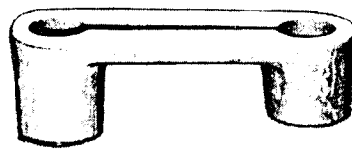

14017




1655



PLATE 6987—FULL SIZE

18415

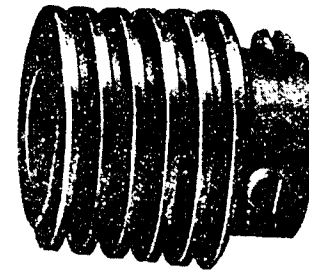

1442



1441



453



1192



59724



17743



1191



 
17744



17745



1190



59730




934



50306



18368

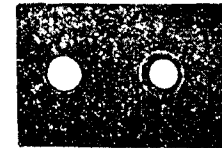

17874



62138



PLATE 6988—FULL SIZE

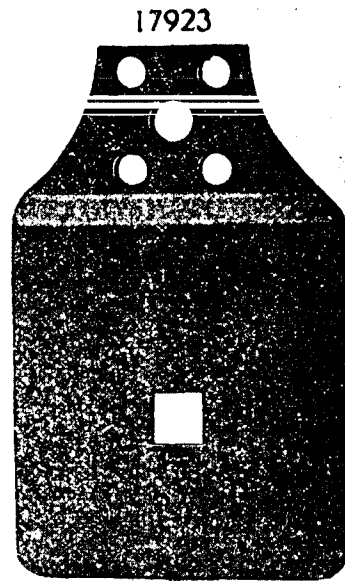
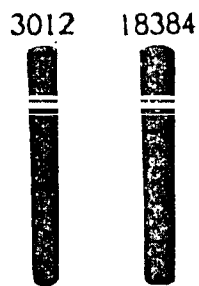
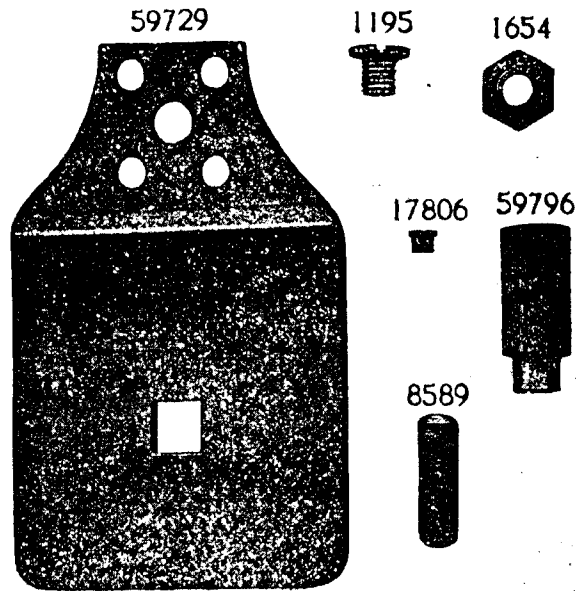


PLATE 6989—ONE-HALF SIZE

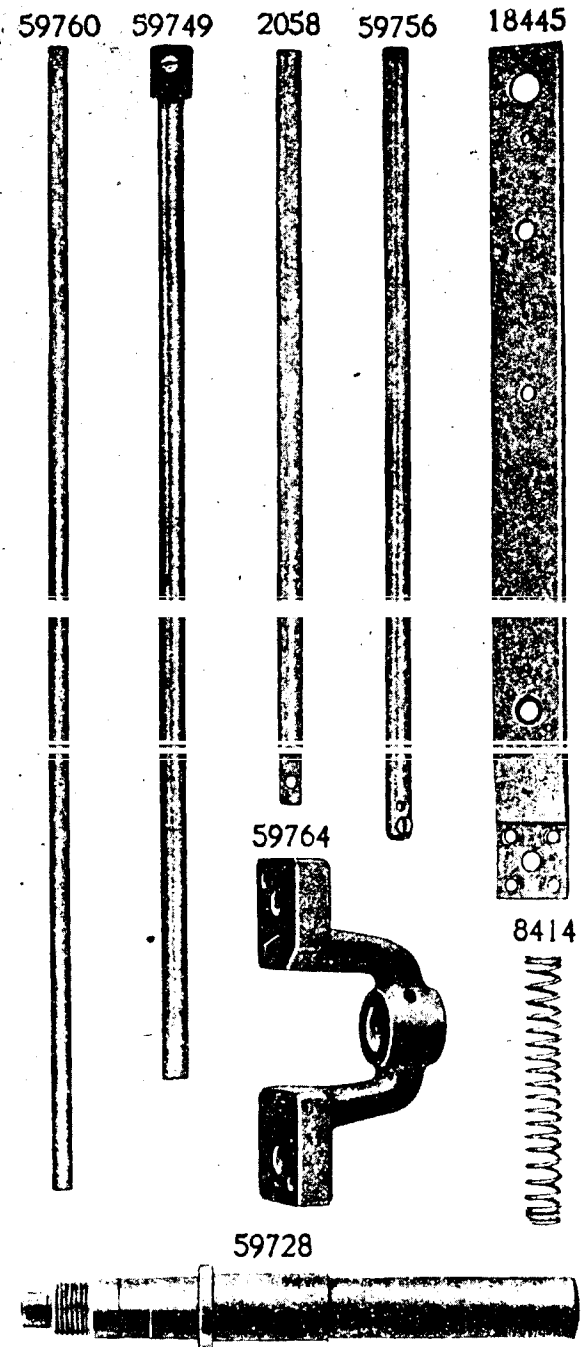


PLATE 6990—FULL SIZE

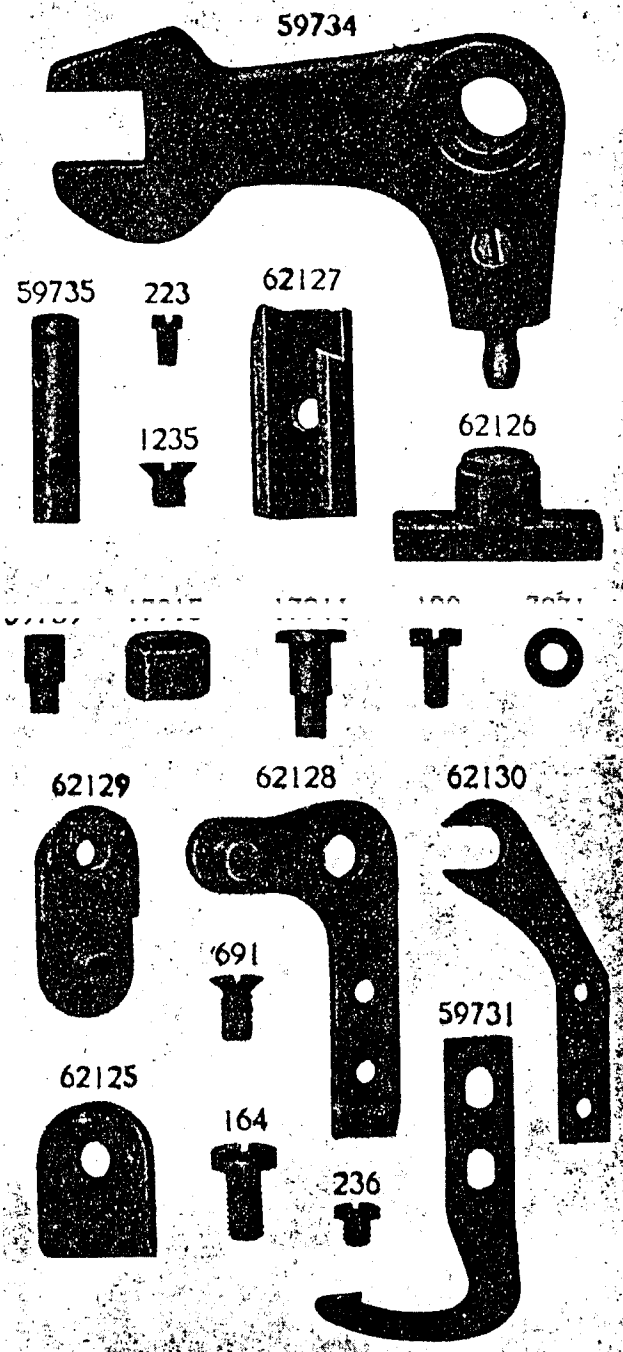


PLATE 6991—FULL SIZE


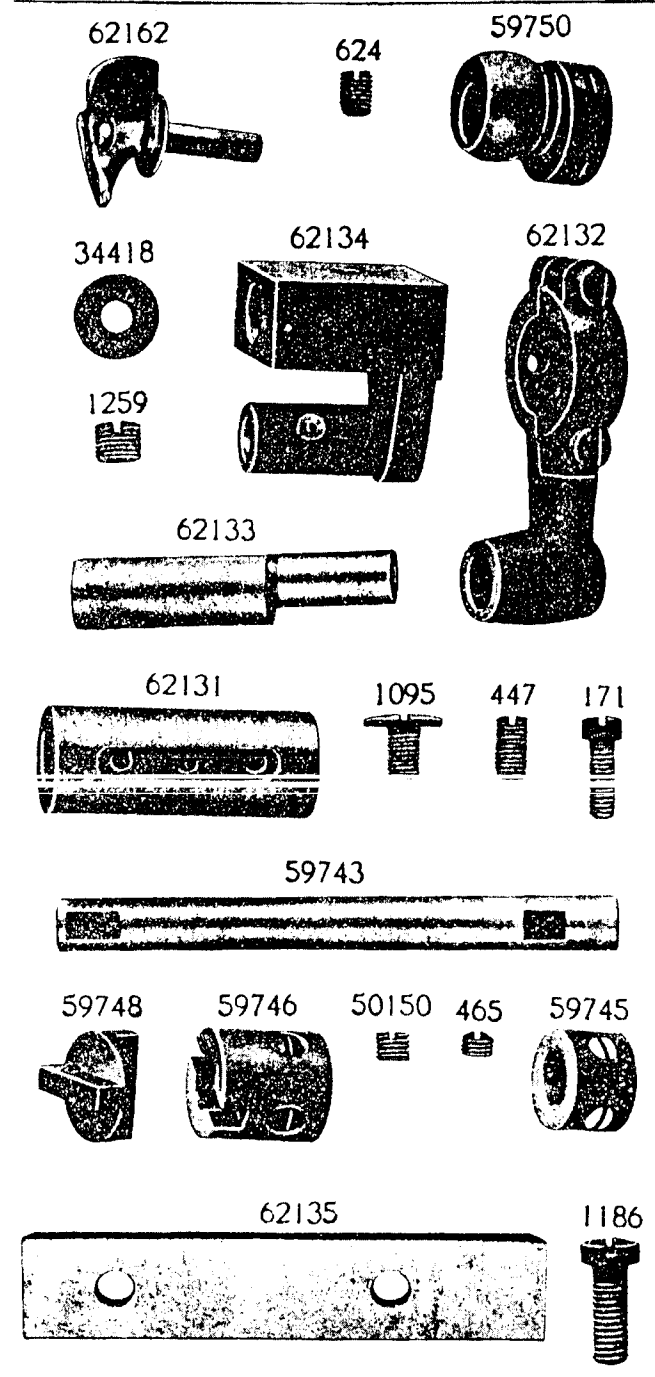


PLATE 6992—FULL SIZE

59757



1293

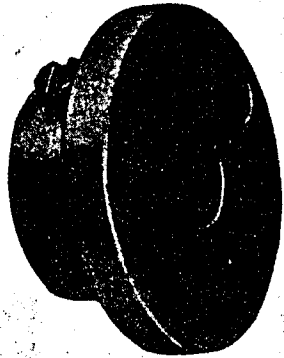

17841



448



196



 
377



39203




2052



17842



 52045



59747

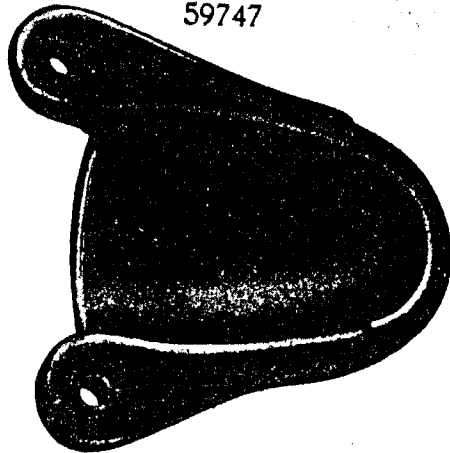


PLATE 6993—FULL SIZE

59758



59759



59761



59762



51812



59766




965



59765



59763

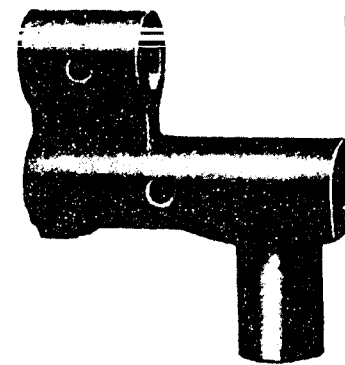

1480



1072



59789



59786



59741

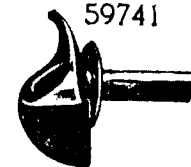


PLATE 6994—FULL SIZE

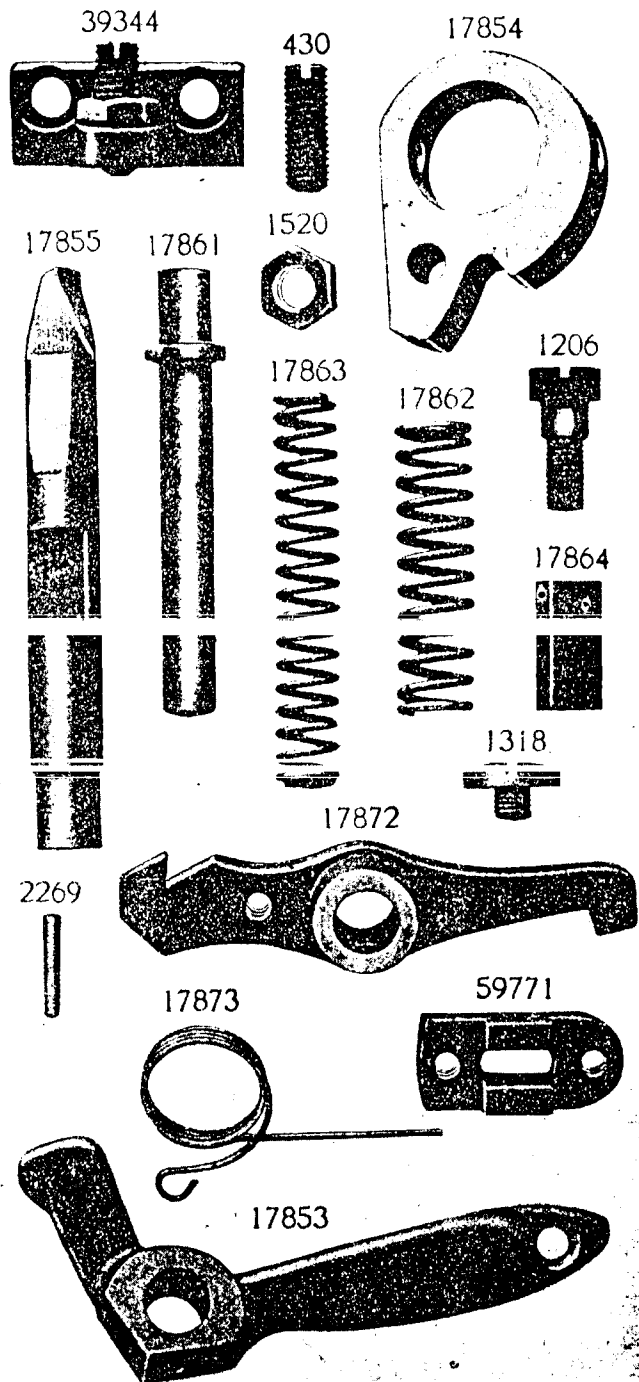


PLATE 6995—FULL SIZE

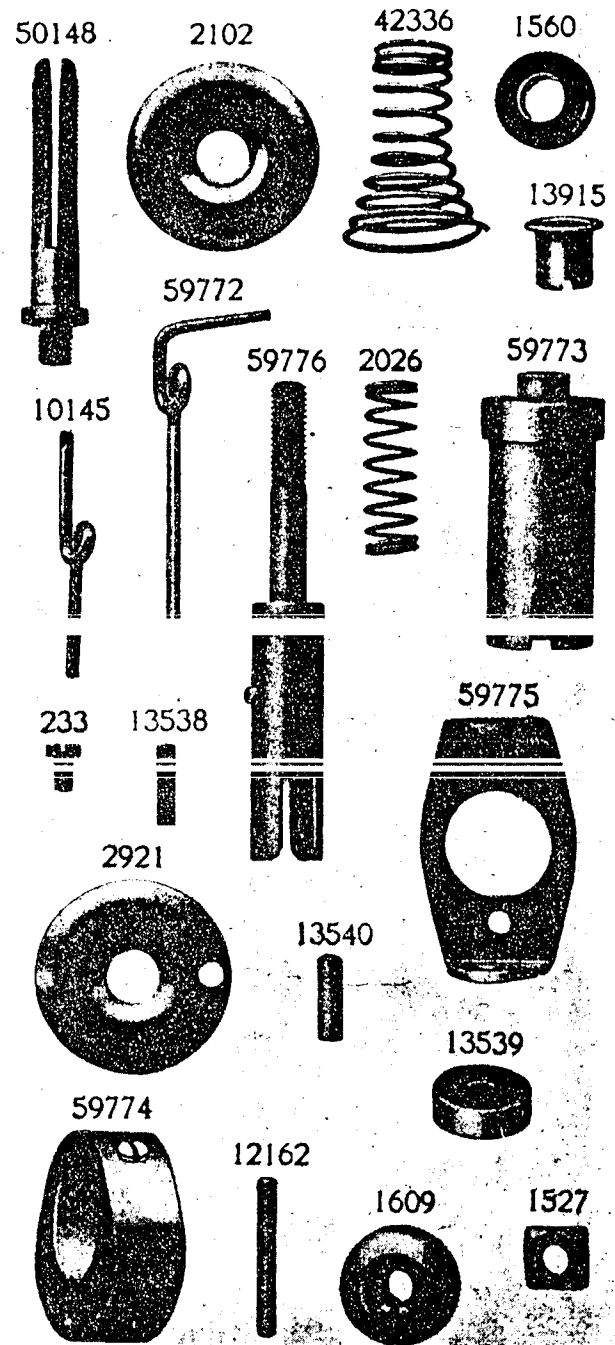


PLATE 6996—FULL SIZE

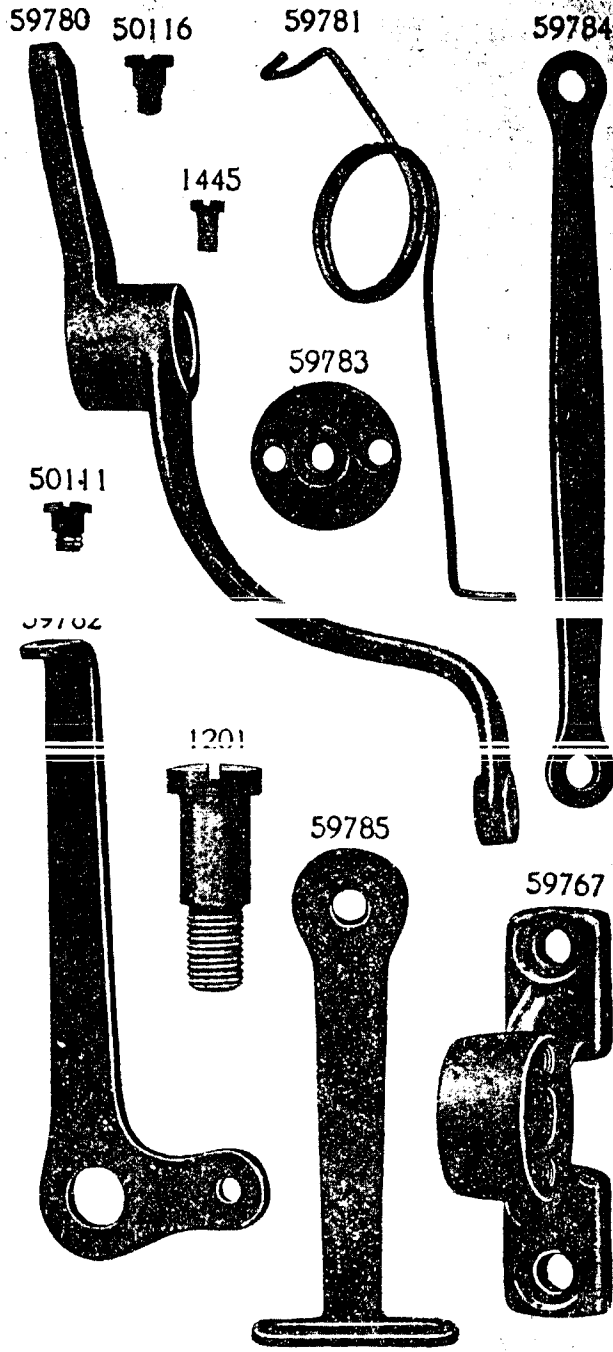


PLATE 6998—FULL SIZE

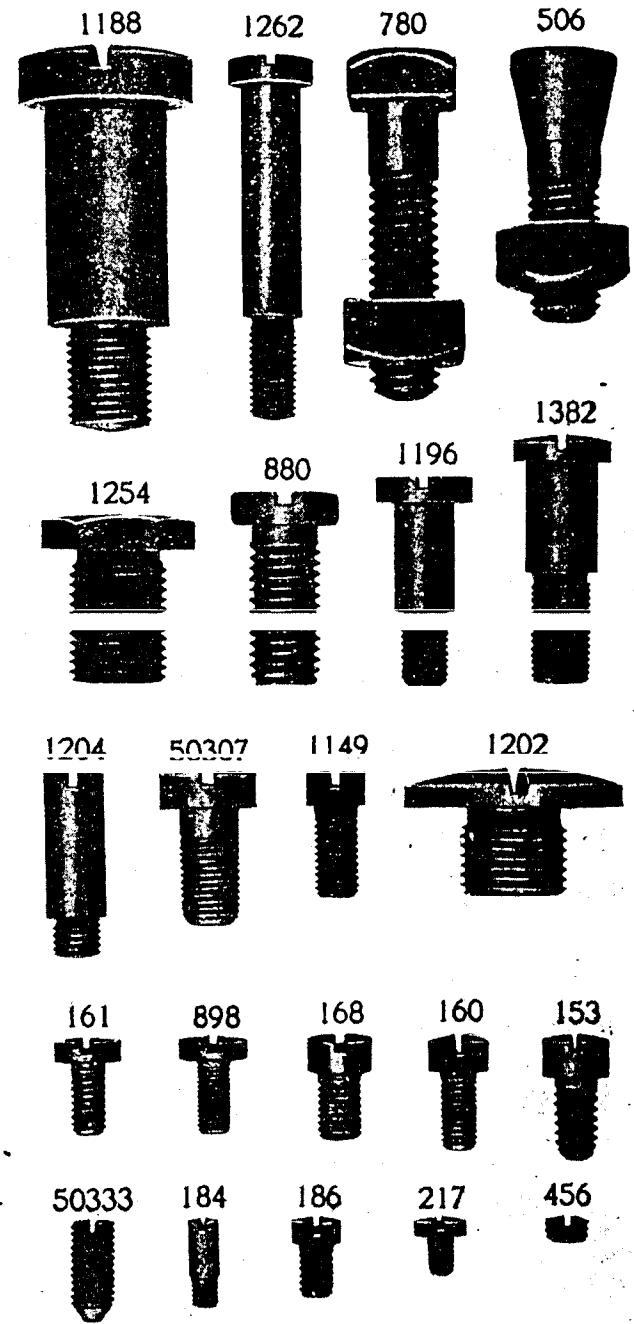


PLATE 6999—FULL SIZE

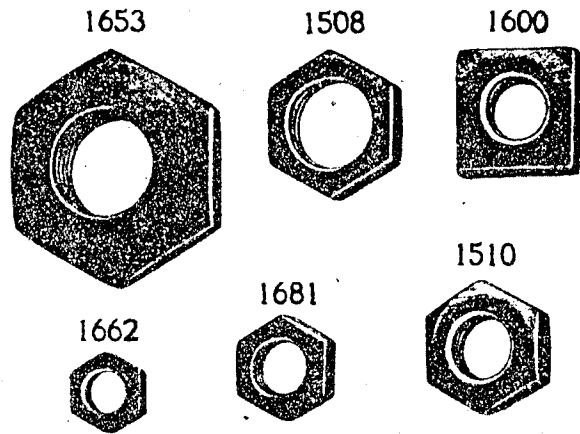


PLATE 7005—ONE-FOURTH SIZE

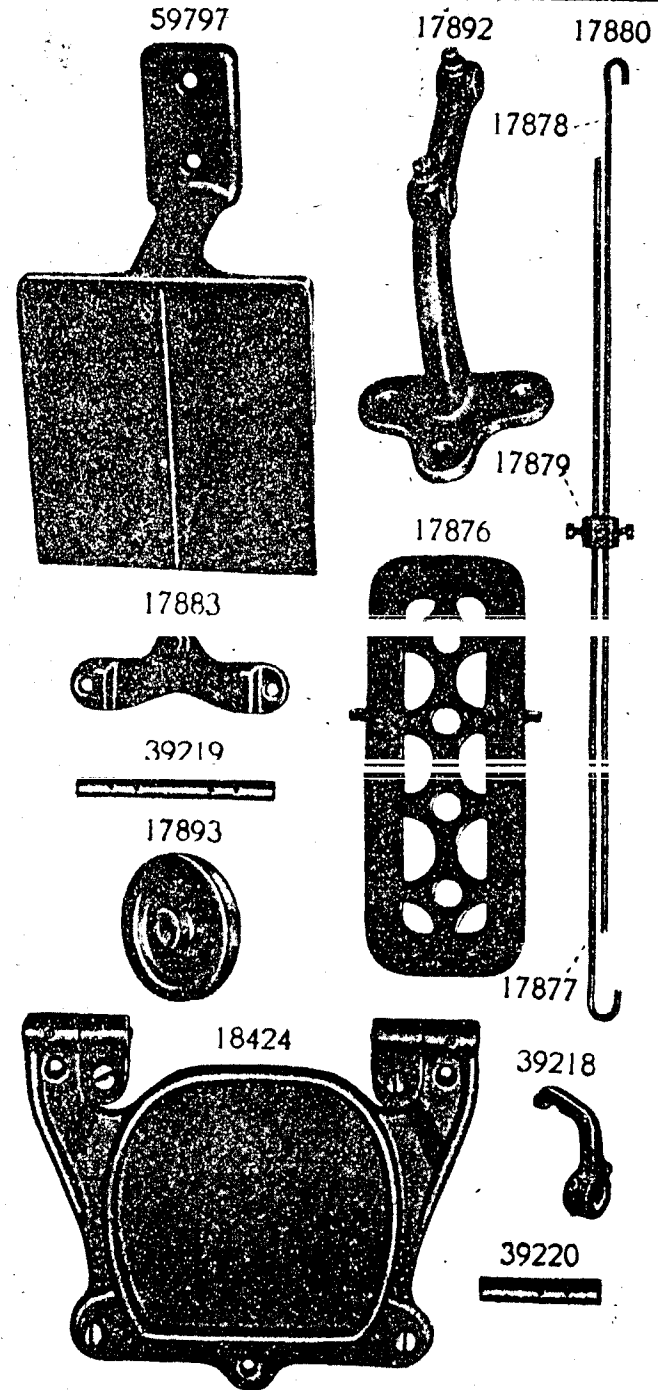


PLATE 7006—FULL SIZE

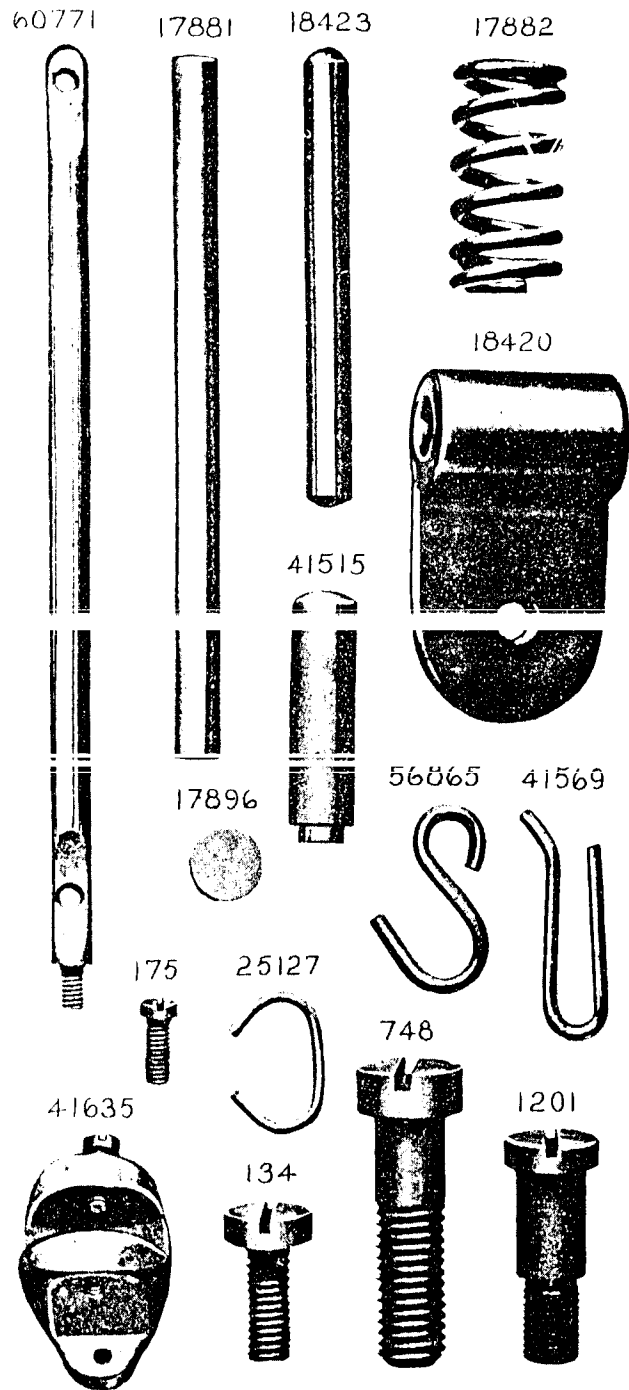


PLATE 7007—ONE-HALF SIZE

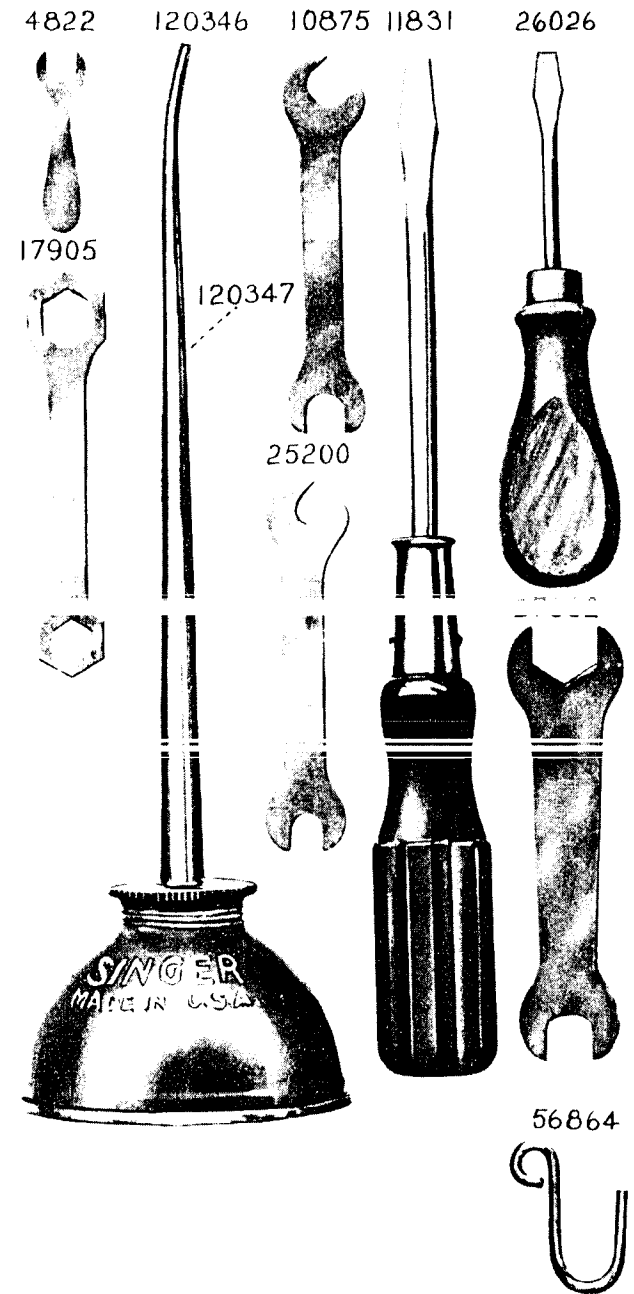


PLATE 7008--ONE-HALF SIZE

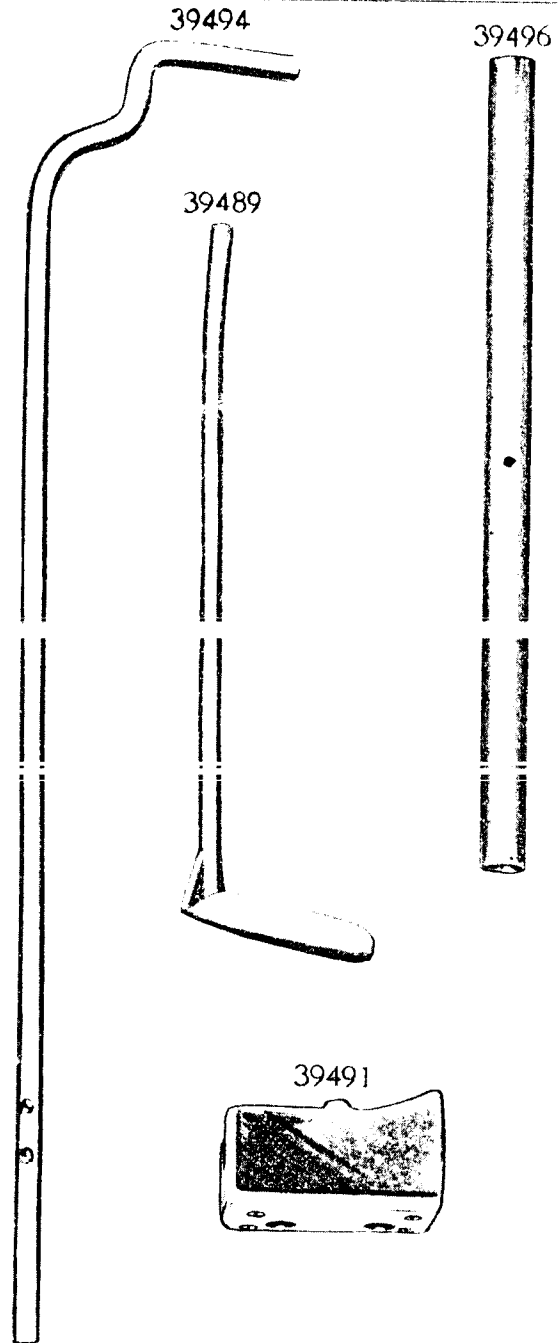


PLATE 7009--FULL SIZE

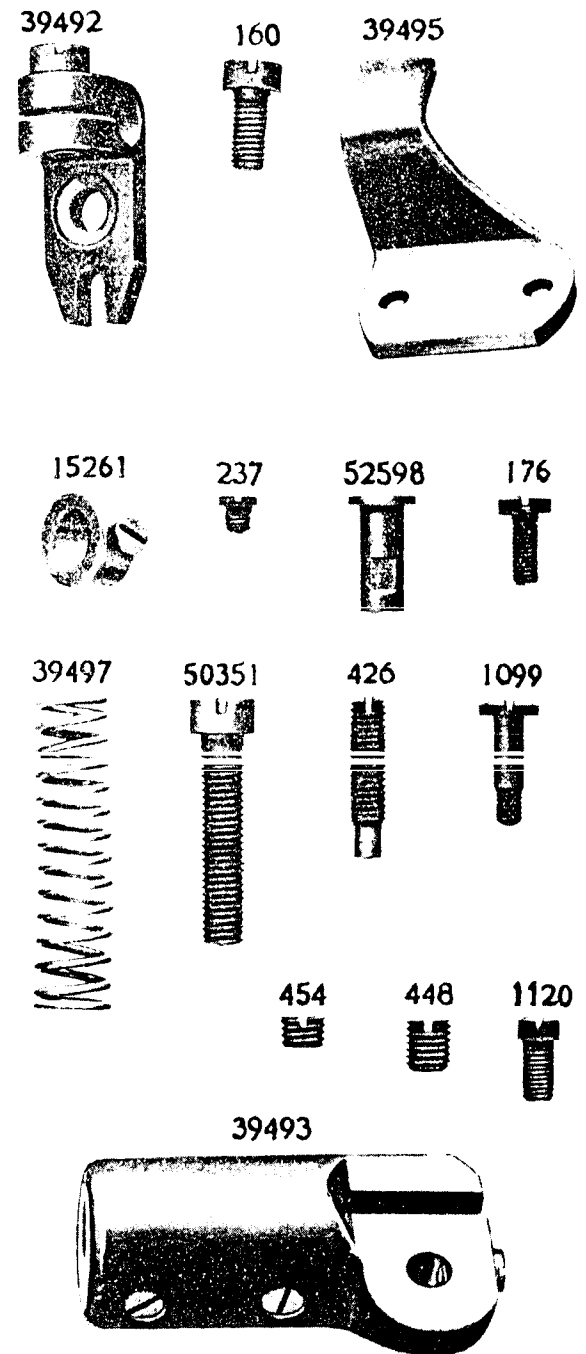


PLATE 7013—ONE-HALF SIZE


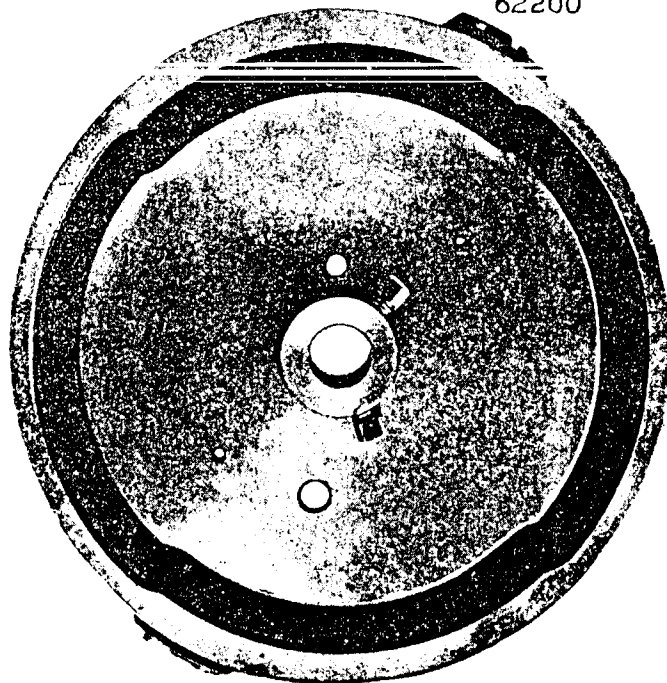


PLATE 7014—ONE-HALF SIZE

62198

62183

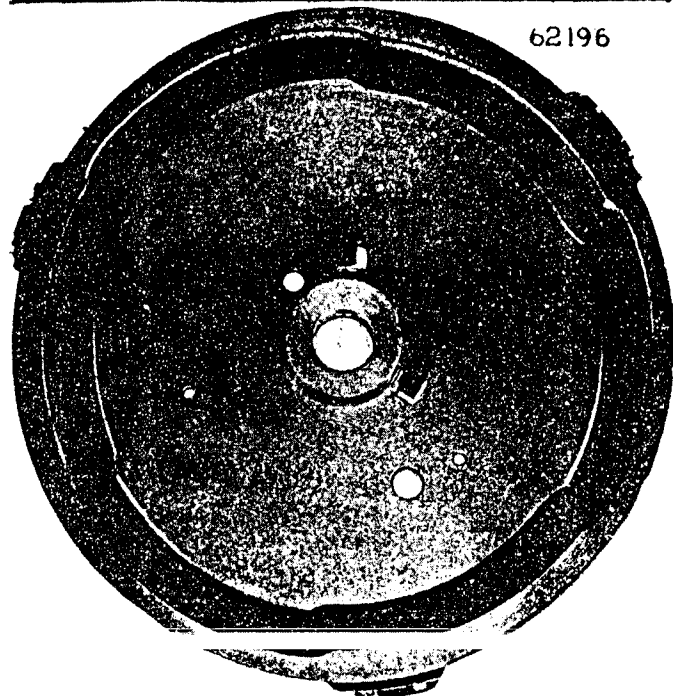

62195

120117



PLATE 7015—FULL SIZE

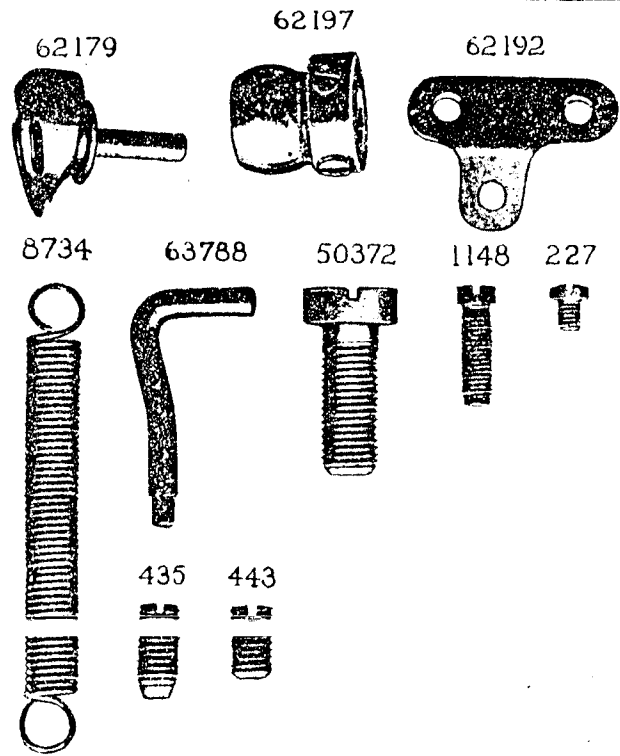


PLATE 7016—FULL SIZE

